


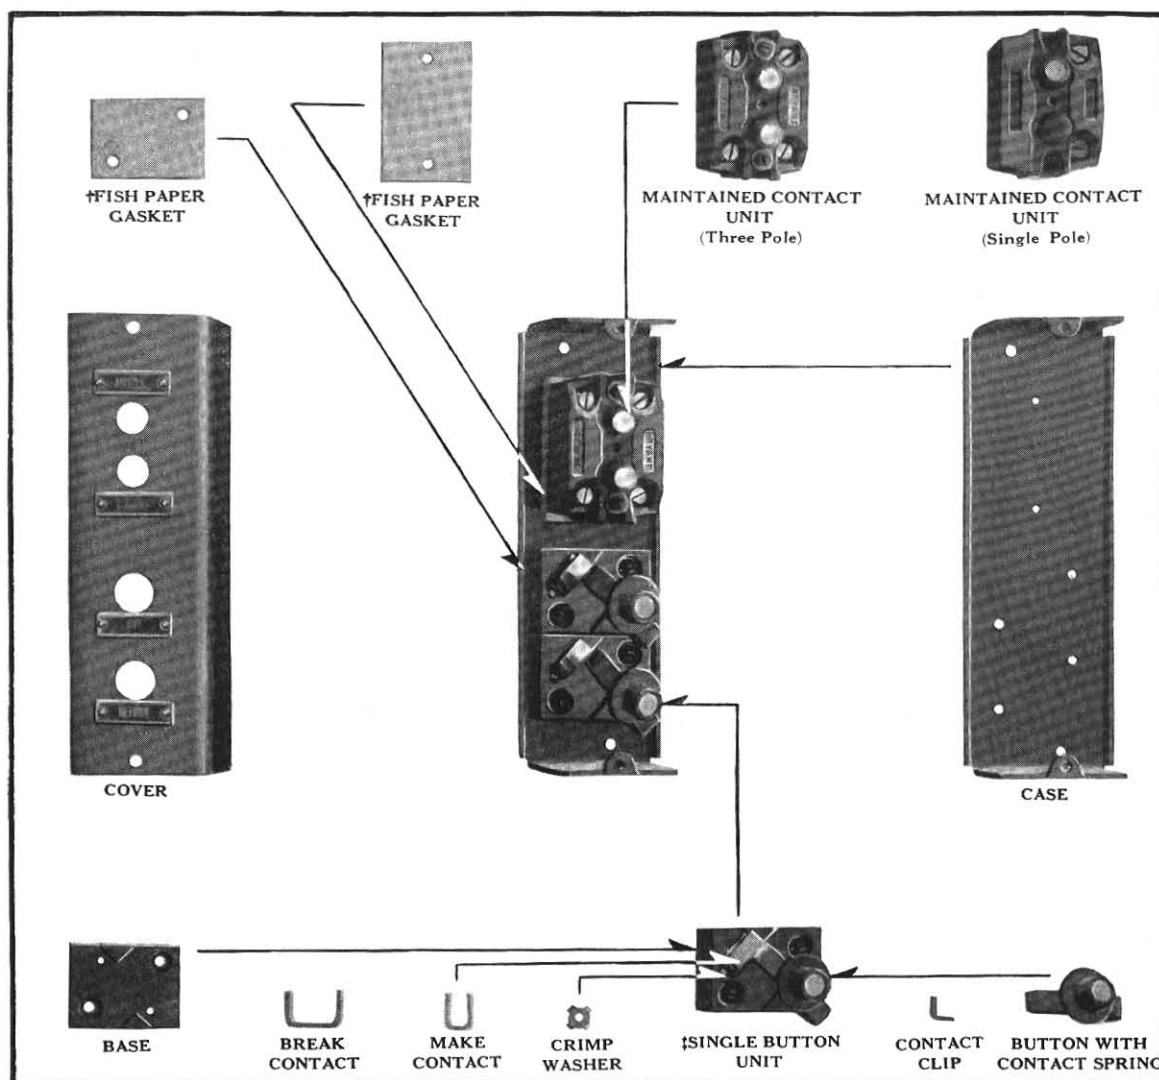

Color of Button	White	White	Red	Yellow	Yellow	Green	Green	No. Per Unit	Units in Use	
									1	5
Description of Part	Style Number of Part								Recommended for Stock	
Single Button Unit.....	297 196	474 118	297 201	297 198*	319 576	297 199	474 119	1	0	0
Single Button Unit.....				297 202△				1	0	0
Button with Contact Spring.....	1 240 101	1 240 101	1 240 102	1 240 103	1 240 103	1 240 104	1 240 104	1	1	2
Stationary Contact—Make.....	297 159	597 721	...	297 159	597 721	297 159	597 721	1	1	2
Stationary Contact—Break.....	...	297 158	297 158	297 158	297 158	...	297 158	1	1	2
Contact Clip.....	297 160	297 160	297 160	297 160	297 160	297 160	297 160	1	0	0
Fish Paper Gasket.....	297 161	297 161	297 161	297 161	297 161	297 161	297 161	1	0	0
Base.....	297 162	686 372	297 162	297 162	686 372	297 162	686 372	1	0	0

* Used only on button unit S#297198.

[△] Used only on button unit S#297202.

Parts indented are included in the part under which they are indented.

ORDERING INSTRUCTIONS

Name the part and give its style number. Give the complete name plate reading. State whether shipment is desired by express, freight or by parcel post. Send all orders or correspondence to nearest sales office of the company. Small orders should be combined so as to amount to a value of at least \$1.00 net. Where the total of the sale is less than this, the material will be invoiced at \$1.00.

Westinghouse Electric & Manufacturing Company

East Pittsburgh Works

Printed in U.S.A. (Rep. 12-41)

East Pittsburgh, Pa.

JUNE, 1941

WESTINGHOUSE INDUSTRIAL MOTORS AND CONTROLLERS

PAGE 1

TYPE CA PUSH BUTTON STATION

Type CA Push Button Station Renewal Parts

Complete Push Button Style No.	Button Color	Button Unit Style No. See Page 2	Name Plate Marking	Complete Push Button Style No.	Button Color	Button Unit Style No. See Page 2	Name Plate Marking
Single Button							
297 206	White	297 196	Start				
297 207	Red	297 201	Stop				
319 431	White	297 196	Reset				
Two Button				Four Button			
297 210, A	Pearl Black	319 872	Start Stop	297 204	White Yellow Green Red	297 196 297 198 297 199 297 201	Start Fast Slow Stop
297 211	White Red	297 196 297 201	Start Stop	297 217, A	Pearl Black Yellow Red	319 872 297 198 297 201	Run Safe Inch Stop
297 212	White Green	297 196 297 199	Up Down	297 218, A, B	Pearl Pearl Yellow Green	319 873 297 198 297 199	Master Pendant Cut Return
297 213	White Green	297 196 297 199	In Out	430 866, A, B	Pearl Pearl Yellow Green	319 873 297 198 297 199	Automatic Push Button Increase Decrease
297 214	White Green	297 196 297 199	Open Close	466 323, A	Pearl Black White Red	319 872 297 196 297 201	Run Inch Start Stop
297 215	White Green	474 118 474 119	Forward Reverse	474 121	Yellow White Green Red	319 576 474 118 474 119 297 201	Inch Forward Reverse Stop
297 216	White Green	297 196 297 199	Fast Slow				
474 120	White Red	474 118 297 201	Start Stop				
Three Button				Five Button			
297 208	White Yellow Red	297 196 297 198 297 201	Forward Reverse Stop	297 219, A	Pearl Black Yellow Green Red	319 872 297 198 297 199 297 201	Run Safe Fast Slow Stop
297 209	White Yellow Red	297 196 297 202 297 201	Start Slow Stop	460 542, A	Pearl Black Yellow Green Red	319 872 297 198 297 199 297 201	Run Inch Forward Reverse Stop
319 432	White Yellow Red	297 196 319 576 297 201	Start Inch Stop				
356 117	White Yellow Red	297 196 319 576 297 201	Start Off Stop				
472 727	White Yellow Red	474 118 319 576 297 201	Forward Reverse Stop				

For Renewal Parts, Order Complete Unit.