


TYPE KT ACCELERATING RELAYS

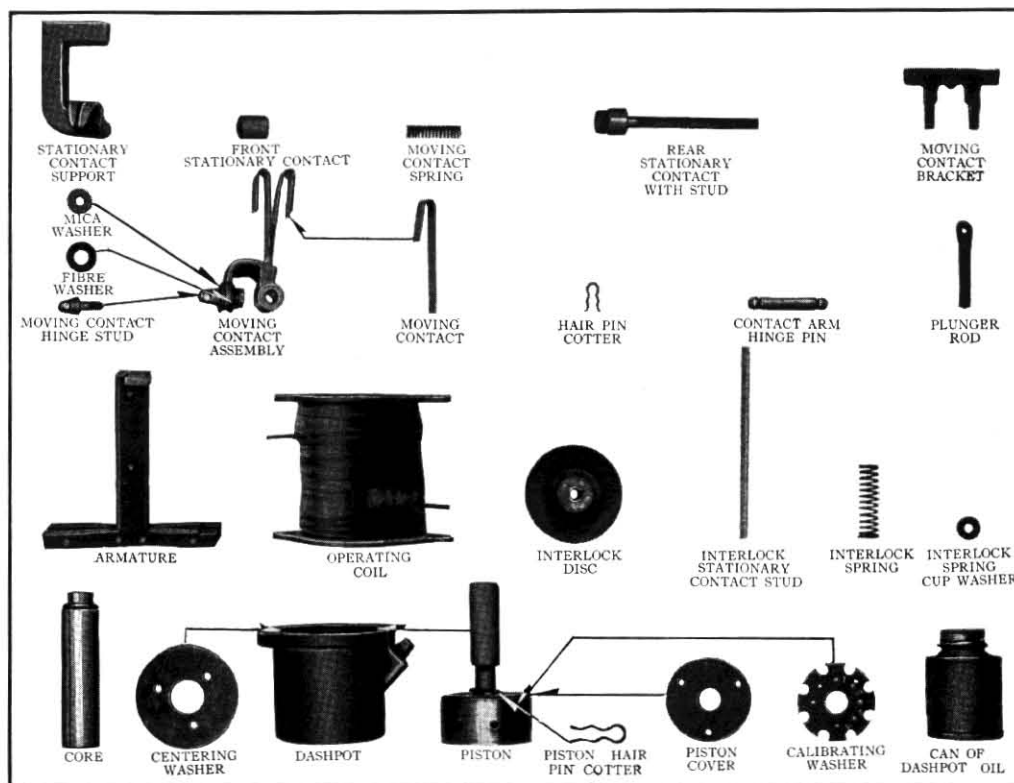

ORDERING INSTRUCTIONS

Name the part and give its style number. Give the complete name-plate reading. State whether shipment is desired by express, freight or by parcel post. Send all orders or correspondence to nearest sales office of the Company. Small orders should be combined so as to amount to at least two dollars, as order handling and shipping expenses prevent us from billing a smaller amount.

Style Number of Relay.....	217964	217968, A	366273, A 412859, to C	404569 x362348 A, B	412856, A x412857, A, B x412858 to C	442444, A, B 460896 A, B	442484, to C 460895 to C	No. PER RE- LAY
DESCRIPTION OF PART	STYLE NUMBER OF PART							
Moving Contact Assembly.....	217 955°	217 955°	366 770	366 770	366 770	366 770	366 770	1
Moving Contact.....	205 904°	205 904°	368 155	368 155	368 155	368 155	368 155	2
Moving Contact Hinge Stud.....	246 166	246 166	246 166	246 166	246 166	246 166	246 166	1
Micarta Bushing.....	493 267	493 267	493 267	493 267	493 267	493 267	493 267	1
Micarta Washer.....	203 358	203 358	203 358	203 358	203 358	203 358	203 358	2
Shunt.....	217 956	217 956	370 593	370 593	370 593	370 593	370 593	1
Moving Contact Spring.....	217 956	217 956	217 956	217 956	217 956	217 956	217 956	1
Contact Arm Hinge Pin.....	662 203	662 203	662 203	662 203	662 203	662 203	662 203	1
Plunger Rod.....	217 947	217 947	217 947	217 947	217 947	217 947	217 947	1
Rear Stationary Contact with Stud	705 233	705 233	705 233	705 233	705 233	705 233	705 233	1
Stationary Contact Support with	205 902	205 902	205 902	205 902	205 902	205 902	205 902	1
Contact.....	199 169	199 169	199 169	199 169	199 169	199 169	199 169	1
Stationary Contact Support.....	205 903	205 903	205 903	205 903	205 903	205 903	205 903	1
Front Stationary Contact.....	205 906	205 906	205 906	205 906	205 906	205 906	205 906	1
Moving Contact Bracket.....	217 946	217 946	217 946	217 946	217 946	217 946	217 946	1
Armature.....	217 945	217 945	217 945	217 945	217 945	480 018	480 018	1
Stationary Core.....	246 176	246 176	246 176	246 176	246 176	246 176	246 176	1
Dashpot Expander Spring.....	246 173	246 173	246 173	246 173	246 173	246 173	246 173	1
Dashpot Piston Spring.....	223 311	223 311	223 311	223 311	223 311	223 311	223 311	1
Dashpot Spring Guide.....	436 933	436 933	436 933	436 933	436 933	436 933	436 933	1
Dashpot Piston Leather.....	329 942	329 942	329 942	329 942	329 942	329 942	329 942	1
Dashpot Piston.....	476 252	476 252	476 252	476 252	476 252	476 252	476 252	1
Dashpot.....	476 246	476 246	476 246	476 246	476 246	476 246	476 246	1
Calibrating Washer.....	476 250	476 250	476 250	476 250	476 250	476 250	476 250	1
Piston Cover.....	460 281	460 281	460 281	460 281	460 281	460 281	460 281	1
Dashpot Oil in Can.....	205 857	205 857	205 857	205 857	205 857	205 857	205 857	1
Interlock—Moving Contact.....	202 921	202 921	202 921	202 921	202 921	202 921	202 921	1
Interlock—Moving Contact Spring	705 233	705 233	705 233	705 233	705 233	705 233	705 233	1
Interlock—Stationary Contact.....	662 202	662 202	662 202	662 202	662 202	662 202	662 202	1
Interlock Hinge Pin.....	402 983	402 983	402 983	402 983	402 983	402 983	402 983	1
Interlock Disc.....	234 677	234 677	234 677	234 677	234 677	234 677	234 677	1
Interlock Spring.....	177 352	177 352	177 352	177 352	177 352	177 352	177 352	2
Interlock Spring Cup Washer.....	394 840	394 840	394 840	394 840	394 840	394 840	394 840	2
Interlock Stationary Contact Stud	406 915	406 915	406 915	406 915	406 915	406 915	406 915	1
Interlock (RPD #24-405).....	†	†	†	†	†	†	†	1
Operating Coil.....	†	†	†	†	†	†	†	1

° Not illustrated

Parts indented are included in the part under which they are indented.

x Style No. 362348 and 412858 are relays without dashpot and with interlock.

* Style No. 412857 is relay without interlock and with dashpot.

† When ordering specify identification number stamped on coil.

Westinghouse Electric Corporation

Buffalo, N. Y.