

Explanation of symbols used in the function diagrams

Setting parameters

ParName Parameter text
 Min ... Max [Dim] Minimum ... Maximum value [Unit]
 PNumber.C/D [3] (Default) Parameter number.Command/Drive data set [Number indexes] (Default)

Monitoring parameters

ParName [Dim] Parameter text [Unit]
 PNumber.C/D [3] Parameter number.Command/Drive data set [Number indexes]

BICO parameters

Binector input (Setting parameter)

ParName [Dim] Parameter text [Unit]
 PNum.C/D Parameter number
 (Default)

Binector output (Monitoring parameter)

ParName Parameter text
 PNum Parameter number

Connector input (Setting parameter)

ParName Parameter text
 PNum.C/D [3] Parameter number [Number indexes]
 (Default)

Connector output (Monitoring parameter)

ParName [Hz] Parameter text [Unit]
 PNum [3] Parameter number [Number indexes]

Connector/Binector output (Monitoring parameter)

ParName Parameter text
 PNum Parameter number

 Summation

 Multiplication

 Division

 Switch

 Selection switch (1 out of 4)

 ON delay

 OFF delay

 ON and OFF delay

 AND gate


 OR gate

 NOT gate


 NOT gate

 A/D converter


 D/A converter

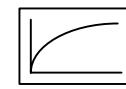


Filter element

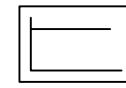


Gain element

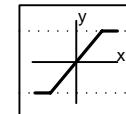


Integrator

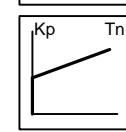


PI controller

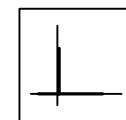


Differentiator

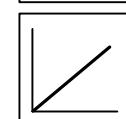

Limitation

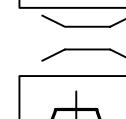

Characteristic

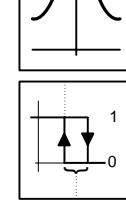

Hysteresis

1

2

3

4

5

6

7

8

0010_Symbols.vsd

Function diagram

- 10 -