


24 V DC to the next device

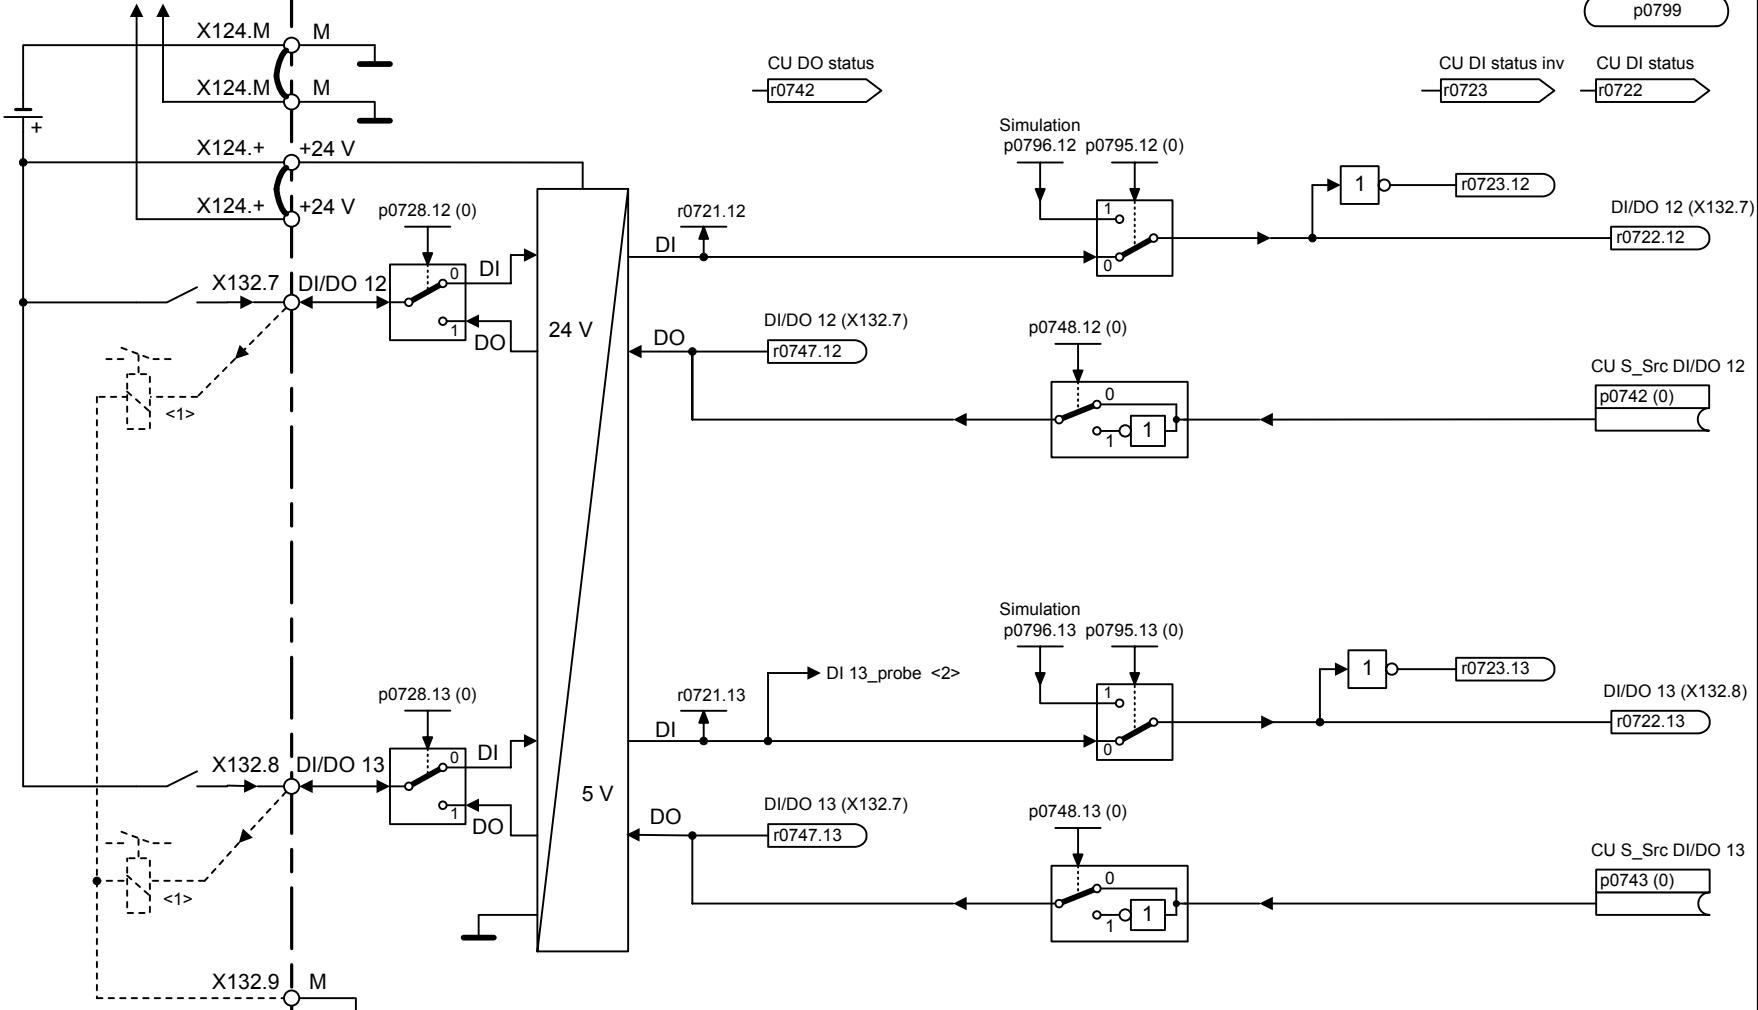

<1> The connection shown as a dashed line applies when used as digital output (p0728.x = 1).

<2> For SERVO and VECTOR, the following applies: Can be used as fast measuring probe inputs (refer to [4735], [4740]).

1 2 3 4 5 6 7 8

DO: CU_GL, CU_GM, CU_S

fp_2132_51_eng.vsd

Function diagram

- 2132 -

CU320 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13)

20.02.07 V02.05.00

SINAMICS