



<1> The connection shown as dotted line
is valid when used as digital inputs
(p0728.x = 1).

<2> For a SERVO drive object, the following applies: Can be used
as fast measuring probe inputs (see [4735], [4740]).

1	2	3	4	5	6	7	8
DO: CU_1					fp_2150_51_eng.vsd	Function diagram	
D445 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)					19.05.06 V02.05.00	SINAMICS	- 2150 -