



<1> The connection shown as dotted line is valid when used as digital output (p0728.x = 1).

<2> For a SERVO drive object, the following applies: can be used as fast measuring probe inputs (see [4735], [4740]).

1	2	3	4	5	6	7	8
DO: CU_I					fp_2151_51_eng.vsd	Function diagram	
D445 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)					19.05.06 v02.05.00	SINAMICS	
- 2151 -							