



<1> The drive object CU\_LINK only exists for automation systems with integrated SINAMICS functionality (e.g. SIMOTION D, SINUMERIK NCU) and the corresponding expansion components (e.g. CX32, NX10).  
The master functionality is available on the automation system, the slave functionality is available on the expansion components.

1	2	3	4	5	6	7	8
DO: CU_LINK, CU_CX32						fp_2211_51_eng.vsd	Function diagram
CU_LINK - Data transfer						01.12.06 V02.05.00	SINAMICS