

PD Telegram select
p0922 (999)

Refer to [1020.7]

- <1> Depending on the drive object, only specific telegrams can be used.
- <2> If p0922 = 999 is changed to another value, the telegram is automatically assigned as specified in [2420] - [2423].
If p0922 ≠ 999 is changed to p0922 = 999, the "old" telegram assignment is maintained as specified in [2420] - [2423]!
- <3> Freely interconnectable (pre-setting: MELD_NAMUR).
- <4> The maximum number of PZD words depends on the drive object type.

00: SERVO, VECTOR

fp_2420_01_eng.vsd

Function diagram

17.04.07	V02.05.00
----------	-----------

SINAMICS S
