


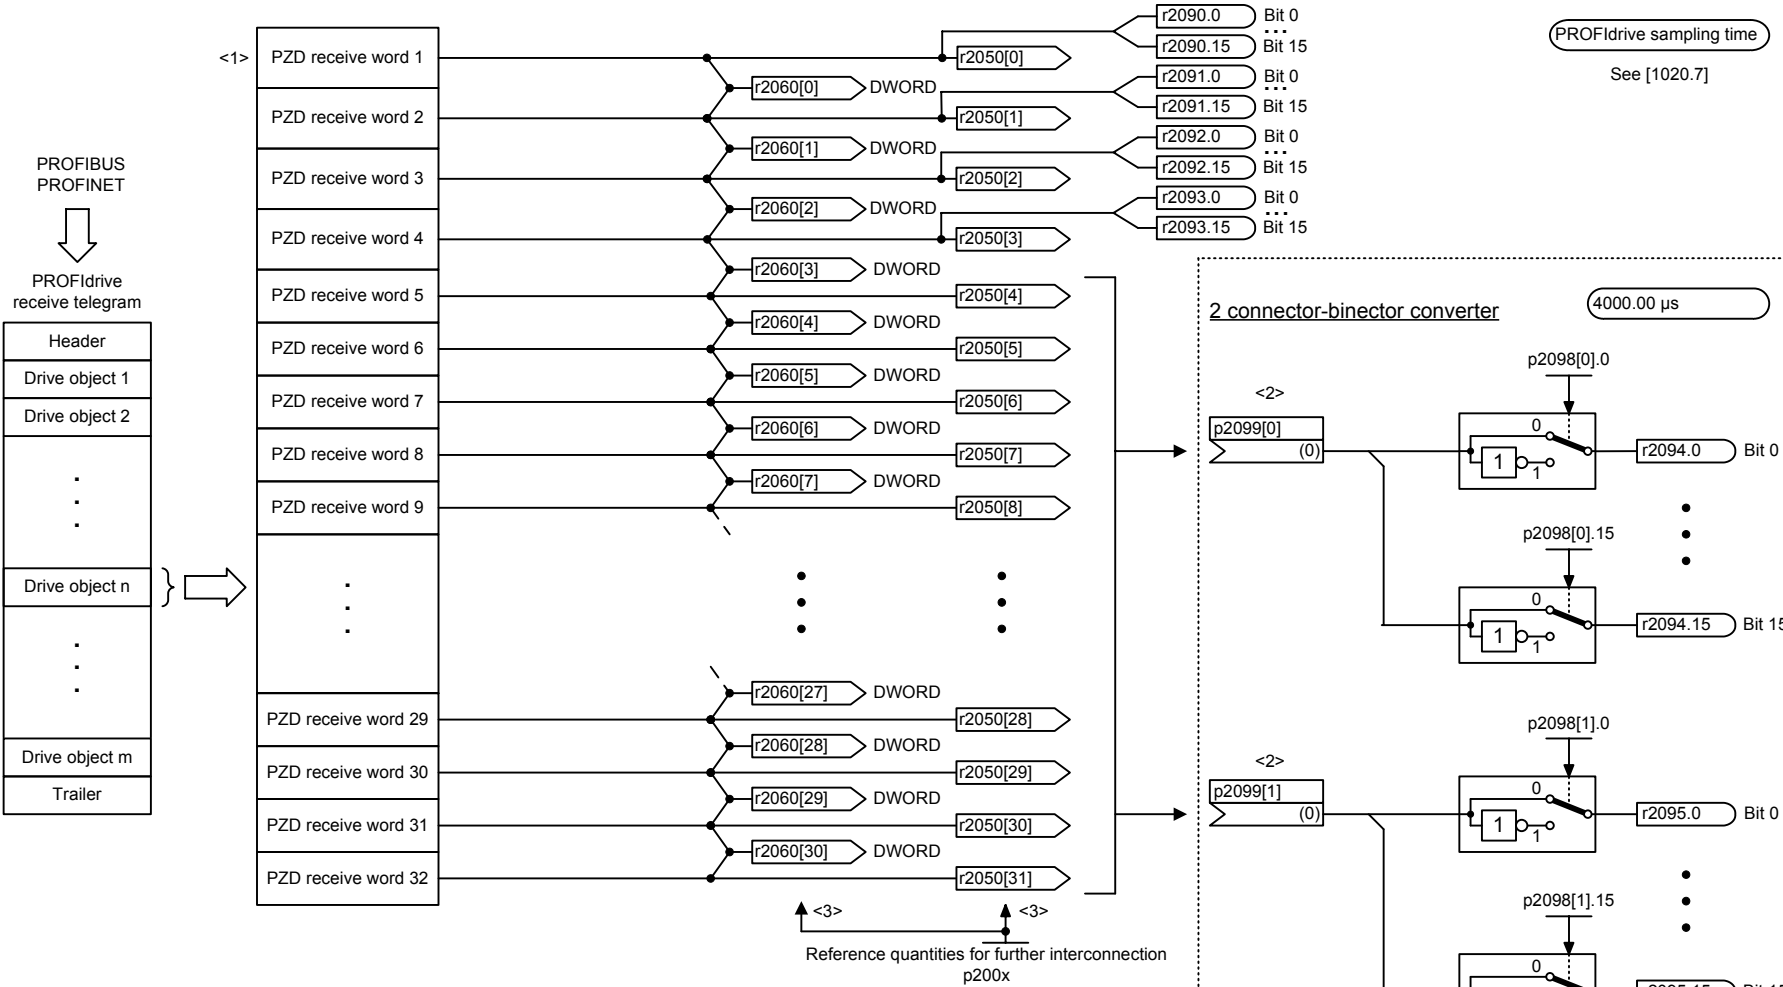

<1> In order to maintain the PROFIdrive profile, receive word 1 must be used as control word (STW1) (due to bit 10 "control requested").

<2> Using the connector-binector converters, the bits can be extracted from two of the PZD receive words 5 to 16 and used as binectors.

<3> The following representation applies for words: 4000 hex = 100 %.

The reference variables p200x apply for the ongoing interconnection (100 % -> p200x).

The following applies for temperature values: 100° C -> 100 % = 4000 hex; 0° C -> 0 %.

The following applies for the electrical angle: 90° C -> 100 % = 4000 hex; 0° C -> 0 %.