
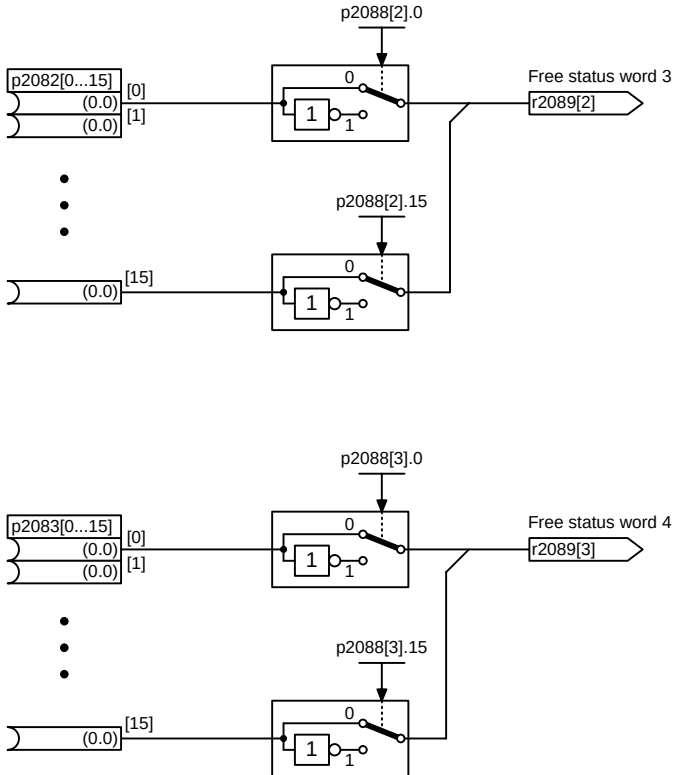


4 binector-connector converter

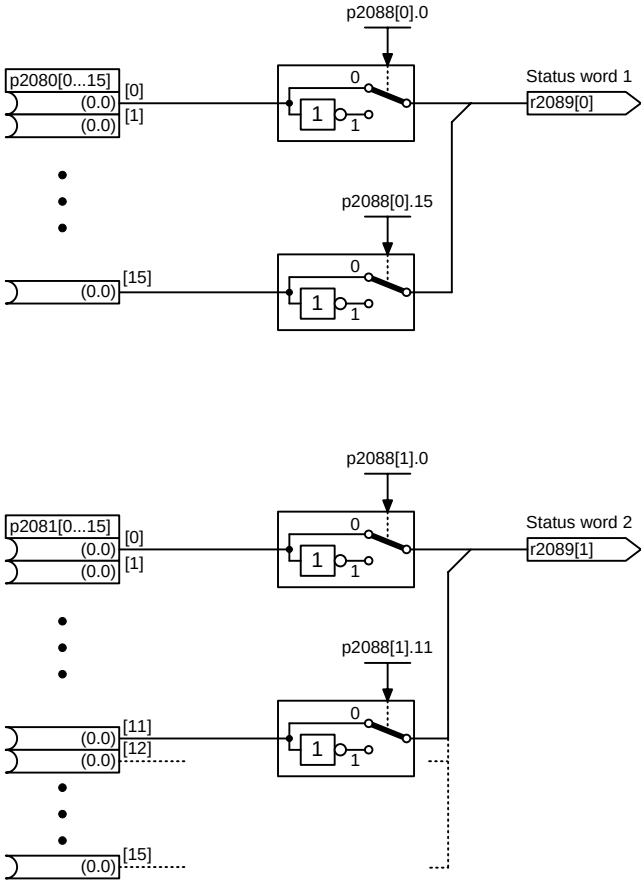

<1> For clock-cycle synchronous SERVO, these signals must not be interconnected (slave sign-of-life).

1	2	3	4	5	6	7	8
DO: A_INF, CU_S, SERVO, TB30, TM31, VECTOR					fp_2472_01_eng.vsd	Function diagram	- 2472 -
PROFIdrive - Status words, free interconnection					16.05.07 V02.05.00	SINAMICS S	