



<1> In order to maintain the PROFdrive profile, send word 1 must be used as status word 1 (ZSW1) for A_INFEED.

<2> Using the binector/connector converters at [2472], bits of 4 send words can be interconnected with any binectors.

<3> The following representation applies for words: 4000 hex = 100 %.

The reference variables p200x apply for the ongoing interconnection (100 % -> p200x).

The following applies for temperature values: 100° C -> 100 % = 4000 hex; 0° C -> 0 %.

The following applies for the electrical angle: 90° -> 100 % = 4000 hex; 0° -> 0 %.

<4> Valid for CU_S.

<5> Valid for A_INF, B_INF, S_INF.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_S, S_INF, TB30, TM15DI_DO, TM31					fp_2483_01_eng.vsd	Function diagram	
PROFdrive - Send telegram, free interconnection via BICO (p0922 = 999)					21.02.07 V02.05.00	SINAMICS S	
							- 2483 -