

ZSW closed-loop control

<1> Only for V/f control.
<2> Not for SERVO.