

Missing enable signals that prevent the drive going into operation (this situation can be detected at the ZSW sequence control r0899.2 = 1 [2503]).

