

Missing enable signals that prevent drives from going into operation (can be identified at ZSW sequence control r0899.2 = 1 [2503]).

