



Change safety parameters

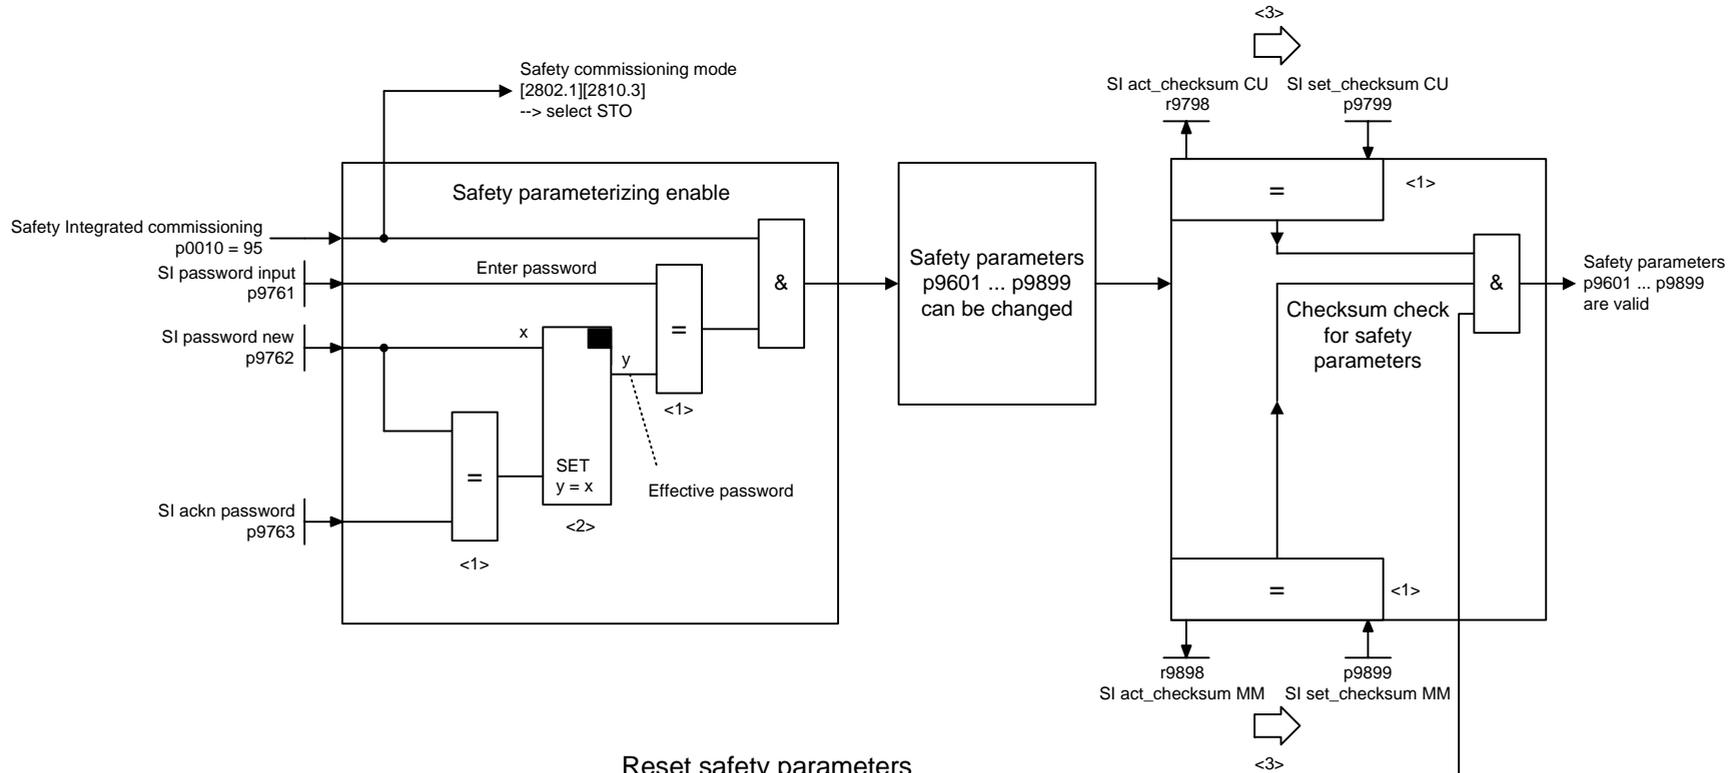

Reset safety parameters

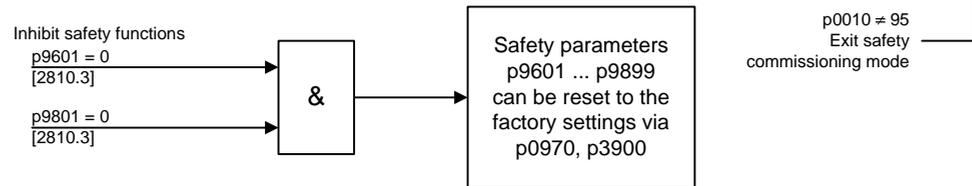

<1> Comparator, refer to [1021]

<2> Analog signal memory, refer to [1021]

<3> The target checksum must be equal to the actual checksum.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2800_01_eng.vsd	Function diagram	
Safety Integrated - Basic Functions, Parameter manager					16.05.07 V02.05.00	SINAMICS S	
- 2800 -							