


**Instructions for
Type DS
Low Voltage
Metal-Enclosed Switchgear**



Westinghouse Electric Corporation

Switchgear Division, East Pittsburgh, Pa. 15112

I.B. 32-690 Effective December, 1969

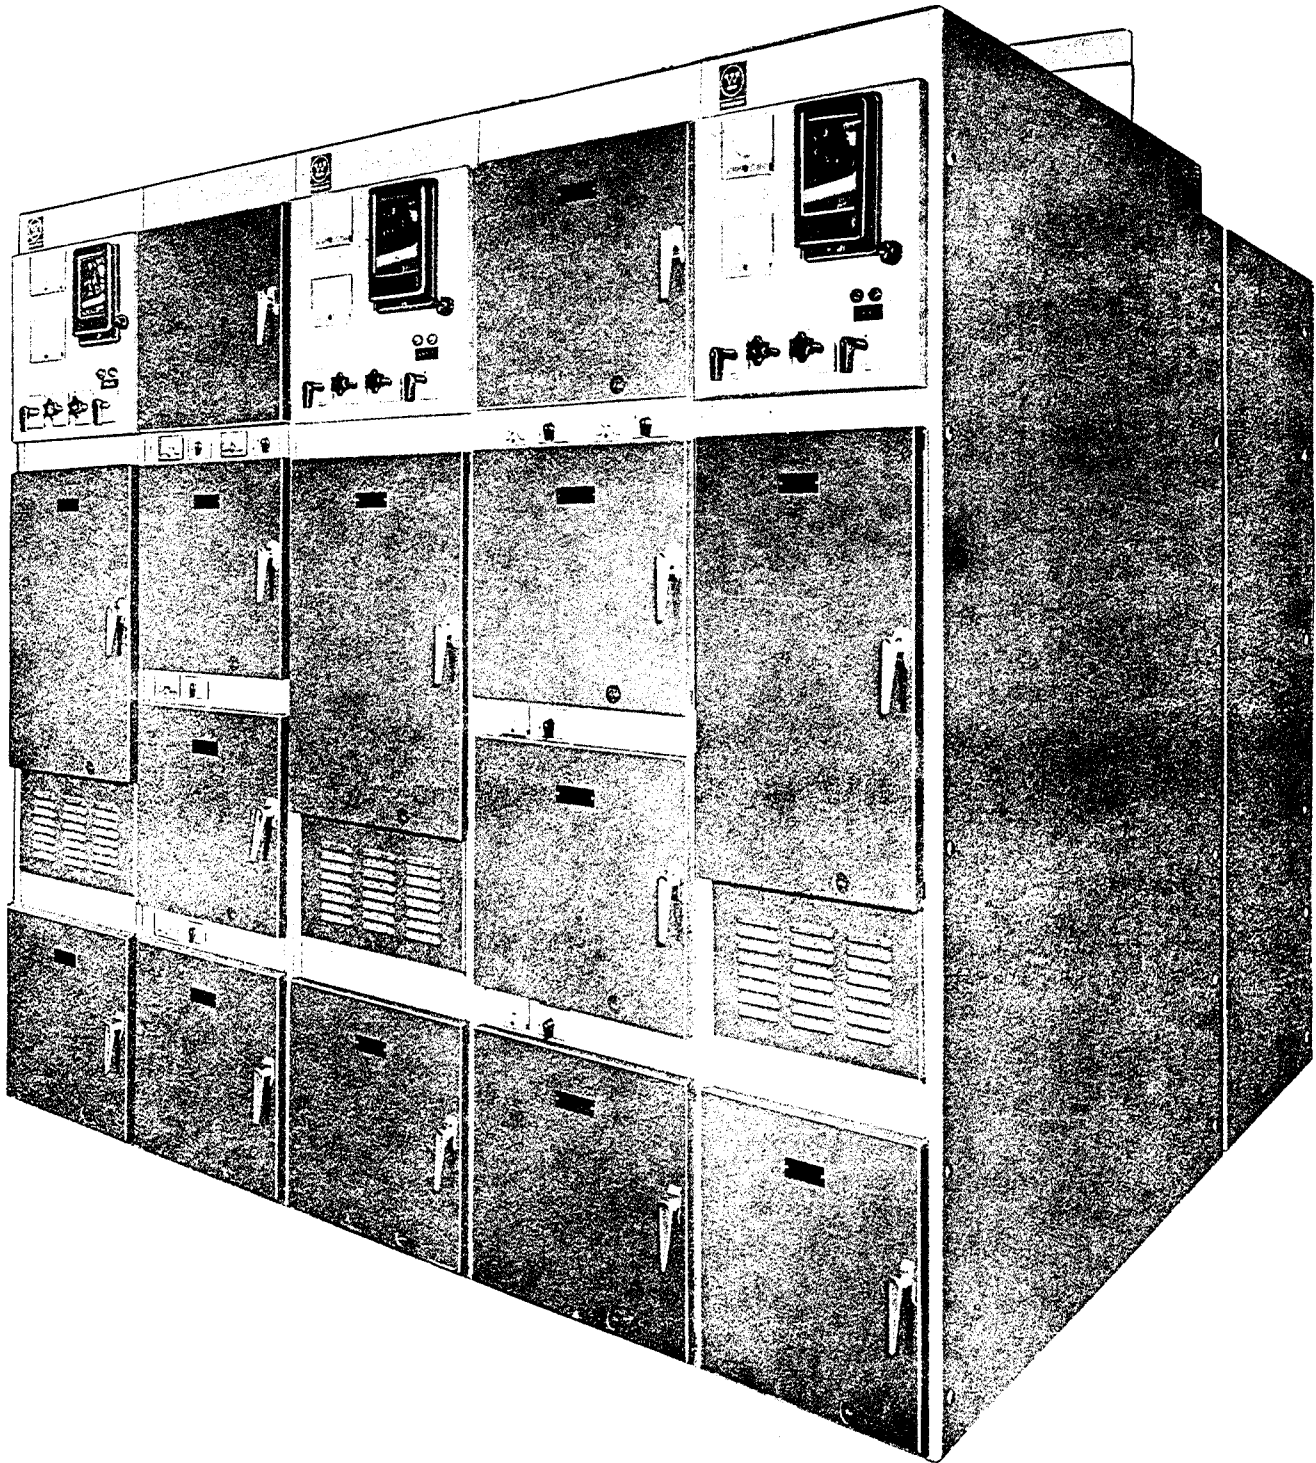

Frontispiece

Table of Contents

Description	Page
Introduction	2
Description	2
Indoor Construction	3
Front Enclosure	3
Bus Compartment	3
Feeder Cable and Bus Duct Compartment	3
Ground Bus	3
Indoor Ventilation	3
Current Transformers	3
Receiving, Handling and Storage	4
General	4
Receiving	4
Indoor Handling	4
Indoor Storing	5
Installation	5
Prior to Installation	5
Location	5
Foundation	5
Floor Steel	5
Conduits	6
Shipping Skids	6
Shipping Braces	6
Assembly of Shipping Groups	7
Bus Connections	7
Copper Ground Bus	8
Barriers	8
Main Power Connections	8
Ground Bus Connections	8
Control Connections	8
Breaker Rating Interlock	9
Key Interlocks	9
Moving Parts	10
Testing and Inspection	10
Pre-Operation Checks	10
Drawout Element	10
Inspection and Maintenance	10
Inspection and Maintenance Schedule	10
Individual Devices	10
Overall Installation	11
Lubrication	12
Renewal Parts	12

List of Illustrations

Figure	Title	Page
	Frontispiece	ii
1	Indoor Metal Enclosed Units Front View	13
2	Indoor Metal Enclosed Units Rear View	13
3	Rear View with Covers Removed	13
4	Side View	14
5	Side View 600/1600 Amp Unit with Welded Aluminum Bus	15
6	Bus and Insulation Details 600/1600 Amp Aluminum	16
7	Side View 3200 Amp Unit with Welded Aluminum Bus Risers Arranged as a Bus Tie Unit	17
8	Type DS206/DS416 Breaker in Compartment - Connected Position	18
9	Breaker Withdrawn onto Extended Rails	18
10	DS532 Breaker in Connected Position	18
11	600/1600 Amp Compartment Ready to Receive Breaker	18
12	3200 Amp Compartment	19
13	1600 Amp Welded Aluminum Bus	19
14	Closeup of 1600 Amp Aluminum Bus	20
15	3200 Amp Welded Aluminum Bus	21
16	1600 Amp Bolted Copper Bus	22
17	Shipping Brace Relocated to Form Jack Support	22
18	Location of Pry Slots at Unit Front	22
19	Standard Floor Plan	23
20	Anchor Bolt Detail	24
21	Removal of Skid from Shipping Group	24
22	Typical Shipping Arrangement	25
23	Partial Side View of Type DS Breaker with Shipping Details	25
24	Tie Bolt Locations for Joining Units at Shipping Break	26
25	Field Assembly of Joints in 1600 Amp Aluminum Horizontal Bus	27
26	Field Assembly of Joints in 3200 Amp Aluminum Horizontal Bus	27
27	Field Assembly of Joints in 1600 Amp Copper Horizontal Bus	28
28	Field Assembly of Joints in 3200 Amp Copper Bus	28
29	Field Assembly of Splice in Ground Bus	29
30	Breaker Interference Interlock	29

List of Tables

1	Metering Accuracies	4
2	Weights of Typical Units	9
3	Bolt Tightness for Steel and Bus Connections	9

IMPORTANT

Low voltage metal-enclosed switchgear is strongly built and provided with many safety features. Nevertheless, it controls power circuits with high fault capacity which are dangerous. The list of recommended *PRECAUTIONS* should be studied and followed during handling, installation, and operation of the equipment.

1. Only authorized personnel should be permitted to handle or operate the switchgear.
2. Handle all switchgear (even if crated) with extreme care as it contains delicate instruments and relays which may be damaged by rough handling.
3. When uncrating switchgear, exercise care not to scratch or mar the panel finish.
4. If any relays are included, remove blocking of relay armatures. Check control circuits (except potential and current transformer circuits) for grounds and short circuits before applying control power (Refer to "Testing and Inspection" page 10).
5. Connect the switchgear to the station ground before applying any power.
6. Do not work with "live" parts. If it is necessary to work on a circuit in the rear cable compartment, the main bus should be de-energized and all other circuits checked for feedback from other sources. If this is not possible, only the rear covers for the compartment involved should be removed and all parts covered with adequate insulating material.
7. In case of fire do not use liquid fire extinguishers until all circuits have been made electrically "dead."
8. An ounce of prevention is worth a pound of cure. All personnel responsible for supervision and operation should be familiar with the switchgear and its functions. In time of emergency there is seldom time to consult the instruction material.
9. CAUTION. If outdoor switchgear is to be stored prior to installation, provision must be made for energizing the space heaters to control condensation of moisture inside the switchgear.
10. CAUTION. If indoor switchgear is to be stored prior to installation, it must be protected from the weather and be kept free of condensation.

INTRODUCTION

Metal-enclosed switchgear with type DS drawout air circuit breakers controls and protects power circuits up to 600 volts. The switchgear assembly is composed of units that are arranged to suit the Customer's requirements. Each unit is divided into three or four compartments containing the type DS drawout air circuit breaker. An instrument compartment may be included that will contain potential transformers, instruments, meters, relays and secondary control devices. The rear of the unit will include busses and space for the main cables.

The metal-enclosed switchgear is designed, manufactured, and tested in accordance with industry standards. It is available for both indoor and outdoor installations. A typical indoor assembly is shown in Fig. 1. The type DS air circuit breaker is shown and described in I.B. 33-790-1.

This instruction book has been prepared to familiarize the Purchaser's engineering, installation, and operating staffs with the metal-enclosed switchgear supplied by Westinghouse. Personnel responsible for supervision, operation or maintenance should become well acquainted with the appearance and characteristics of each piece of equipment contained in or mounted on the switchgear.

Proper installation, operation, and maintenance are necessary to assure continued satisfactory service from the equipment. It should not be installed in places where it will be called upon to operate at voltages, currents, or fault capacities greater than those for which it was designed.

The following descriptions apply to standard metal-enclosed construction and wiring. Extra features and special control schemes are often incorporated when specified by the Purchaser's order. These special features are evident on the drawing and diagrams for the switchgear assembly. Instructions on standard apparatus such as relays, instruments, control switches, and circuit breakers are included elsewhere in the complete instruction book for a particular metal-enclosed assembly.

DESCRIPTION

Low voltage (600 volts or below) indoor and outdoor metal-enclosed switchgear having drawout mounted type DS air circuit breakers is factory assembled and tested. It is designed to require a minimum amount of labor for installation. Shipments are made with the lineup completely assembled, or may be divided into one or more shipping groups, to suit the handling facilities at the point of installation.

The switchgear consists of the fixed part or stationary structure that includes one or more free standing units mechanically and electrically joined to make a single coordinated installation. Each unit is divided into three or four compartments which contain the drawout-type air circuit breakers called the removable elements. See Figs. 8, 9 and 10. If desired, the top or two top compartments may be used for auxiliary equipment, in which case the air circuit breaker and its associated parts are omitted. The hinged door then becomes available for mounting instruments, meters, relays, or other auxiliary control equipment. This is shown in the upper left compartment in Fig. 1.

The breaker compartment provides for three positions of the removable element, namely; "connected," "test," and "disconnected."

In the "connected" position, both the primary and secondary disconnecting devices are engaged, and the circuit breaker is ready for operation. See compartment "B" Fig. 5. In the "test" position, only the secondary disconnecting devices are engaged, and the circuit breaker can be operated without energizing the power circuit. See compartment "C" Fig. 5. In the "disconnected" position, both the primary and secondary disconnecting devices are disengaged, and the entire circuit breaker is isolated. See compartment "D" Fig. 5. The compartment door may be closed and latched with the removable element in any one of the above positions.

The breakers are provided with finger clusters that engage the stationary main contact stabs at the rear of the compartment when in the connected position. Secondary disconnecting contacts connect the control circuits when in the test and connected positions. The positive interlock on the levering-in device insures proper operating sequence, and this is described in detail in the air circuit breaker Instruction Book.

Many installations will have the lineup close-coupled to the main power transformer to form a power center. These may be single-ended with only one power transformer, or double-ended with a power transformer on both ends. If the transformer is of the liquid filled type, it will be necessary to have an auxiliary compartment to contain the transition bus.

Type DS metal-enclosed switchgear is available for both indoor and outdoor applications. The circuit breakers and design features are similar whether the installation be indoor or outdoor. In general, outdoor metal-enclosed switchgear is constructed by assembling a weatherproof enclosure onto and around standard indoor housings.

Indoor Construction

Figure 5 is a section drawing of a typical four-compartment unit with 1600 ampere welded aluminum bus. This particular arrangement includes an instrument compartment in the top or "A" position, and three feeder breakers in the "B, C, and D" compartments. The units are also divided into three sections front to rear.

Front Enclosure

As previously described this contains the removable elements. The main portion is formed from heavy gauge sheet steel and welded with members across the top and bottom to provide a rigid enclosure. Figures 11 and 12 are close-ups of compartments with breakers removed. Between the four compartments are three bolted-in channels that may be blank or may be used for mounting instruments and transfer switches. The compartment door employs a piano type hinge to insure rigidity. The bolted-in cradle supports the wheels of the removable element, and includes the stationary ground contact and trip linkage.

A molded glass polyester plate at the rear of the compartment supports the six stationary disconnecting contacts as well as three metering current transformers, if required.

Secondary control disconnecting contacts when required are located on the rear wall above the stationary primary contacts and provide the control circuits to the drawout unit.

Bus Compartment

The bus compartment, located between the front breaker enclosure and the rear cable compartment, contains the horizontal main bus that ties the units together electrically and the vertical bus that feeds the individual breaker compartments. It also includes all supporting insulators. The bus compartment is available in different depths depending upon bus rating.

Feeder Cable and Bus Duct Compartment

The cable and terminal compartment is located behind the bus compartment and provides adequate room for easy cable installation. Copper bars extend the load side of the stationary disconnecting contacts into the cable compartment. See Fig. 3. Standard NEMA drilling is provided on the silverplated ends for the outgoing cables for exit through either the top or bottom of the units. The drilling will accommodate either single or multiple terminals on

each phase. On higher current installations, bus duct may be connected to the copper bars.

On four wire systems, an insulated neutral bus approximately 44 inches above the floor extends the length of the line-up and includes a tap for the outgoing neutral cable in each unit. See Fig. 13. A link to the ground bus may be furnished as optional equipment in one of the units for grounded four wire systems. Provision is made to locate a current transformer in this grounding connection if desired.

Ground Bus

CAUTION

A permanent low resistance ground is essential for adequate protection.

The ground bus consists of a .25 inch x 2 inch copper bus bar bolted to the rear frames of the units near the floor, and extending the length of the group. A clamp type terminal accommodating a cable range of 4/0 to 500 MCM is included for connection to the station ground. Where the line-up is split into several shipping groups, a splice plate and hardware will be furnished to bridge the shipping break at installation.

Indoor Ventilation

The front hinged doors have slots in the bottom flange to allow ventilating air to enter each compartment. The air passes upward at the sides of the breaker support cradles and is exhausted through the grillwork in the top compartment roof. A drip pan immediately below the grill prevents any foreign material from reaching the equipment.

The bus and cable compartments are ventilated by means of air entering the grillwork at the bottom of the bolted rear sheets. This leaves through a grill in the bus compartment roof and grill openings near the top of the rear sheets.

Current Transformers

When required for metering, ring-type current transformers are positioned around the stationary main contacts as shown in Fig. 11. Each is held in place by two bolts to the molded glass polyester main contact support plate. These may be used to feed a small ammeter and transfer switch located on the fixed instrument panel

between compartments or a meter on the hinged instrument compartment door. The metering accuracies are given in the following table:

TABLE 1 METERING ACCURACIES

Ratio	Accuracy Classification	
	B0.1 *	B0.2 *
100-5	1.2	-
150-5	1.2	-
200-5	1.2	1.2
300-5	0.6	0.6
400-5	0.6	0.6
600-5	0.6	0.6
800-5	0.3	0.3
1200-5	0.3	0.3
1600-5	0.3	0.3
2000-5	0.3	0.3
2500-5	0.3	0.3
3000-5	0.3	0.3
4000-5	0.3	0.3

* At 60 Hz Standard Burden

RECEIVING, HANDLING AND STORAGE

General

Type DS metal-enclosed switchgear is shipped assembled in one group or several groups, depending upon the size of the order and the handling facilities at the installation site. Indoor shipping groups are bolted to wooden skids and enclosed in a covering to protect them from the weather. Each crate or box is plainly marked with an identification number, the General Order number, and the shipping weight. A list of the contents of each is included in the shipping papers. All units are given commercial tests at the factory, after which they are carefully inspected and prepared for shipment by personnel experienced in the proper handling of electrical equipment.

Receiving

When the switchgear reaches its destination, the Purchaser should check the material actually received against the shipping list to be sure that all parts have been received. This should be done prior to discarding the packing material to avoid the loss of small parts. If damage is found or suspected, file claims as soon as possible with the transportation company and notify the nearest repre-

sentative of the Westinghouse Electric Corporation. If the switchgear is to be installed as soon as received, it is recommended that the unpacking and handling be done as outlined in the paragraphs that follow. If the switchgear is to be stored or held for some time it is advisable to unpack sufficiently to check the shipment for completeness and condition; then reseal packing for protection until installation.

Indoor Handling

For ease of handling by a crane, each shipping group is equipped with a lifting bar extending the length of the group. The bar has two 2 inch diameter holes to accept the crane hooks. On long lineups, a suitable spreader should be used with the crane sling to prevent any horizontal compressive load on the lifting bar. The bar is located at approximately the center of gravity, but variations in equipment may cause a slight tilt either forward or backward. The lifting bar may be removed and discarded after installation is complete.

Indoor switchgear shipping groups are provided with a dual purpose jack support and shipping brace at each end of the group when shipped by rail (not included for truck shipments). During shipment they are used for cross bracing to the freight car. During installation they can be removed and bolted in the lower set of tie bolt holes (as shown in Fig. 17) to make a handy jack support for removing skids and lowering the group to the floor. When the switchgear is not shipped by rail, a simple jack support can be fabricated by the purchaser from angle iron or wooden timbers.

It is preferable to lift the groups into position by a crane. However, if a crane is not available, they can be skidded into place on rollers placed under the shipping skid. Timbers must be placed between the switchgear and the rollers to protect the units from damage. Jacks may be placed under the jack support of the first group. However, in moving in subsequent groups, the jack support must be removed in order to place two groups next to one another. A method of lowering subsequent groups is the use of long wedges fabricated from 4 x 4's cut on the diagonal. With a large crow bar each corner may be lowered alternately a fraction of an inch. Two 2.0 x .50 inch slots are also provided in the front of the unit for this purpose as shown in Fig. 18.

Handle all crated or uncrated switchgear with extreme care since the drawout air circuit breakers are shipped in their compartments and the front panels may contain delicate instruments, meters, or relays which may be damaged by rough handling. When uncrating the units,

care should be exercised to avoid breakage and scratching or marring of the panel finish. Instructions for removing the shipping braces from the drawout breaker element follow. See page 6.

After the crates have been removed, both the stationary units and the drawout elements should be covered during construction period for protection against dust and dirt.

Indoor Storing

Indoor switchgear which cannot be installed and put into service immediately should be stored in a dry, clean place, preferably indoors, in a heated building. Trouble and delay will be avoided by having good storage facilities arranged so that the apparatus will be accessible only to authorized persons, and can be quickly located when required in the erection program. Conditions such as dampness, changes in temperature, cement dust, and corrosive atmosphere should be carefully guarded against. If necessary to store outdoors, special precautions will be required to keep it clean and warm enough to control condensation. It will be necessary to cover the switchgear and install temporary heating equipment. Approximately 250 watts per unit are required for average conditions. During storage the shipping groups should be placed on level surfaces to prevent unnecessary strain and possible distortion.

INSTALLATION

Prior to Installation

Proper installation of Westinghouse Type DS Low Voltage Metal Enclosed Switchgear is of prime importance. Too much emphasis cannot be placed upon this phase of the work. Study the associated instruction books and all drawings carefully. In most cases, all drawings will be sent to the Purchaser some time previous to the shipment of the gear to enable adequate advance planning. These drawings will include general assembly, front view, plan view, floor plan, schematic and connection diagrams.

Location

In locating the Type DS switchgear, consideration must be given to the aisle space required at the front and rear of the equipment as well as space at the ends of the lineup. The recommended minimum aisle space is shown on the floor plan drawing furnished with the order. Figure 19 shows a typical floor plan and a table of dimensions for the various depth units. The space at the front must be sufficient to permit the opening of doors, the insertion

and withdrawal of the breakers and their transfer to other compartments by means of the hoist. The space at the rear must be sufficient for installation of cables, inspection, and maintenance.

Foundation

Westinghouse Type DS metal-enclosed switchgear is fabricated in welding fixtures and assembled on true and level bedplates to insure ease of operation at all times. Since the tolerances and adjustments are kept to a minimum, it must be installed on a smooth level base.

Extra care by the Purchaser in laying out and preparing the foundation will result in reduced installation costs as well as good switchgear performance.

The station floor or foundation must be strong enough to support the weight of the equipment without sagging. Table 2 page 9 tabulates the approximate weights for the various ratings of indoor switchgear. Actual weights will vary depending upon the type and amount of equipment in the individual units. Adequate safety factors must be used. If the foundation is subject to vibration, special mounting must be provided to prevent the transmission of vibration or shock to the equipment.

The preferred method of anchoring the indoor switchgear is by fastening it to steel channels which are properly embedded in the concrete floor. Figure 19 shows a typical floor plan that may be used for estimating purposes. Detailed floor plans for drilling and locating this steel are supplied with each order.

Floor Steel

Anchor bolts, floor steel, and other foundation material are to be furnished by the Purchaser.

A 4 inch (5.4#/ft.) structural channel is recommended as a minimum size for the average lineup of equipment. When large power center transformers are included with high voltage switching equipment, a larger channel must be used. It is preferred that the channel be located with its web at top and horizontal.

IMPORTANT

The front and rear channels must be set level and aligned with each other and must be level over their entire length to avoid distortion of the switchgear structure. The finished floor may have a slight pitch away from the channels, but in no case should the finished floor be higher than the channels.

Each unit is fastened to the floor channels by either bolting or welding as shown in Fig. 20. If bolting is to be used, the mounting bolts must be placed in the floor steel before the concrete is poured to assure that the tapped holes will not fill with concrete. Welding is a quick and easy method of securing the switchgear in place and eliminates the layout of the mounting holes in the channels.

Conduits

Provisions must be made in the foundation for the conduits which carry the main cables, control wiring, and ground cable when such conduits enter the switchgear from below. The specific floor plan must be used for determining the final conduit layout, spacing of floor channels, and floor space required for each switchgear unit.

Encircling loops of reinforcing or building steel around single phase conductors should be avoided in the areas for main cables when these circuits are rated at 600 amperes or above.

Conduits should project above the finished floor approximately two inches for indoor switchgear. It will simplify moving the groups into place if the conduits are flush with the concrete surface and appropriate extension sleeves added after the units are in their final location. Otherwise it will be necessary to raise the units on timbers a sufficient height to clear the tops of the conduits.

Consideration should be given to installing conduits for future circuits at this time.

Shipping Skids

If possible, the shipping skid should remain on each group until it is at or near its final location. This will allow the use of pipe rollers for moving the group; and will also lessen any chance of distortion during final positioning.

Refer to Fig. 21. The front and rear wood sills of the skid are fastened to the bottom of the end units of the group by a total of four hex head steel bolts - one in each corner. The heads are located in counterbored holes. To remove the bolts, the skid must be raised a minimum of 6 inches above the floor; and a standard hex socket wrench used.

Although only one hex head bolt is used at the corner of each shipping group, four captive nuts are furnished in each unit. All must be removed prior to fastening the units to the floor steel. The two nuts at the front of the

unit are located below 1.75 inch diameter access holes in the front of the breaker support cradle in the bottom compartment. If breakers are furnished in these compartments, they must be removed as the yellow shipping brace covers the access holes. Refer to section on shipping braces following.

The rear captive nuts are located in the bottom channel of the unit rear frame. Remove the bolted rear covers for these nuts. The clips holding these captive nuts may be pried out with a screwdriver.

Shipping Braces

Before the circuit breaker element can be withdrawn from its compartment for the first time, the shipping brace must be removed from the lower part of the breaker front panel. Refer to Fig. 23. This brace is an angle, painted yellow to facilitate identification. During shipment, the front wheels of the breaker are lifted approximately 1/16 inch above the compartment rails, and the unit is held part way between disconnected and test positions by means of its levering device.

NOTE

Preliminary operation and inspection of the draw-out breaker unit are covered in detail in Instruction Book No. 33-790-1 Sections 2.0 through 4.61.

Figure 23 is a drawing showing the side view of a typical breaker in its compartment as received. Study this figure and the following steps carefully before proceeding.

NOTE

Step numbers below correspond to numbers on Figs. 22 and 23.

1. Remove the sponge rubber padding and tape from the compartment rails and the knob on the top of the spring charging handle.
2. With a screwdriver, remove the two (2) outside .25-20 pan head screws from the bottom leg of the yellow angle. Do not discard, as later they will be returned to their tapped holes. Do not remove the center screw.
3. Using the crank to operate the levering device, release the breaker from the shipping position. The crank will be shipped in a box of separate details. This procedure is covered in detail in the breaker Instruction Book No. 33-790-1, Section 2.0. When the position indicator shows the levering device to be in the disconnected position,

remove the hand crank. Pull the breaker out onto the extended rails. This will require more effort than normal as the rear wheels are jammed by two lengths of plastic tubing used for shipping only.

4. Remove the two (2) .25-20 hex head bolts holding the yellow shipping angle to the front panel of the breaker. Care must be exercised to prevent marring the front panel. Two or more flat washers are used between the angle and front panel for shipping. Discard the yellow angle.

5. Immediately replace the two hex head bolts using the lock washer and only one flat washer on each.

6. With the breaker pulled completely to the end of the rails, remove the two (2) six inch long pieces of split plastic tubing that are on the top rear of the stationary rails immediately below the hold-down hooks. This tubing is for shipping purposes only and is to be discarded.

7. If secondary disconnecting contacts are supplied, a sheet of protective paper is inserted between the stationary and moving contacts during shipment. This must be removed and discarded.

8. Push the breaker back into its compartment, and replace the two (2) .25-20 pan head screws at the front edge of the cradle.

ASSEMBLY OF SHIPPING GROUPS

When correctly installed, the units for both indoor and outdoor metal-enclosed switchgear should conform to the following requirements:

1. Front panels form a straight true line; and when transformers and/or other gear are included, the fronts should line up or form parallel lines.
2. Units correctly spaced from center to center and plumb.
3. Entire assembly of housings securely fastened to floor channels or base pad.
4. Shipping groups must be securely bolted together, and all bus and control wiring connections properly made.

A suggestion for lining up the units is to establish a base line a few inches in front of the housings and parallel to the final location. Equalize the distances from the front of the housings to the base line, thus making the face of the group parallel to the base line.

Check the plumbness of the units by dropping a plumb line from the exact center or the horizontal steel member at the top front of the unit. It should align with the center of the bottom cross channel.

After the first group has been located, the second group should be moved into position and similarly checked. The steel housings are fastened together at eleven (11) locations which are shown in Fig. 24. Special short neck .38-16 x .75 steel carriage bolts are furnished for this purpose. It will facilitate assembly to locate the bolt head in the right hand unit with the nut and washers in the left hand unit. These should be tightened to the torque as shown in Table 3 page 9.

Bus Connections

All connections of the main and neutral busses and the ground bus at shipping brakes are made by means of bolted copper splice plates. These are always silver-plated, bolted copper joints, and no field welding of aluminum is required. All necessary hardware and splice plates are included. Provision is made at the ends of the lineup not adjacent to transformers for future expansion by means of bolted joints.

The following drawings show in detail the methods employed for joining the four types of main bus.

1. 1600 Amp Aluminum Bus – Fig. 25

A single .25 x 5.0 inch copper splice plate is used at each phase. A total of six (6) .50-13 x .87 inch high strength steel bolts and “Pyramidal” lock washers are used in each plate. The heads of the bolts face toward the rear of the units. They must be tightened to the torque shown in Table 3 page 9.

2. 3200 Amp Aluminum Bus – Fig. 26

This rating employs two (2) .50 x 4.0 inch aluminum bars per phase. Each bar is joined by means of two (2) .25 x 3.0 inch copper splice plates. The splice plate that is located toward the front of the unit, or nearest to the polyester bus support, contains captive nuts while the plate toward the rear has clearance holes for .50-13 bolts. Each pair of splice plates uses four (4) .50-13 x 1.38 inch high strength steel bolts and “Pyramidal” lock washers. It will be easiest to join the bus bar that is nearest to the breaker first.

3. 1600 Amp Copper Bus – Fig. 27

A single .25 x 4.0 copper splice plate is used at each phase and carries a total of eight (8) .50-13 x 1.25 inch high

strength steel bolts and “Pyramidal” lock washers. Two steel locking plates, each with two captive nuts, are located behind the main bus.

4. 3200 Amp Copper Bus – Fig. 28

This rating employs three (3) .25 x 4.0 inch copper splice plates at each phase. With the exception of the bolts being .50-13 x 2.0 inch for the additional plates, the assembly is similar to the 1600 amp rating.

NOTE

If a neutral bus is employed, the joint is identical to the corresponding phase bus.

Copper Ground Bus – Fig. 29

The joint in the .25 x 2.0 inch copper ground bus is made by means of a single copper splice plate bolted directly to the inside of the rear steel frame.

The bolting areas of all copper items are silver-plated to provide the optimum joint. In some atmospheres the silver will become tarnished, but this does not reduce its effectiveness. However, dirt, grease, and other foreign material must be removed from the surfaces before they are joined. Clean the silver-plated contact surfaces carefully by rubbing with a clean cloth, and wipe with a cleaning solvent such as Stoddard's Solvent (or Westinghouse #55812CA).

CAUTION

This is a flammable liquid. Keep sparks and flames away. Do not breathe large quantities of vapor. Avoid excess contact with skin.

Barriers

If any of the steel barriers separating the bus and cable compartments have been removed, they should be returned to their proper locations at this time. Those barriers located between the runbacks from the feeder compartments will be fastened by means of four .38-16 hex head steel bolts and lockwashers. A few of the larger barriers may have six bolts. These should be securely tightened to the prescribed torque to prevent vibration during operation.

Main Power Connections

Low voltage metal-enclosed switchgear is usually provided with solderless cable connectors for terminating the main power cables.

Before making up the connections, the phase of each cable must be determined. Normally, switchgear is supplied with connections for phase rotation A-B-C unless otherwise required on the particular order.

When forming cables for termination within switchgear assemblies, avoid sharp turns, corners, and edges in order to prevent damage to, or weakening of, the cable insulation. The cable manufacturer's instructions should be followed closely in determining the minimum bending radii of cables. This will vary with the type and size of cable involved.

Adequate electrical and mechanical clearances must be provided between cables, conduits, and bus in this compartment. Where the cables enter the unit, they must be securely lashed and supported to withstand any short circuit forces, and to prevent any strain or load on the terminals.

Ground Bus Connections

Terminals of the solderless type are provided on the copper ground bus in one or more of the units, depending upon the number in the lineup. These are shown on the floor plan drawing, and are for the connections to the station ground which should be as direct a connection as possible, and should not be run in metal conduit. The grounding conductor should be capable of carrying the maximum line-to-ground current for the duration of the fault.

CAUTION

A permanent low resistance ground is essential for adequate protection. A poor ground may be worse than none since it gives a false feeling of safety to those working around the equipment.

Control Connections

All interunit control wires that cross a shipping break must be reconnected to their correct points on the terminal blocks provided for this purpose. These have been properly tagged at the factory and will be shown on the connection diagrams for the order.

Any control connections to remote mounted relays, control switches, instruments, etc. will be brought to a set of terminal blocks located on the rear frame of the unit.

Control wiring should be checked with the connection diagram to make certain that all connections have been properly made, all fuses installed, current transformer cir-

cuits completed, and loose connections tightened. Before applying control energy, check all control circuits, except current and potential transformer secondary circuits for grounds; and make sure that all circuits are clear.

If the control power source is other than a self-contained control power transformer, the cables from the source to the switchgear must be of adequate size to avoid excessive voltage drop during operation.

Breaker Rating Interlock

Since the type DS206 and the DS416 breaker drawout units are contained in compartments having the same dimensions for non-current carrying parts, an interference-type interlock assembly is furnished between the stationary cradle and the bottom plate of the breaker unit. This prevents interchanging breaker frame ratings. If the incorrect drawout unit is placed upon the extended rails of a compartment, it will not be possible to move it into the "disconnected position."

Figure 30 shows the positions of the interlock brackets for the two frame ratings. These brackets hold the drawout unit approximately 5.38 inches from the "connected" position.

The type DS532 does not require this interlock as its height is considerably greater than the above ratings.

Key Interlocks

Key interlocks are often supplied in conjunction with disconnecting switches, other circuit breakers, external equipment, and special compartments where access is to be denied unless the circuit in the compartment containing the interlock is withdrawn to the disconnected position. The operation of key interlock schemes is generally described by a note or keying chart on the order assembly drawings.

To facilitate manufacture and installation procedures, a key is supplied with each lock.

CAUTION

Before placing switchgear with key interlocks in operation, the key scheme must be carefully checked; and only the proper keys left in the locks. All extra keys must be removed and destroyed or stored where not available to operating personnel.

This procedure is necessary since improper use of spare keys will defeat the interlocking scheme.

TABLE 2. WEIGHTS OF TYPICAL UNITS

Unit	Weight Lbs.*
600/1600 Amp Aluminum Bus	
4 High Feeder Unit	900
3 High Feeder with Instrument Compartment	950
3200 Amp Aluminum Bus	
4 High Feeder Unit	1100
3 High Feeder with Instrument Compartment	1100
600/1600 Amp Copper Bus	
3 or 4 High Unit	1050
3200 Amp Copper Bus	
3 or 4 High Unit	1300

* Weight without drawout elements

Drawout Breaker Element

Type	Manual Operated	Power Operated
DS206	168 lbs.	175 lbs.
DS416	173 lbs.	180 lbs.
DS532	268 lbs.	275 lbs.

TABLE 3

BOLT TIGHTNESS FOR STEEL AND BUS CONNECTIONS

Bolt Material	Torque in Foot-Pounds for Bolt Diameter				
	.25-20	.31-18	.38-16	.50-13	.62-11
Heat Treated Steel	8	17	30	75	150
Silicon Bronze	5	10	15	40	55

Moving Parts

There are few moving parts in the stationary structures of metal enclosed switchgear; and in general, they do not require installation as they are factory-installed. However, it is recommended that all moving parts be carefully operated by hand (even if normally operated automatically) to assure that no binding or damage has occurred during shipment or handling. In some cases, accessories may be blocked or braced for shipment; or foreign matter may have accumulated or lodged in the equipment during long periods of storage under unfavorable conditions.

Some apparatus, such as meters and relays, must be thoroughly checked for forms of blocking or bracing which must be removed.

TESTING AND INSPECTION

Pre-Operation Checks

After the switchgear equipment and apparatus to be controlled have been installed and all interconnections made, the equipment should be tested and given a final check before being placed in service. This is necessary to assure that the equipment has been correctly installed and that all connections are complete and have been properly made.

CAUTION

Extreme care must be exercised to prevent the equipment from being connected to the power system while the preliminary tests are being conducted. If disconnecting switches are not available, line leads should be disconnected to accomplish this.

The testing equipment will depend on the size and type of installation. Portable voltmeters, of the multi-scale type if available, will be required. For large and complicated installations, ammeters should be available in case unexpected trouble develops. An ohmmeter and "megger" will prove invaluable in checking insulation and continuity of the circuits; or a simple portable device for "ringing" or "lighting-out" circuits may be substituted for the continuity check.

Wire connections, accessible bolted bus connections, and insulated joints should be examined to make sure that they have not been loosened or damaged during shipment or installation.

The connections to the equipment apart from the switchgear such as remote control and interlock circuits,

and auxiliary switches should be "lighted-out" to make sure that they are also correct. The extent to which this will have to be done depends on the thoroughness of the installation work. There must be definite assurance that connections are correct before an attempt is made to operate the equipment.

Any relays included on the hinged instrument panel have been checked at the factory and are normally set at "minimum" for shipment. The final settings of the relays should be coordinated with other parts of the system in accordance with the Purchaser's standards or operating practice. If it becomes necessary to modify these relay settings, the instruction leaflet for the relay involved should be carefully studied. These instruction leaflets show typical connection diagrams only and may not necessarily agree with the connections furnished. The schematic diagrams furnished for the order should be referred to for the actual connections.

The covers for meters, relays, and other devices which have to be removed during the course of installation and test should be carefully handled when removed. The covers should be put back in place promptly to keep dust and dirt from collecting on the vital relay parts.

Drawout Element

The testing and calibration of the Amptector on the type DS air circuit breaker can be performed with a special test set developed for this purpose. Complete instructions on its use and operation will be found in the test set.

The operation, test, and maintenance of the breaker is covered by I.B. 33-790-1.

INSPECTION AND MAINTENANCE

Inspection and Maintenance Schedule

To assure high quality service, a definite maintenance schedule, systematically followed, is essential. Plant, operating, and local conditions vary to such an extent that the schedule must be prepared to suit the conditions. However, the following general requirements should be helpful in setting up the program.

Individual Devices

The maintenance schedule for individual devices such as circuit breakers, relays, meters, etc. should be based upon recommendations contained in the individual instruction book for the device. These operations should be coordi-

nated with the overall program to result in the least operating inconvenience and circuit shutdown.

Overall Installation

The switchgear installation should be given a thorough overall maintenance check at least annually, when plant, operating, and local conditions are normal. Where conditions are abnormal, more frequent inspection and maintenance is necessary. The following items require attention:

1. Buses and Connections – De-energized primary circuits and remove rear cover from the primary compartment. Before cleaning take “megger” readings between phases and to ground. Inspect for symptoms which might indicate overheating or weakened insulation. Remove dust from buses, connections, supports, and enclosure surfaces. A vacuum cleaner with a long nozzle will be of assistance. Wipe clean with a solvent such as Stoddard’s Solvent (or Westinghouse #55812CA).

CAUTION

Keep sparks and flames away. Do not breathe large quantities of vapor. Avoid excess contact with skin.

After buses have been dusted and wiped clean, take “megger” readings again between the buses and ground and between phases. Keep a record of these readings for future reference in determining when trends occur that would indicate a lowering of the insulation resistance.

2. Main Disconnecting Contacts and Supports – Remove each breaker from its housing. De-energize all circuits and expose primary contacts and their supports. Wipe clean with a cloth moistened in Stoddard’s Solvent. (See preceding paragraph.) Inspect for abnormal wear or overheating. Discoloration of the surfaces is not harmful unless corrosion due to atmospheric conditions is severe, leaving deposits on the surface. Any deposits must be removed by rubbing with a clean cloth, or a new contact installed. Check each breaker while it is out of the housing for all items recommended in the instruction book applying to that particular type of breaker.

3. Other Disconnecting Contacts – Inspect all secondary disconnecting contacts for abnormal wear, fatigue, or overheating. Replace if necessary; otherwise treat the same as Main Disconnecting Contacts above.

4. Instruments, Relays and Other Panel Mounted Devices – Individual devices should be maintained according to the specific instructions supplied for each device.

Remove all relay covers and inspect the interiors for dust or dirt. This operation can most readily be performed by relay test personnel during periodic relay tests. Control switches, transfer switches, and instrument switches should have their contacts inspected.

5. Secondary Wiring – Check all wiring connections for tightness including those at the current and potential transformers and at the terminal blocks where circuits leave the switchgear. Make sure that all secondary wiring connections are properly connected to the switchgear ground bus where so indicated.

6. Mechanical Parts – Visually check and manually operate mechanical moving parts such as truck operated switch assemblies, the position interlock, emergency trip linkage, and hinged doors. Examine mechanical parts such as the levering-in arms, and the rail extensions.

7. Ventilation – Check all labyrinths, grillwork, and air passages for obstructions and accumulations of dirt. The air space under outdoor switchgear, which is necessary for the entrance of ventilating air, should be cleaned of leaves and other possible debris.

8. Records – The condition of each switchgear unit at the time of inspection should be listed in a permanent record to become a guide for anticipating the need for replacements or for special attention between the regular maintenance periods.

9. Abnormal Conditions – Local conditions such as high humidity, salt-laden atmosphere, corrosive gases, heavy dust, or severe circuit operating conditions, are considered to be abnormal; and will require more frequent inspections.

It should be emphasized that a series of inspections should be made at quarterly intervals until the progressive facts of the local conditions can be analyzed to determine a schedule which will maintain the equipment in satisfactory condition.

In some locations local conditions may be so bad that the frequency of maintenance will interfere with operating and production schedules. In such cases, consideration should be given to the possibility of enclosing the switchgear equipment in a relatively tight room and to supplying a sufficient quantity of clean air so as to maintain a positive pressure in the room. Under such conditions maintenance schedules may then be established on a more normal basis. Such an arrangement might also provide for cooling the air where the ambient temperature is relatively high, thus further improving operating conditions.

Lubrication

The lubrication of the drawout breaker is covered in its I.B. In general, there is nothing that will require any lubrication in the stationary housings.

The main disconnecting finger clusters and stationary contacts should be cleaned periodically but *KEPT DRY*. Vaseline or grease should *NOT* be applied to these contact surfaces as it will hold dirt and particles of plating which will cause an increase in the levering-in force required.

RENEWAL PARTS

When ordering renewal or spare parts include as much information as possible. In many cases the style number of the new part can be obtained from identification on the old part. Always include a description of the part. Specify the rating, unit number, and shop order number of the metal enclosed housing in which the part is to be used.

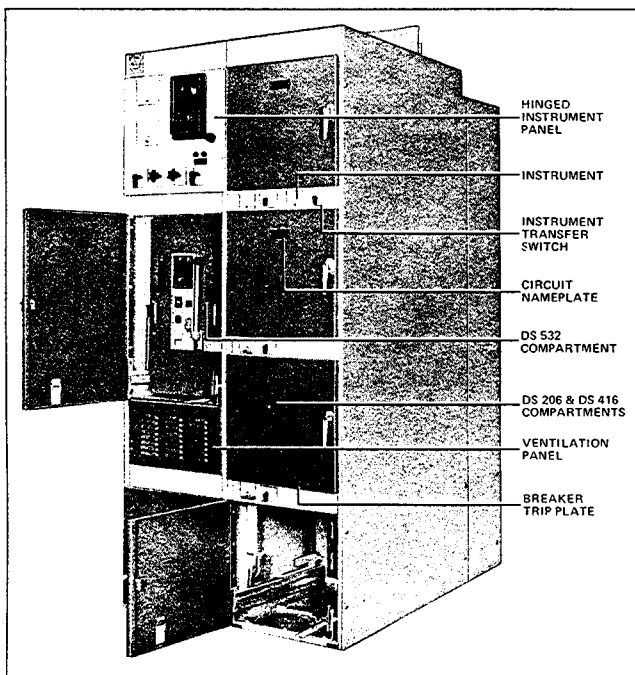


Fig. 1 Indoor Metal Enclosed Units Front View

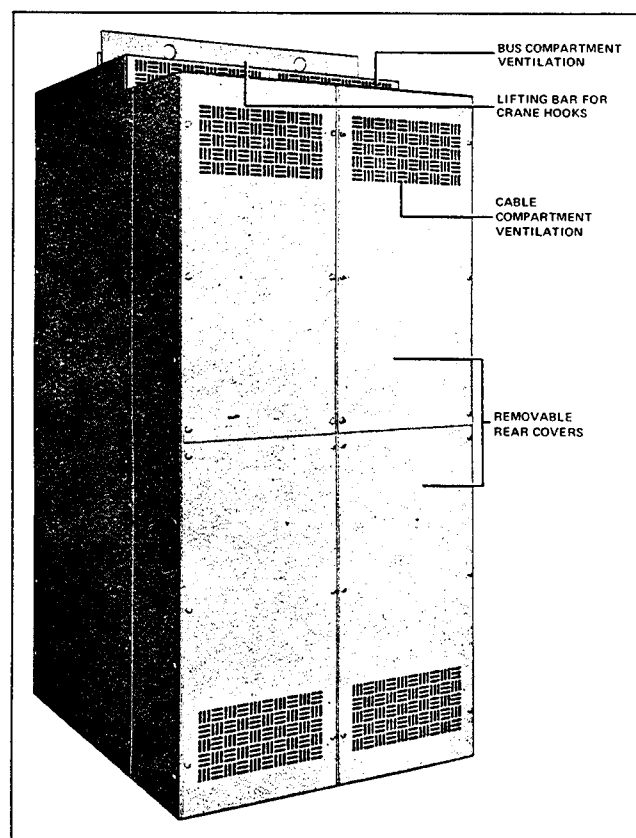


Fig. 2 Indoor Metal Enclosed Units Rear View

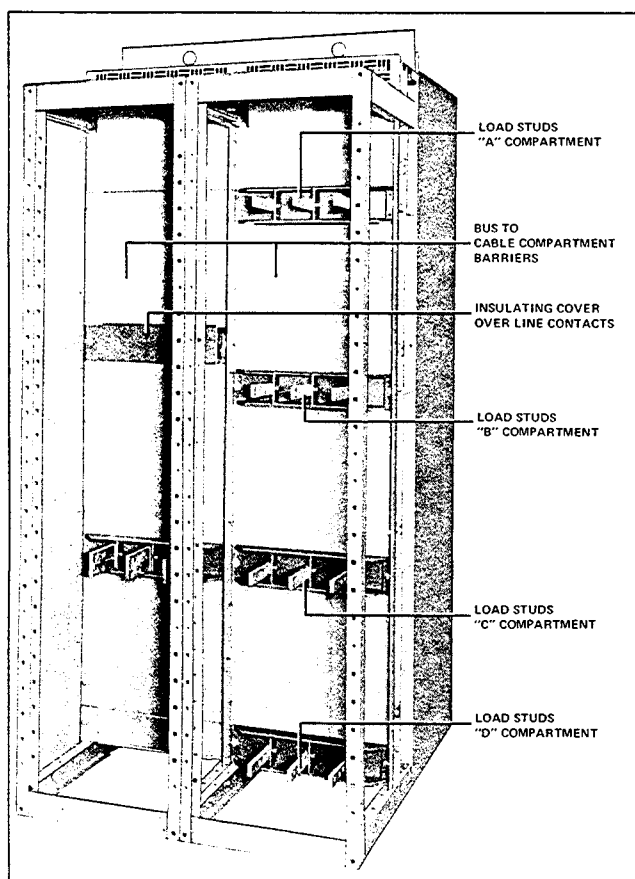


Fig. 3 Rear View with Covers Removed

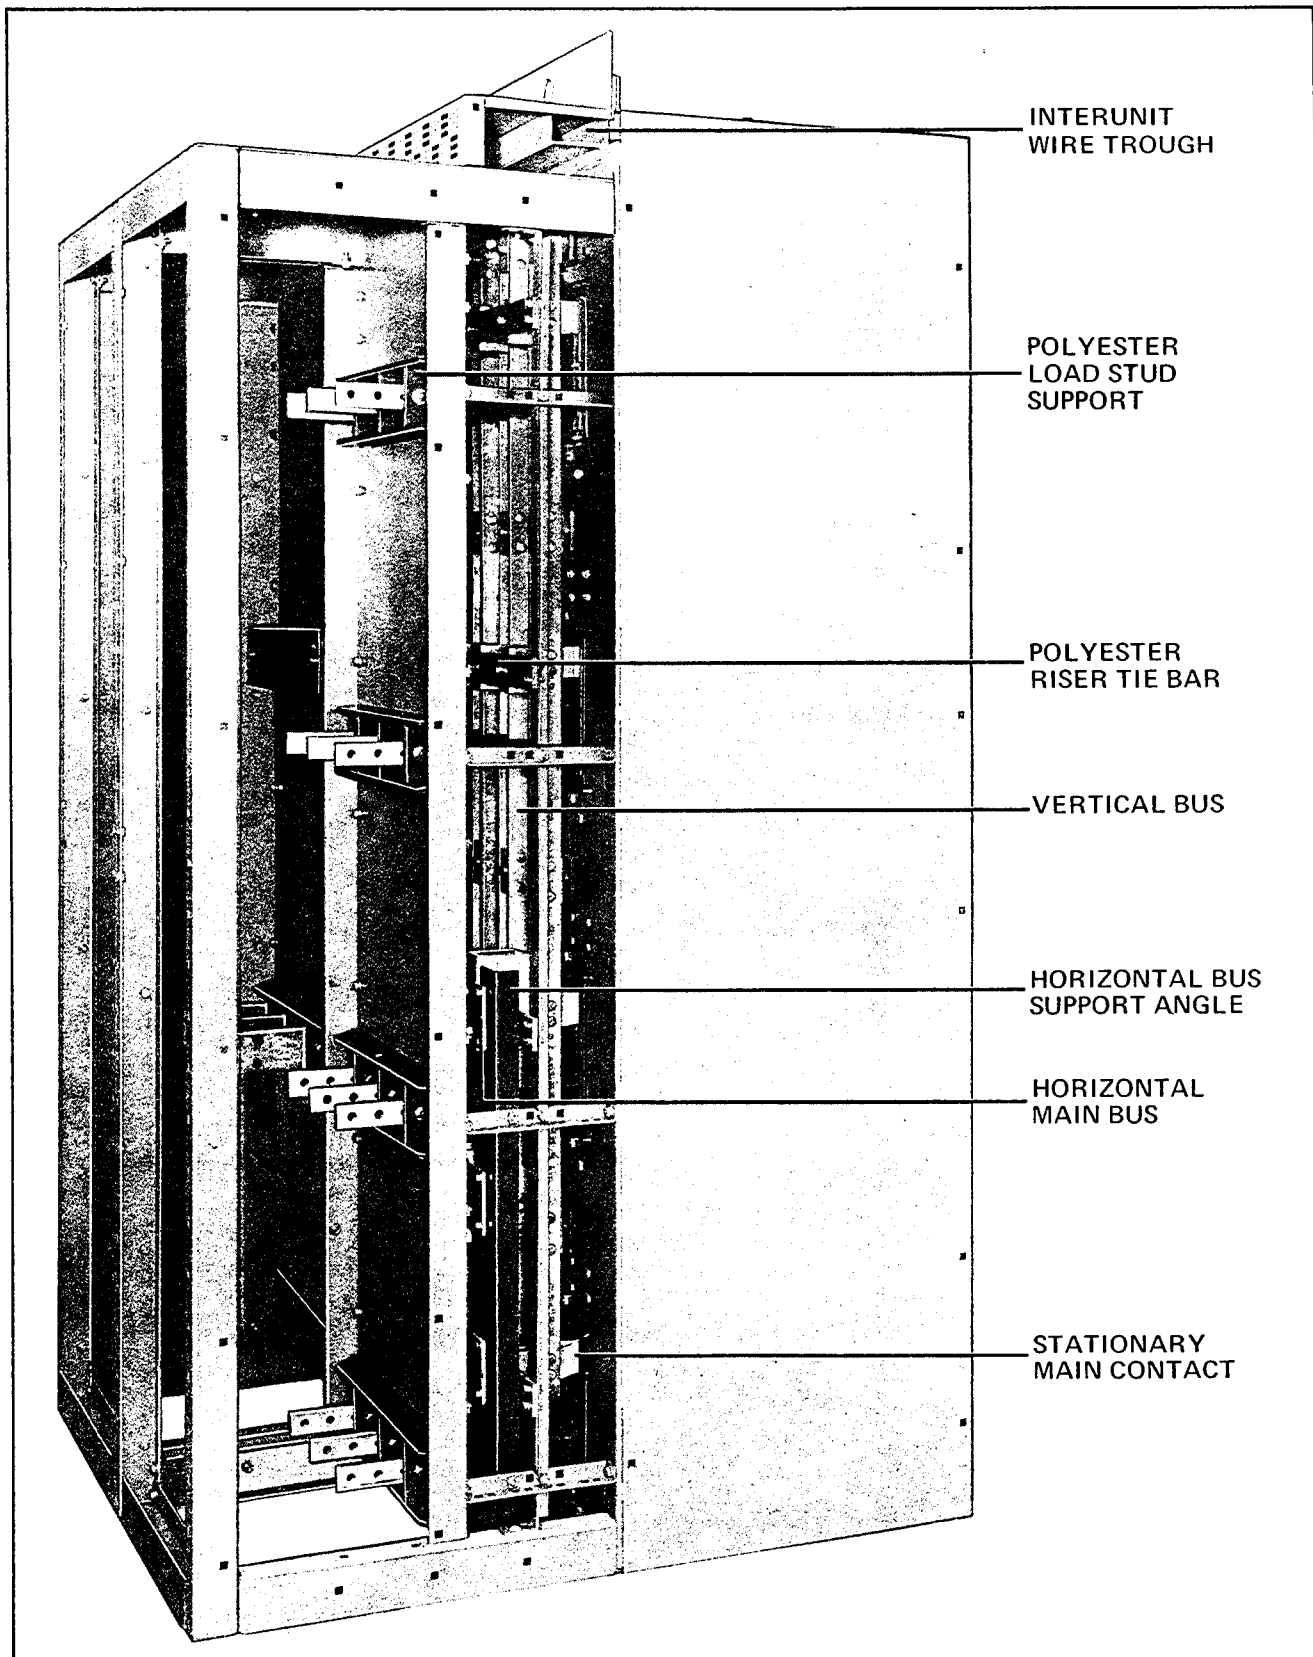


Fig. 4 Side View

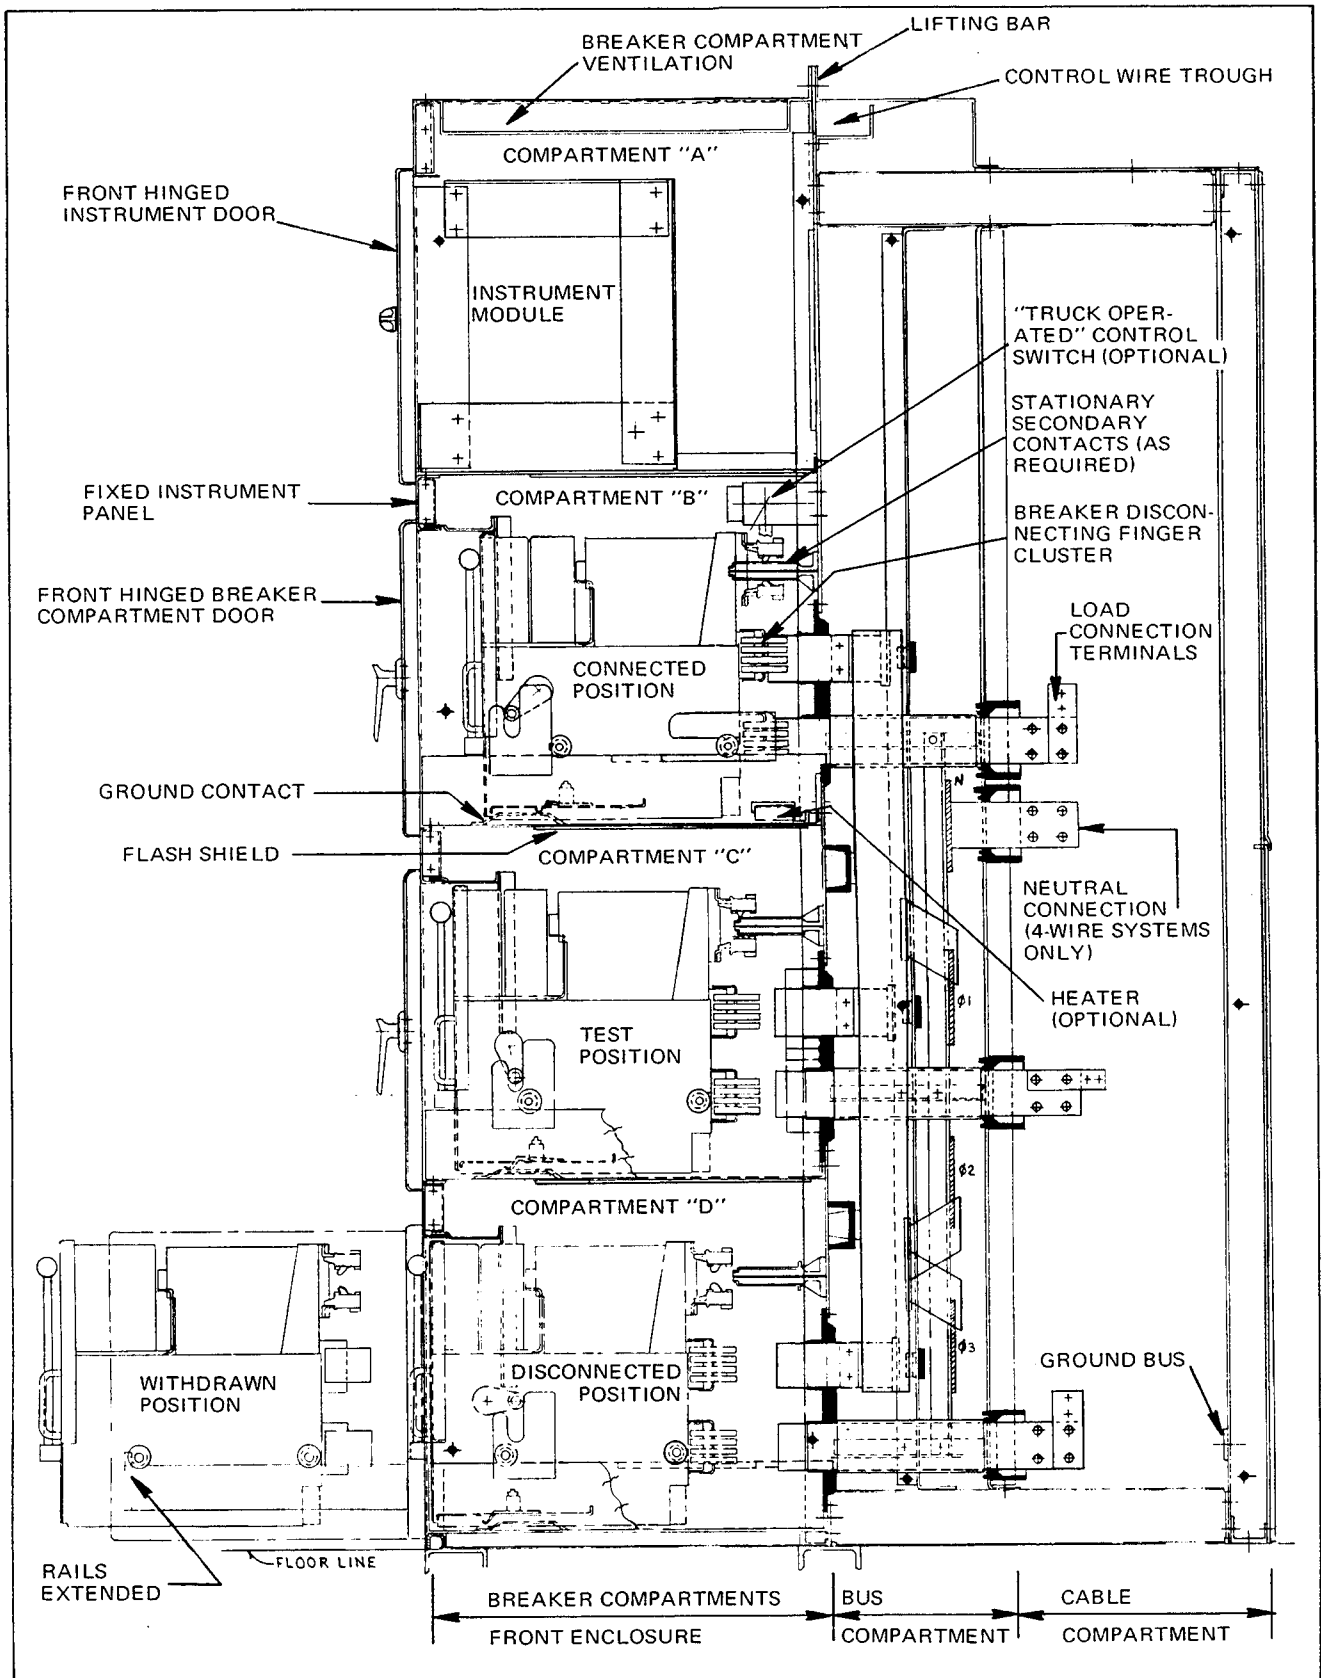


Fig. 5 Side View 600/1600 Amp Unit with Welded Aluminum Bus

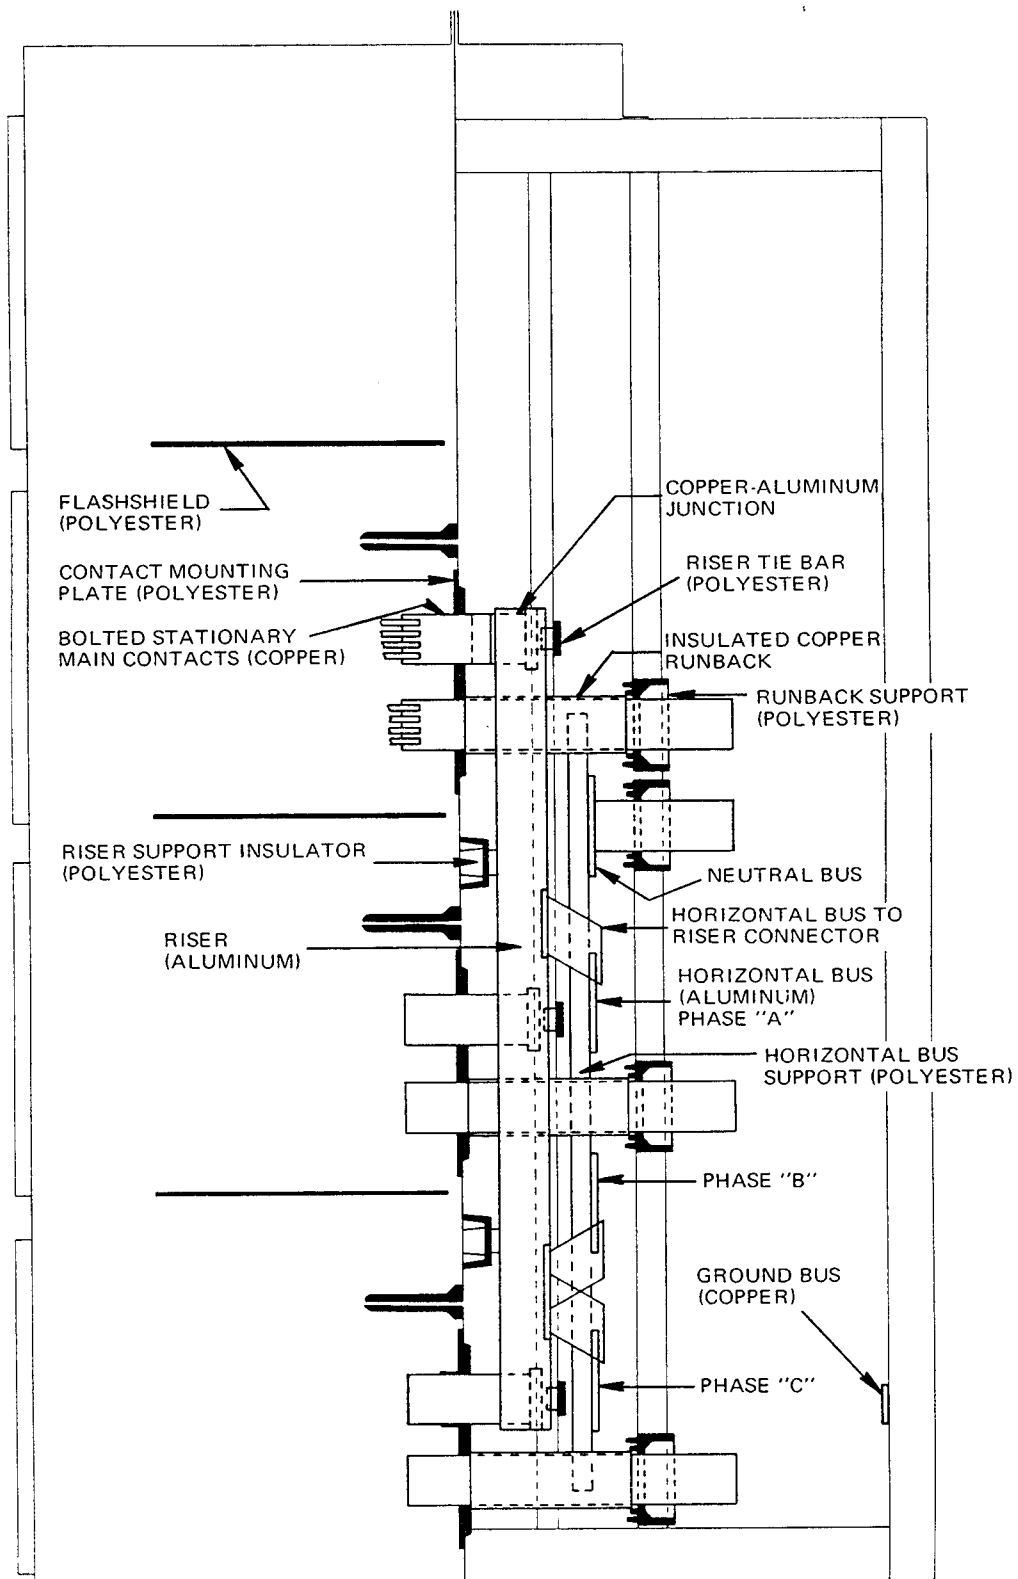


Fig. 6 Bus and Insulation Details 600/1600 Amp Aluminum

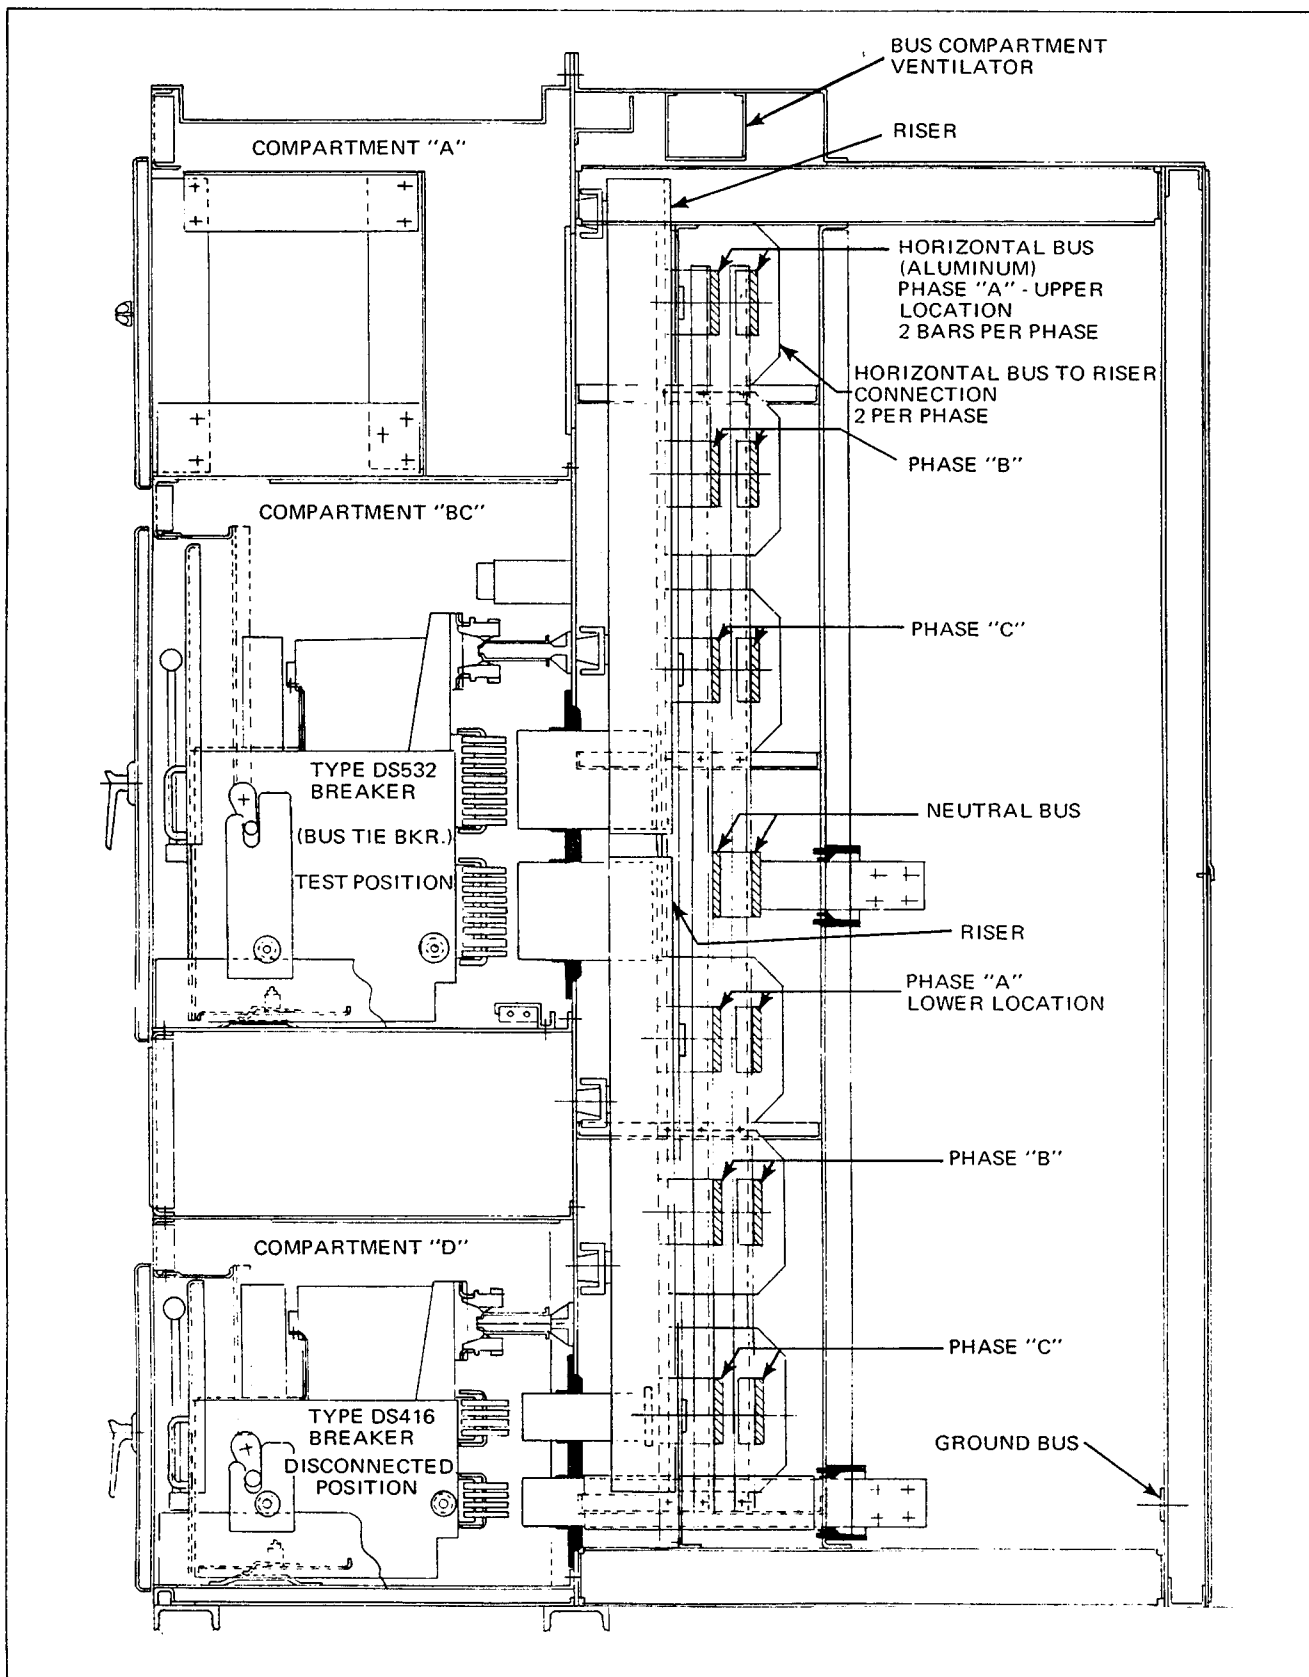


Fig. 7 Side View 3200 Amp Unit with Welded Aluminum Bus Risers Arranged as a Bus Tie Unit

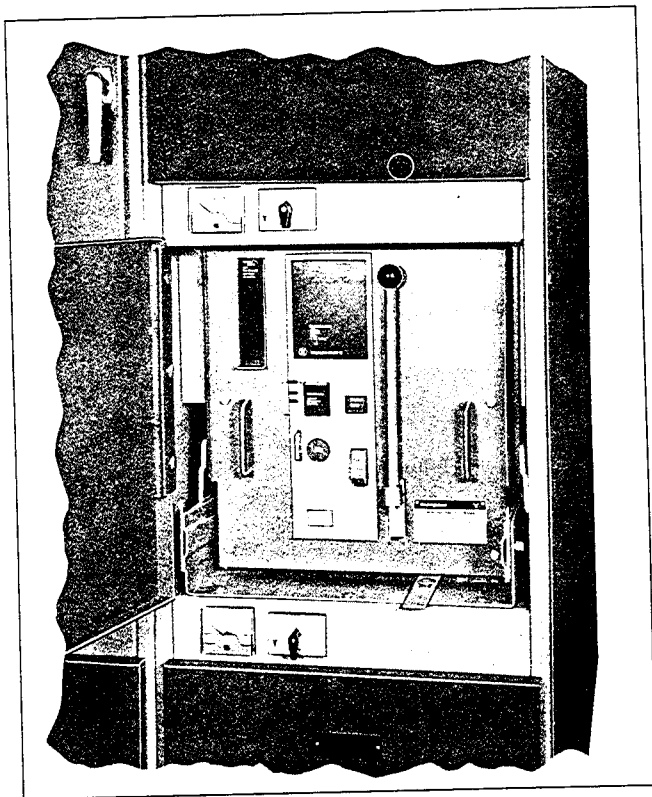


Fig. 8 Type DS206/DS416 Breaker in Compartment—Connected Position

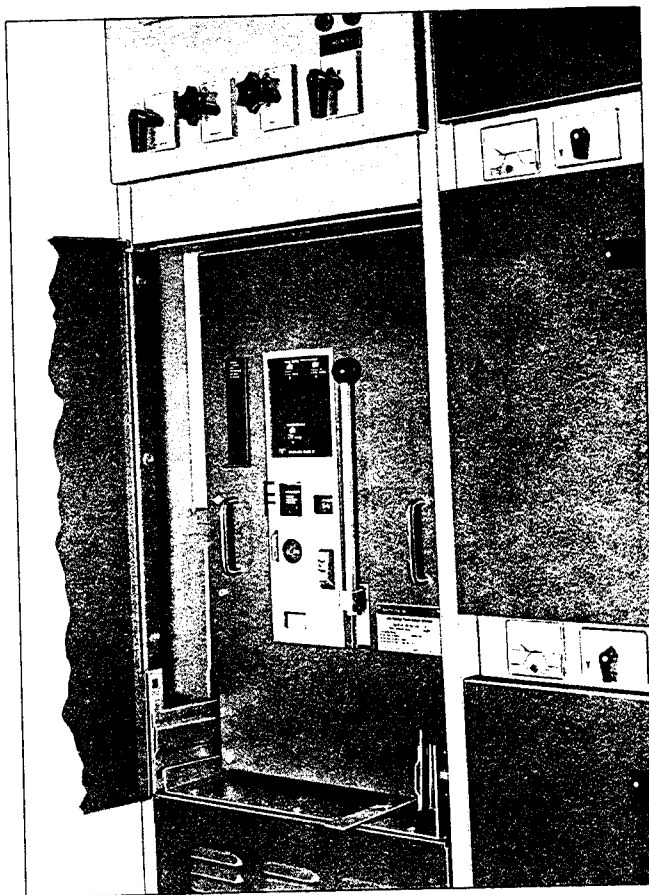


Fig. 10 DS532 Breaker in Connected Position

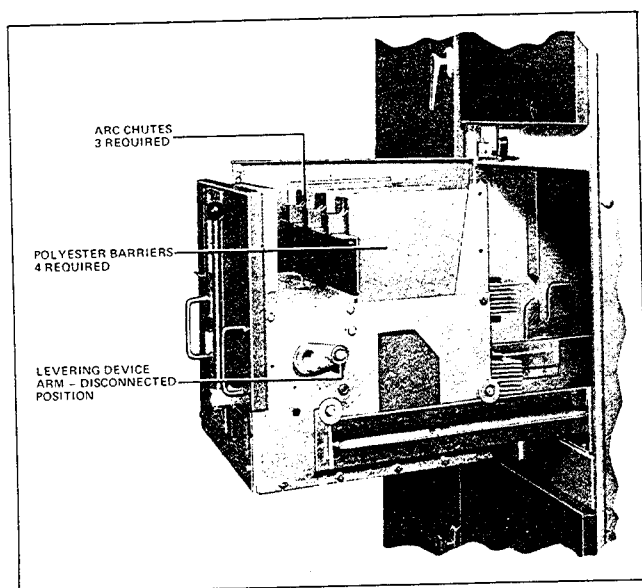


Fig. 9 Breaker Withdrawn onto Extended Rails

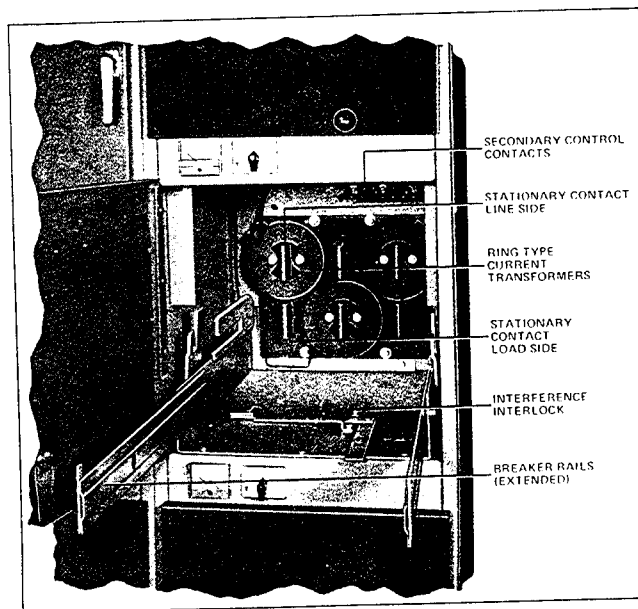


Fig. 11 600/1600 Amp Compartment Ready to Receive Breaker (1600 Amp Contacts Shown)

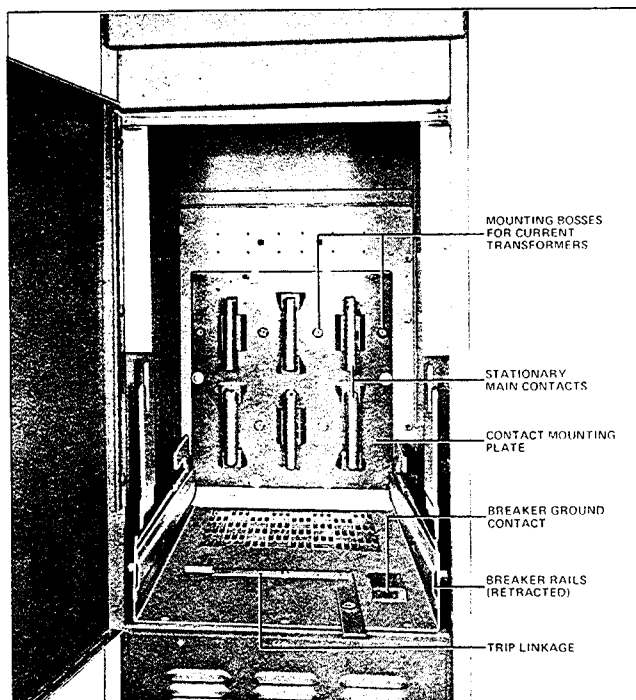


Fig. 12 3200 Amp Compartment

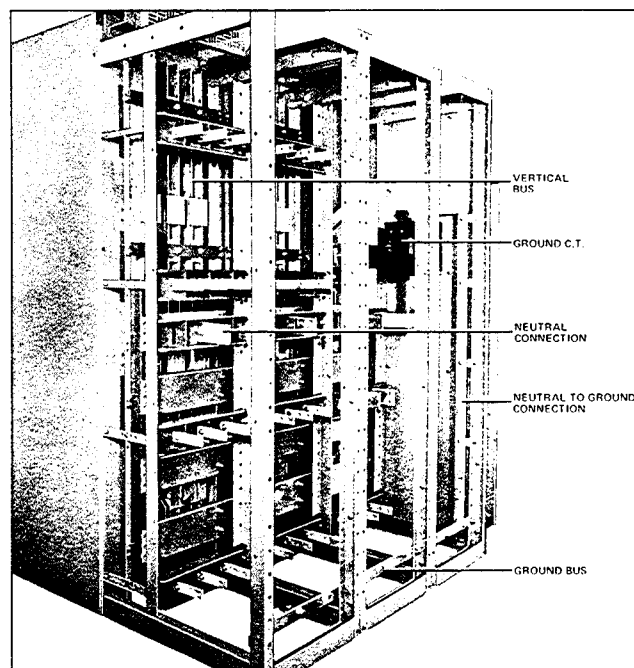


Fig. 13 1600 Amp Welded Aluminum Bus

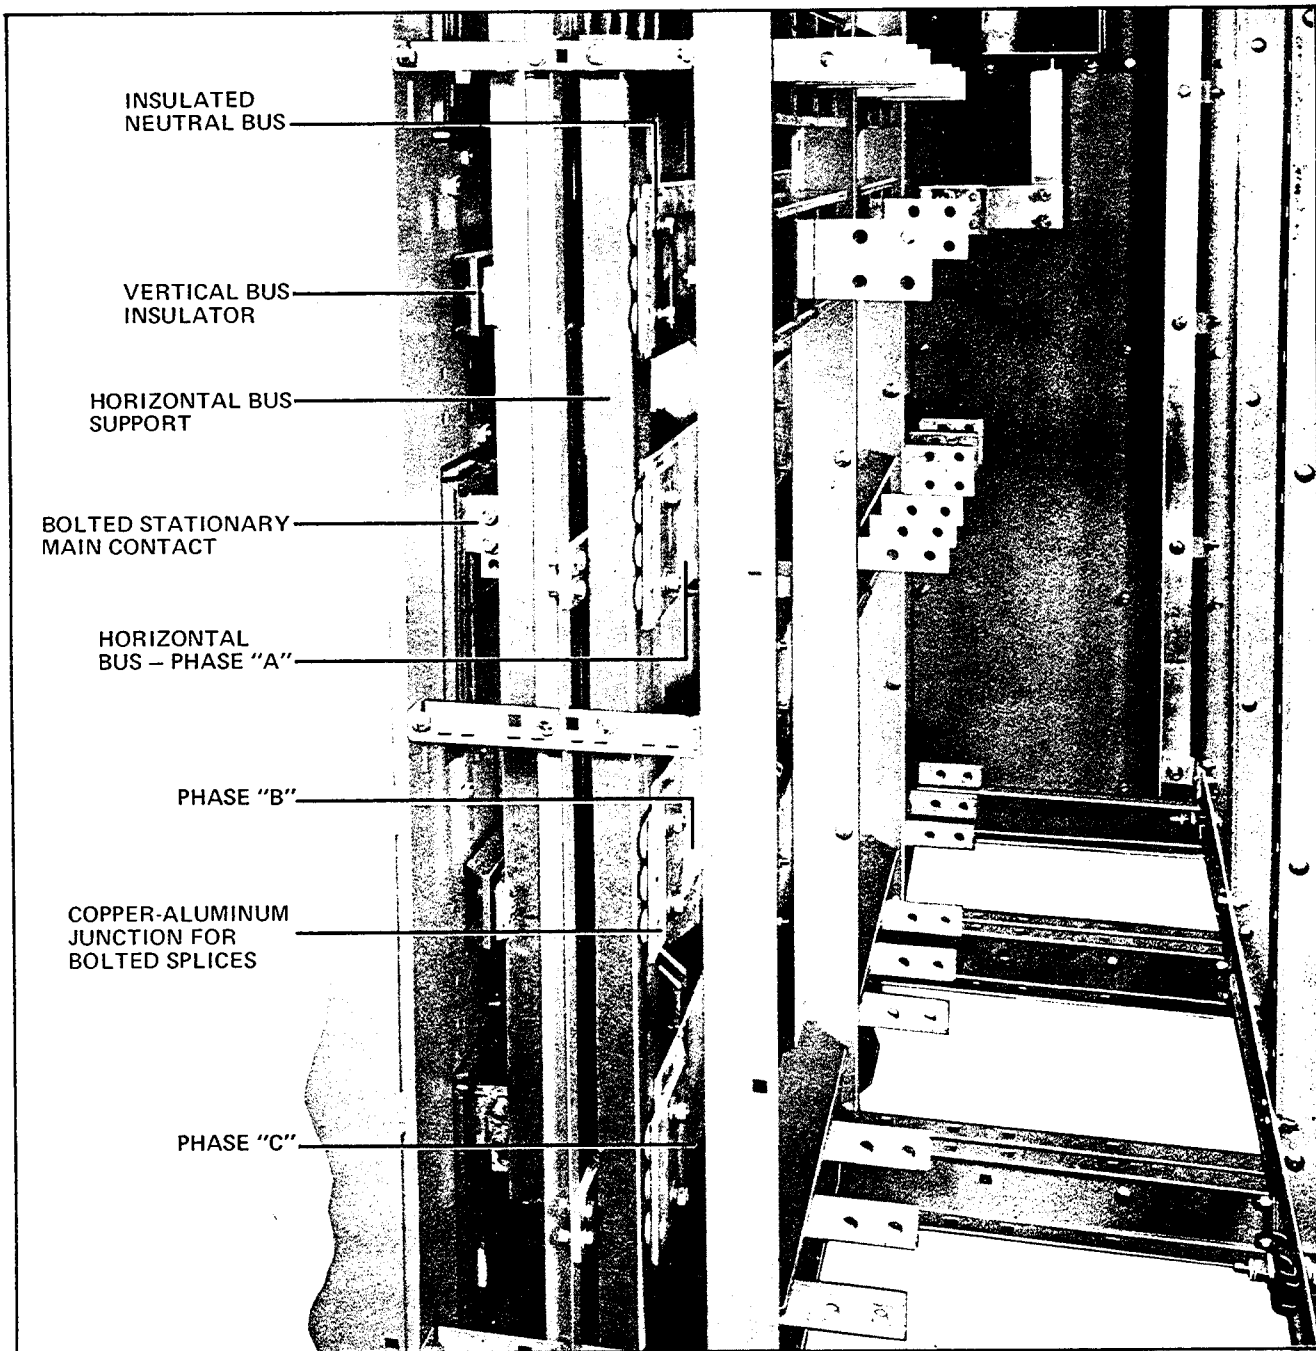


Fig. 14 Closeup of 1600 Amp Aluminum Bus

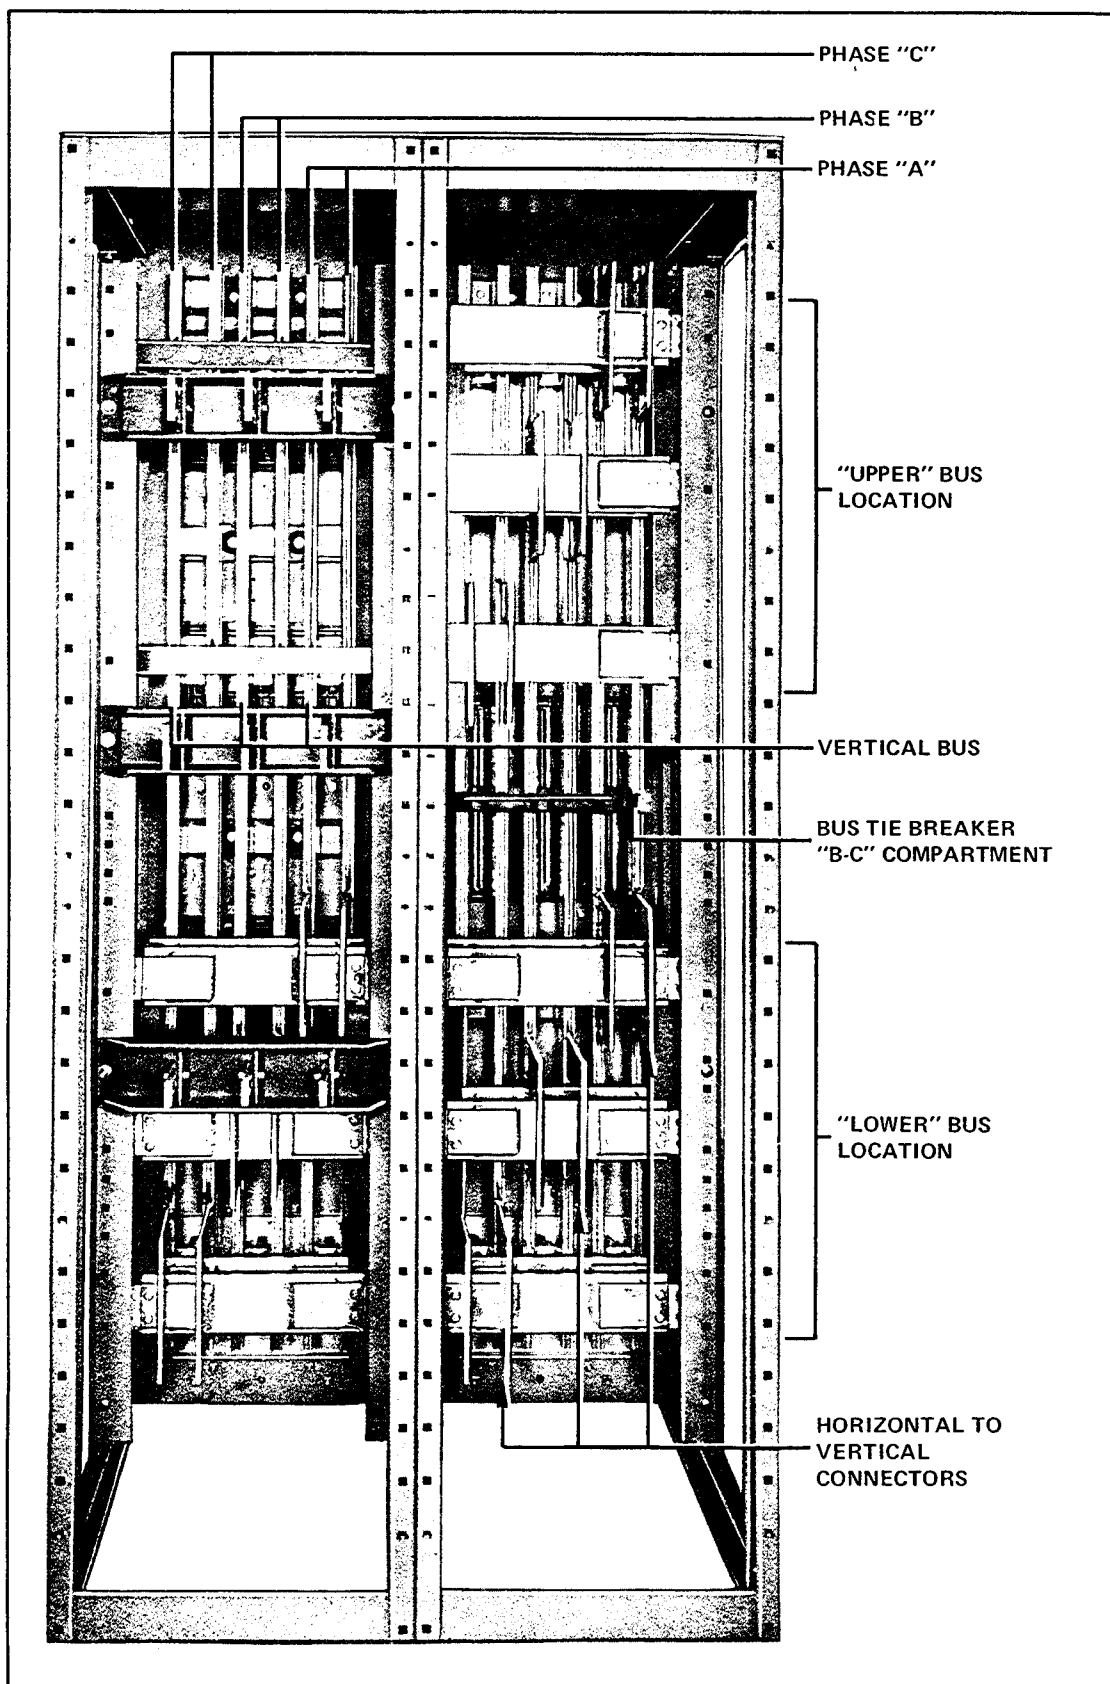


Fig. 15 3200 Amp Welded Aluminum Bus

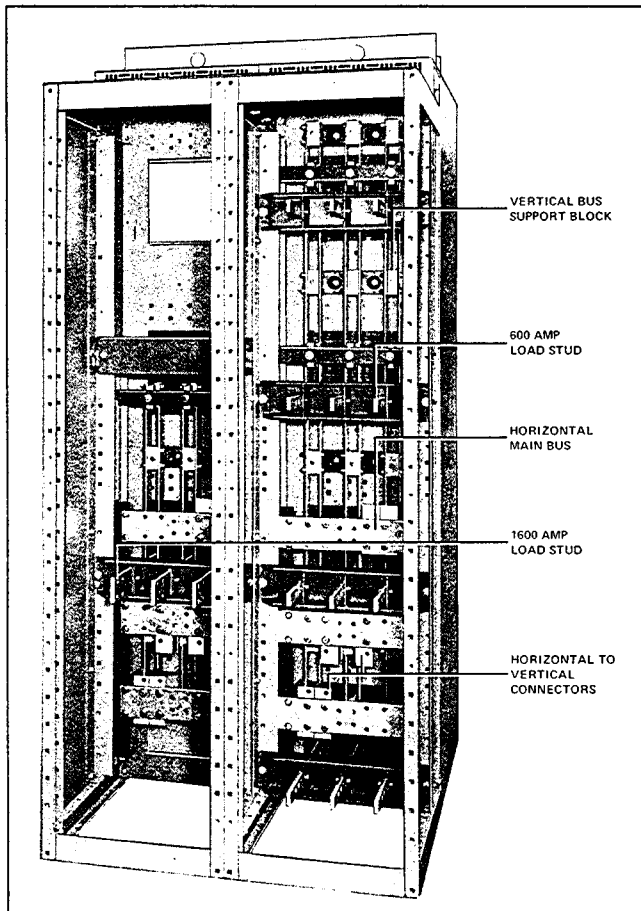


Fig. 16 1600 Amp Bolted Copper Bus

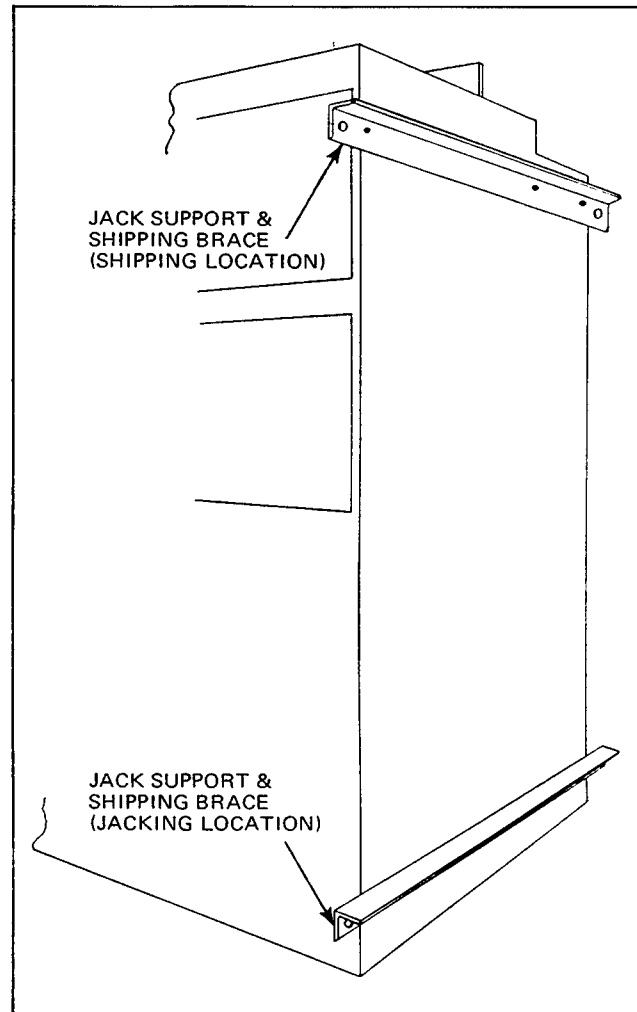


Fig. 17 Shipping Brace Relocated to Form Jack Support
(Included on Rail Shipments Only)


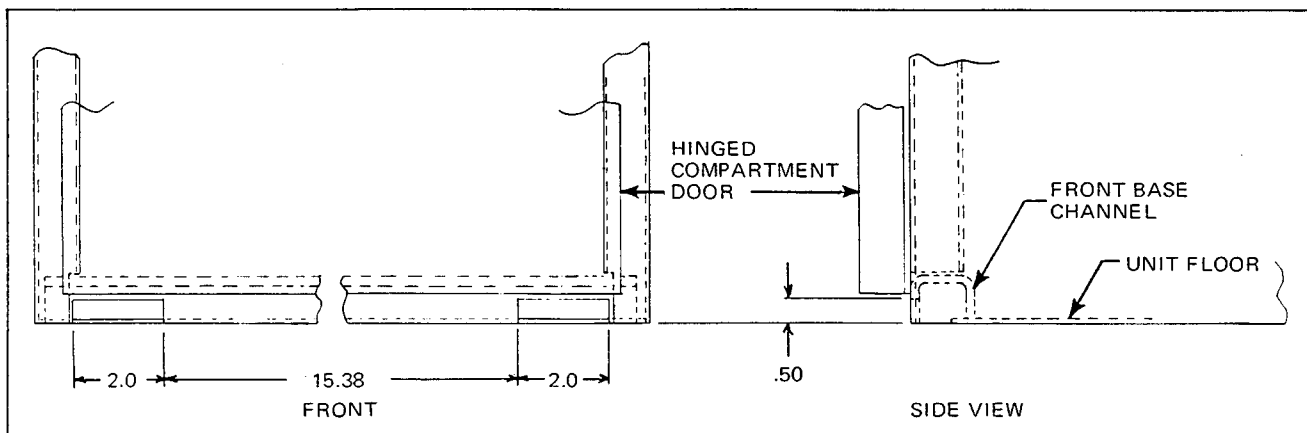


Fig. 18 Location of Pry Slots at Unit Front

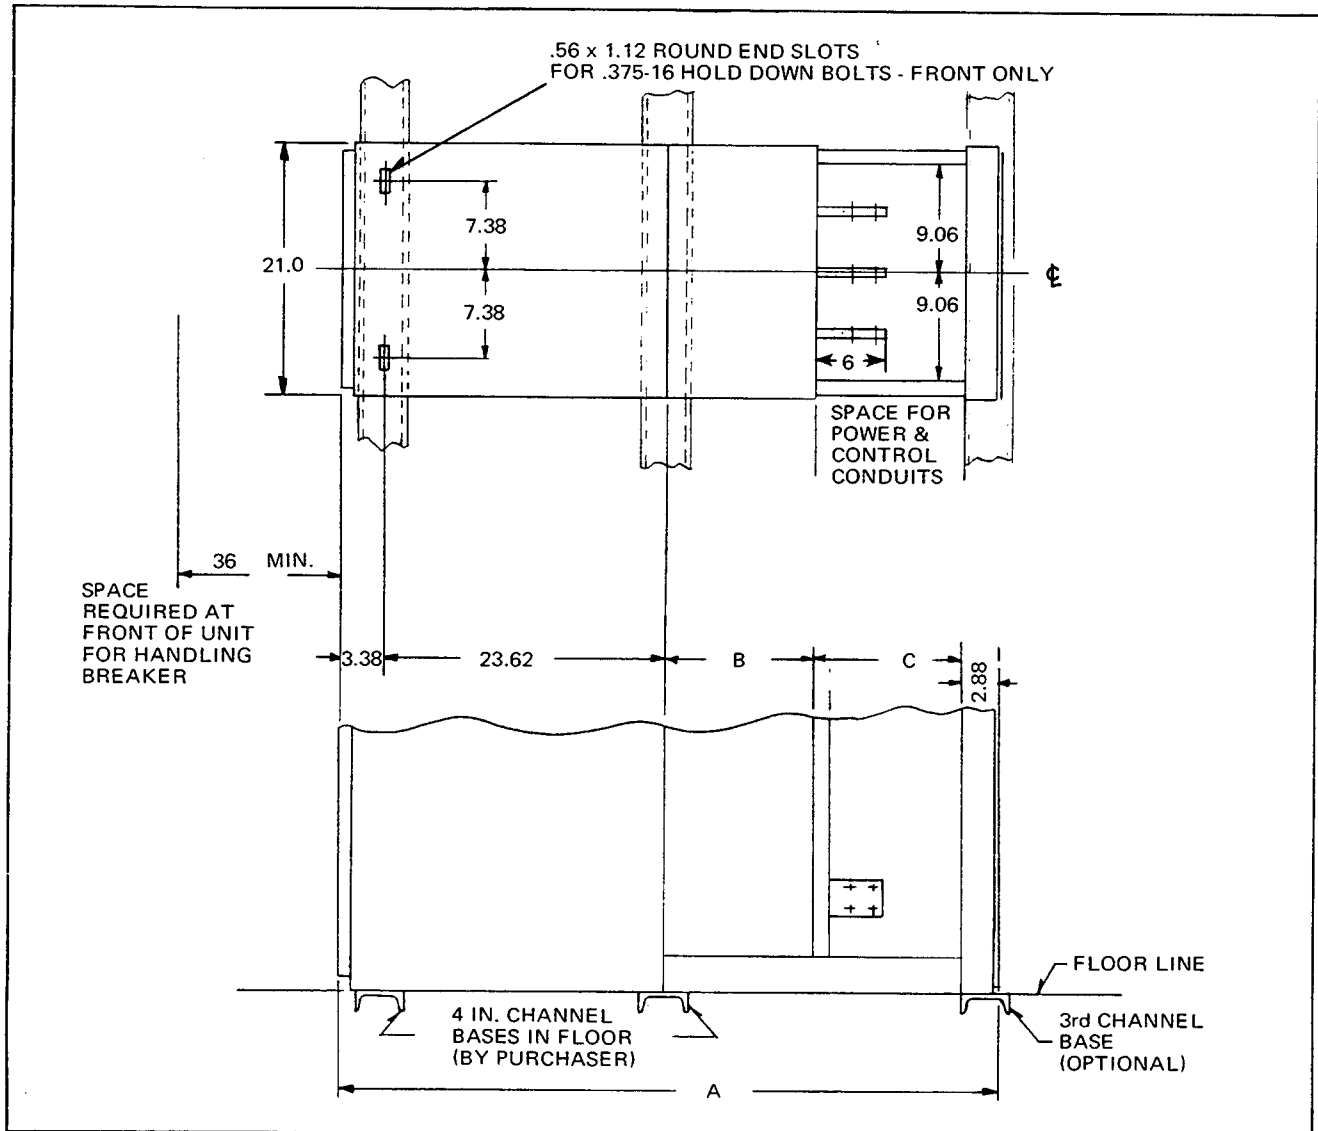

Bus Rating Amps	Depth - Inches		
	Overall A	Bus Compt. B	Cable Compt. C
600/1600	54.12	10.0	14.25
	60.12		20.25
	66.12		26.25
	72.12		32.25
3200	60.12	15.0	15.25
	66.12		21.25
	72.12		27.25

Fig. 19 Standard Floor Plan

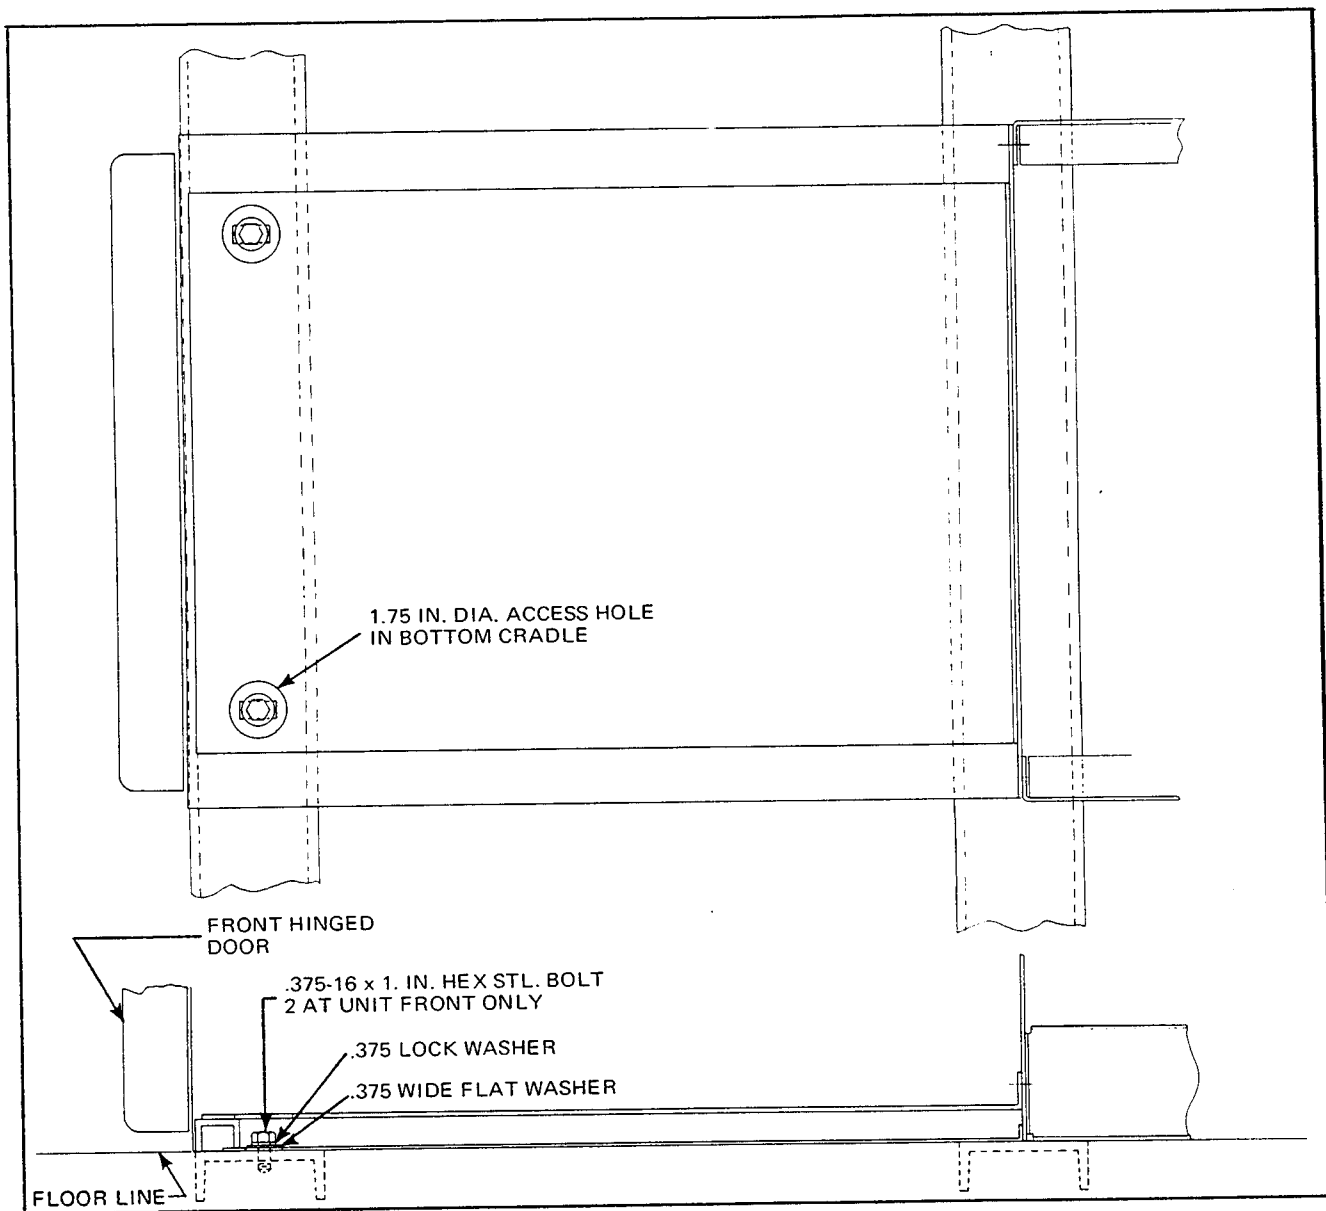


Fig. 20 Anchor Bolt Detail

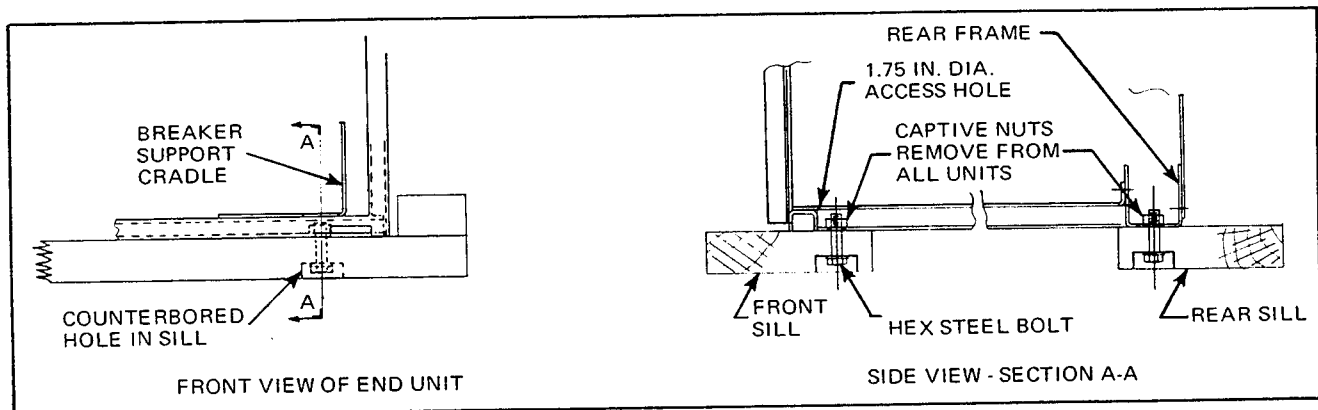


Fig. 21 Removal of Skid from Shipping Group

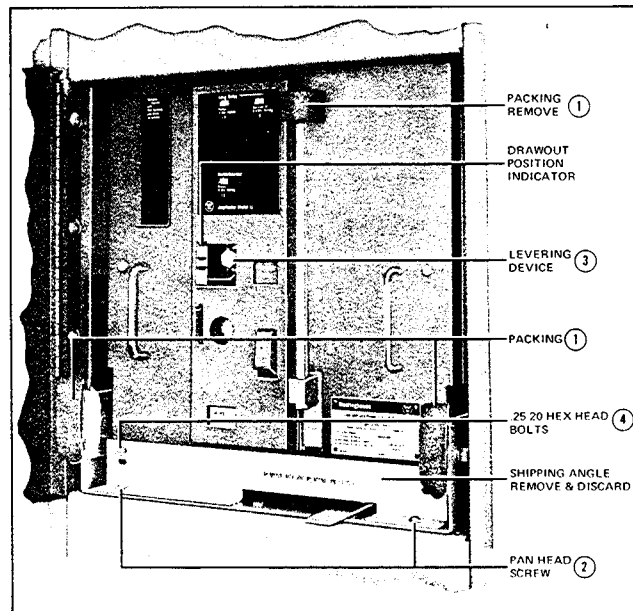


Fig. 22 Typical Shipping Arrangement.
Numbers Refer To Paragraphs in Section

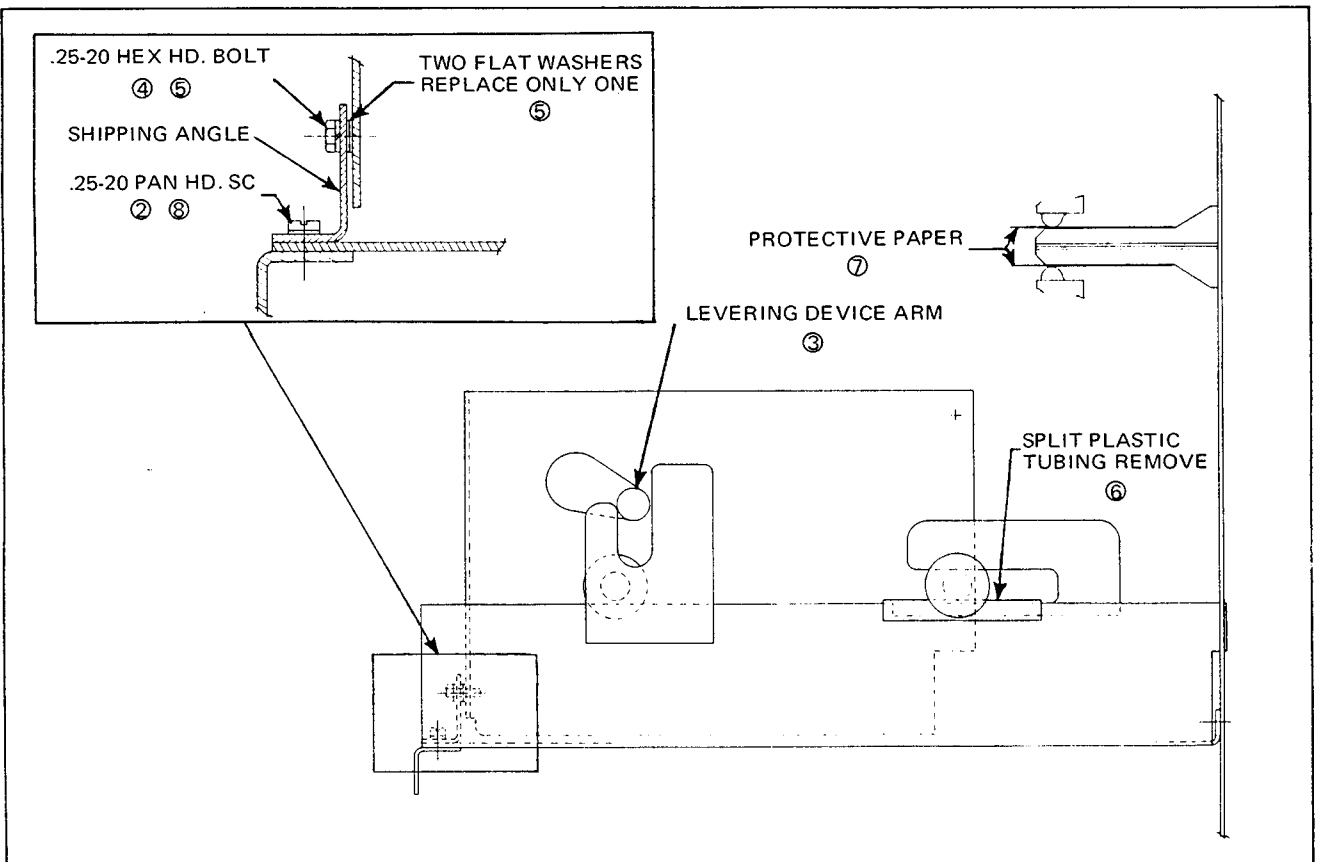


Fig. 23 Partial Side View of Type DS Breaker with Shipping Details

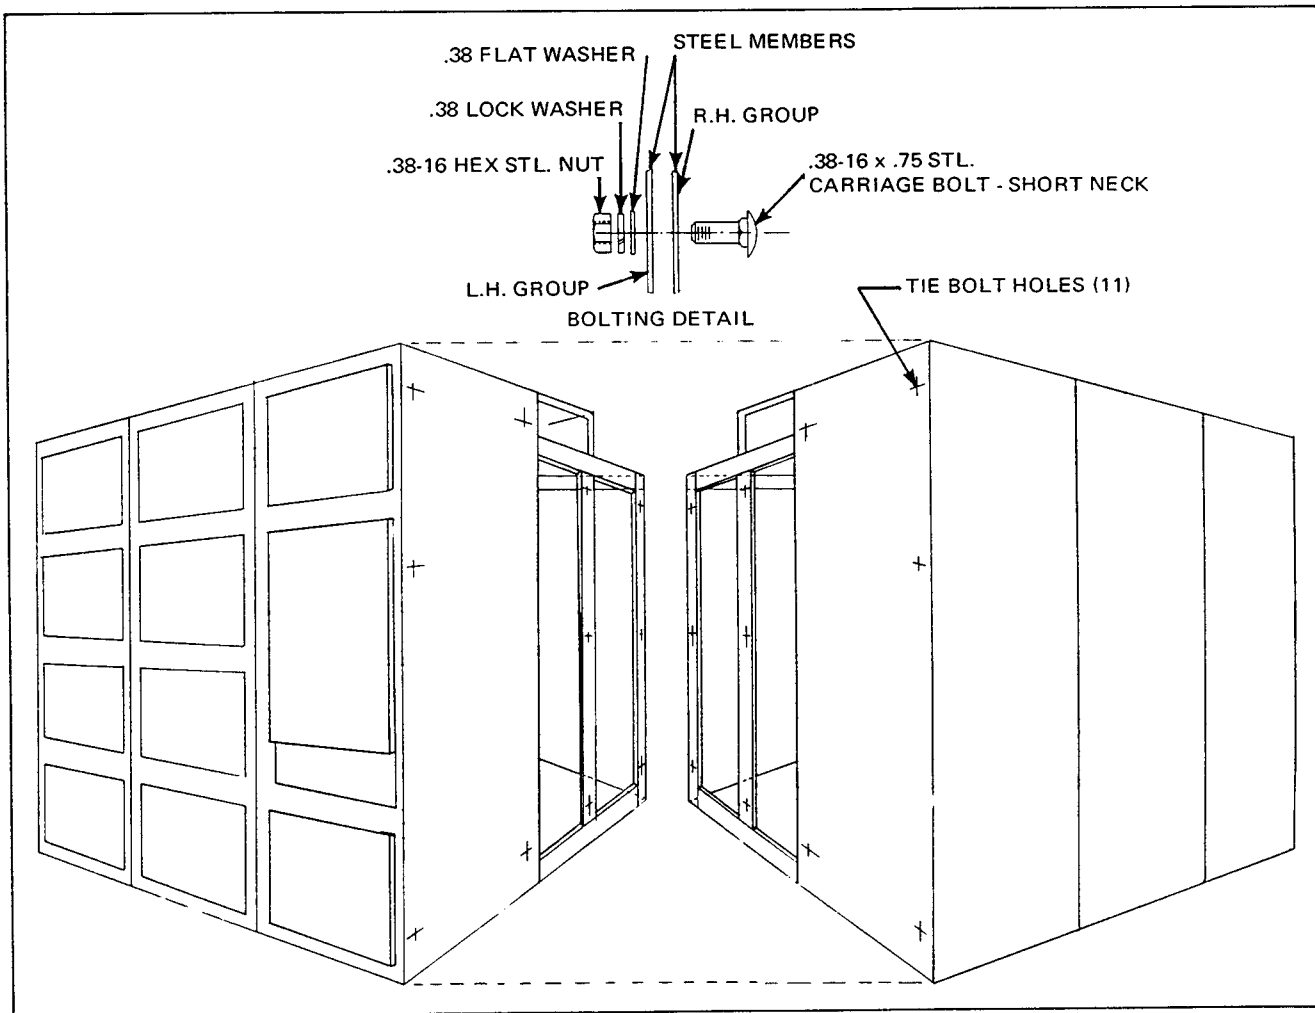


Fig. 24 Tie Bolt Locations for Joining Units at Shipping Break

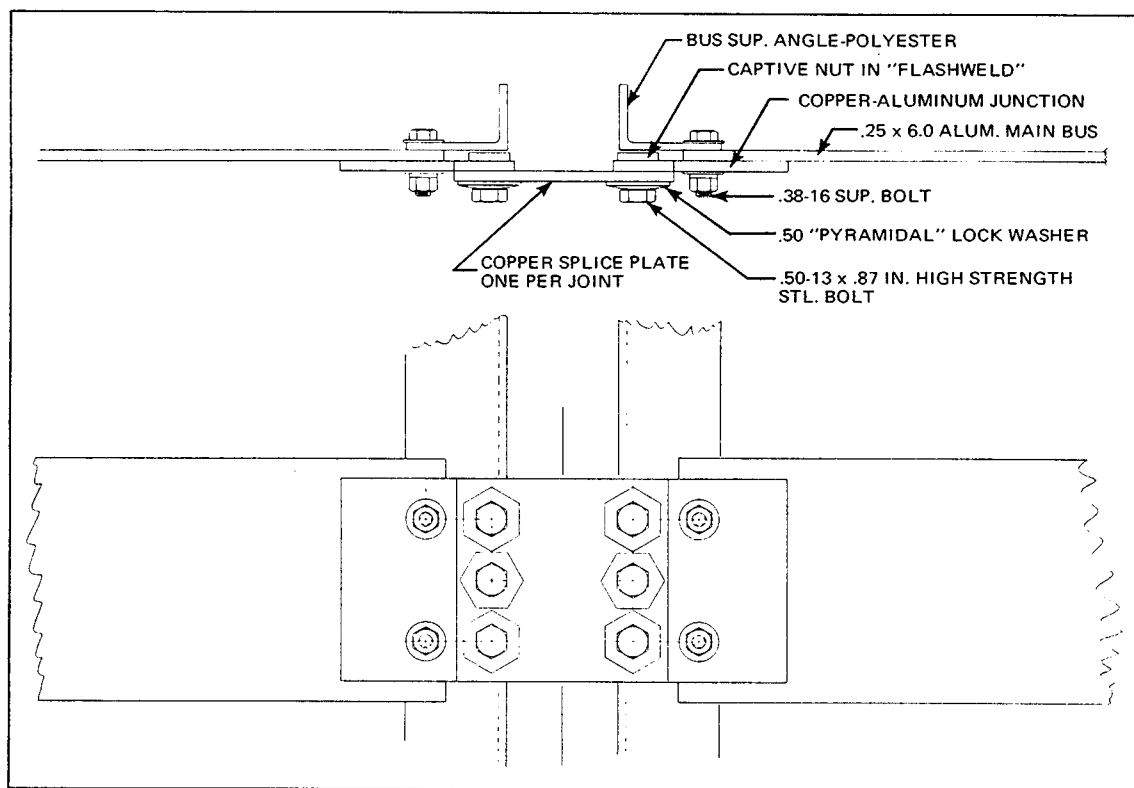


Fig. 25 Field Assembly of Joints in 1600 Amp Aluminum Horizontal Bus

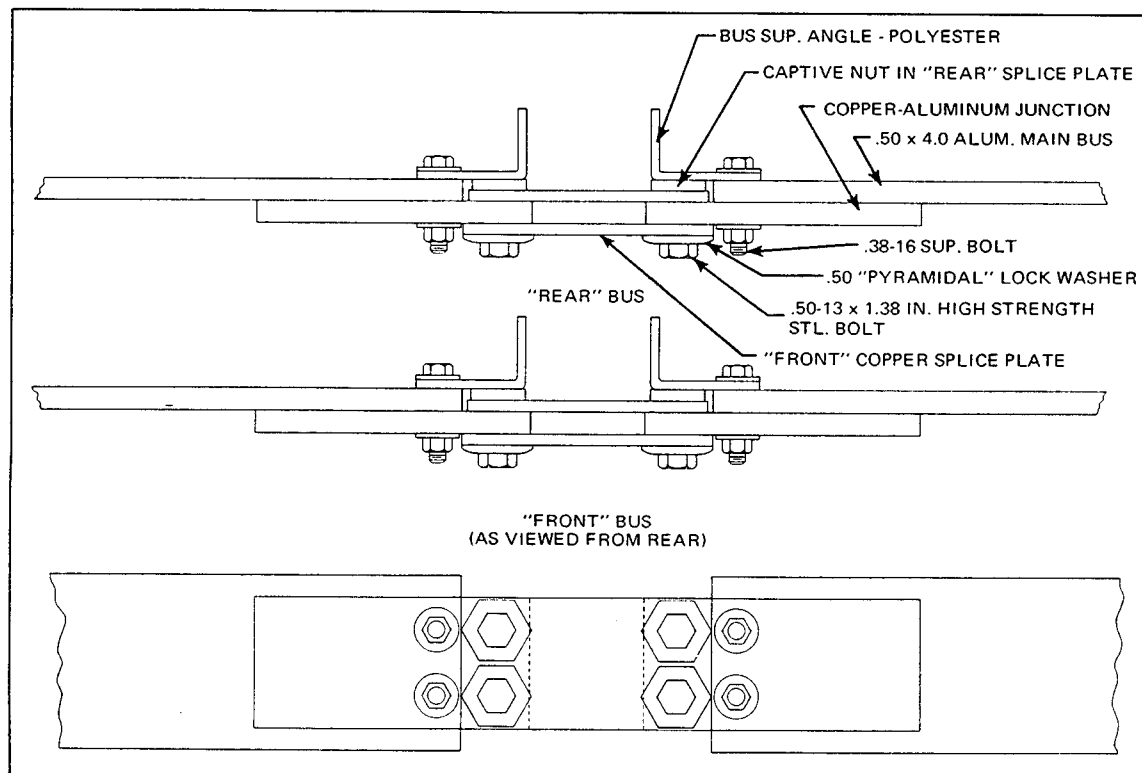


Fig. 26 Field Assembly of Joints in 3200 Amp Aluminum Horizontal Bus

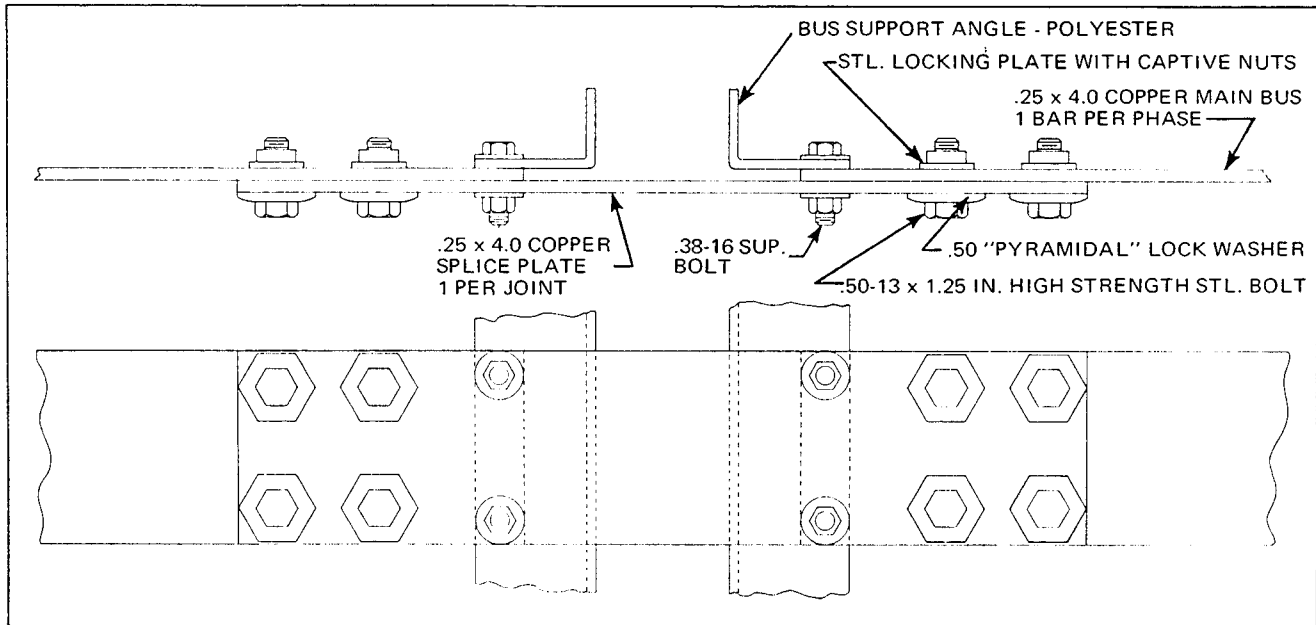


Fig. 27 Field Assembly of Joints in 1600 Amp Copper Horizontal Bus

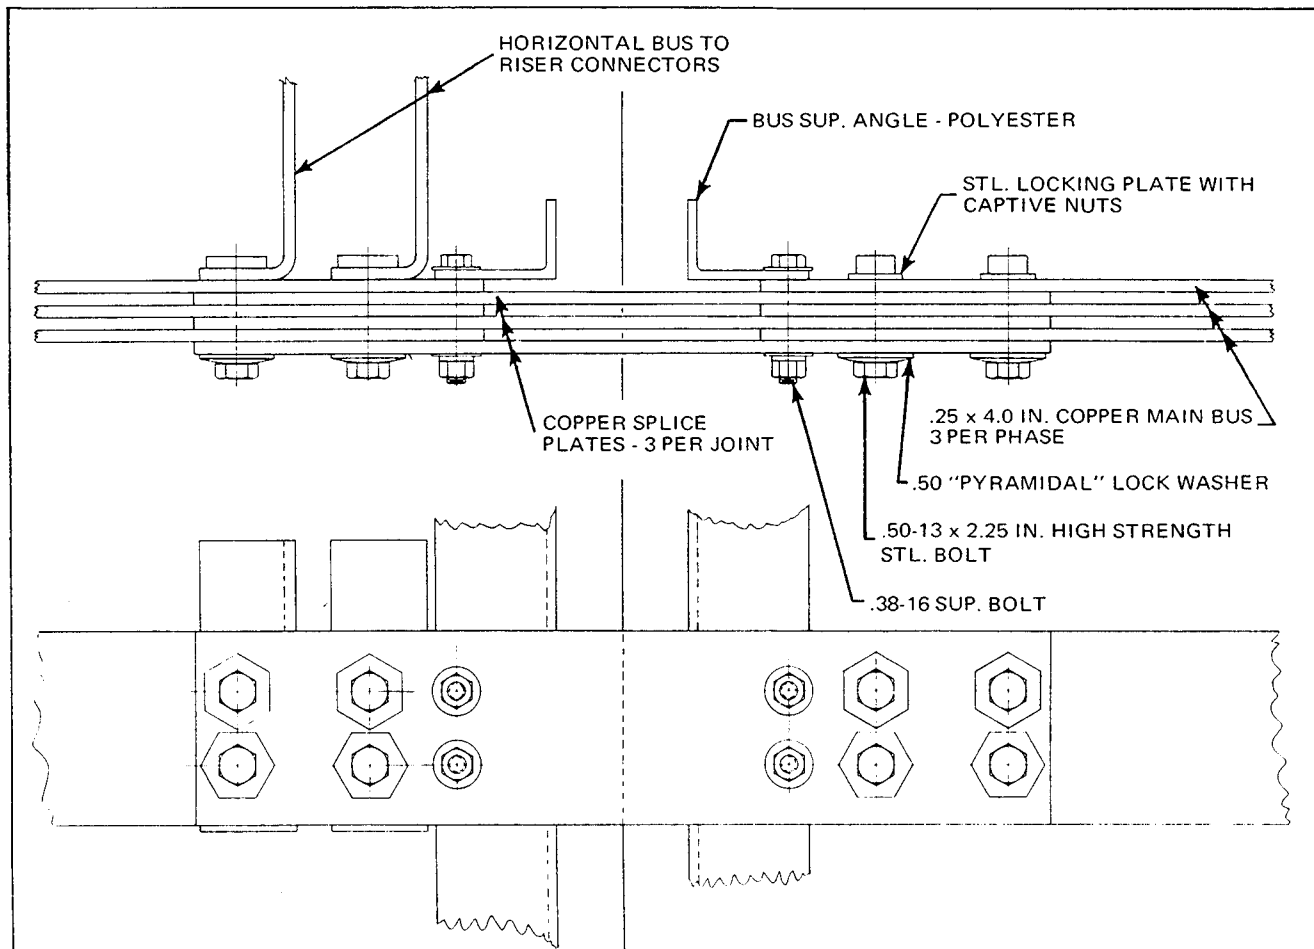


Fig. 28 Field Assembly of Joints in 3200 Amp Copper Bus

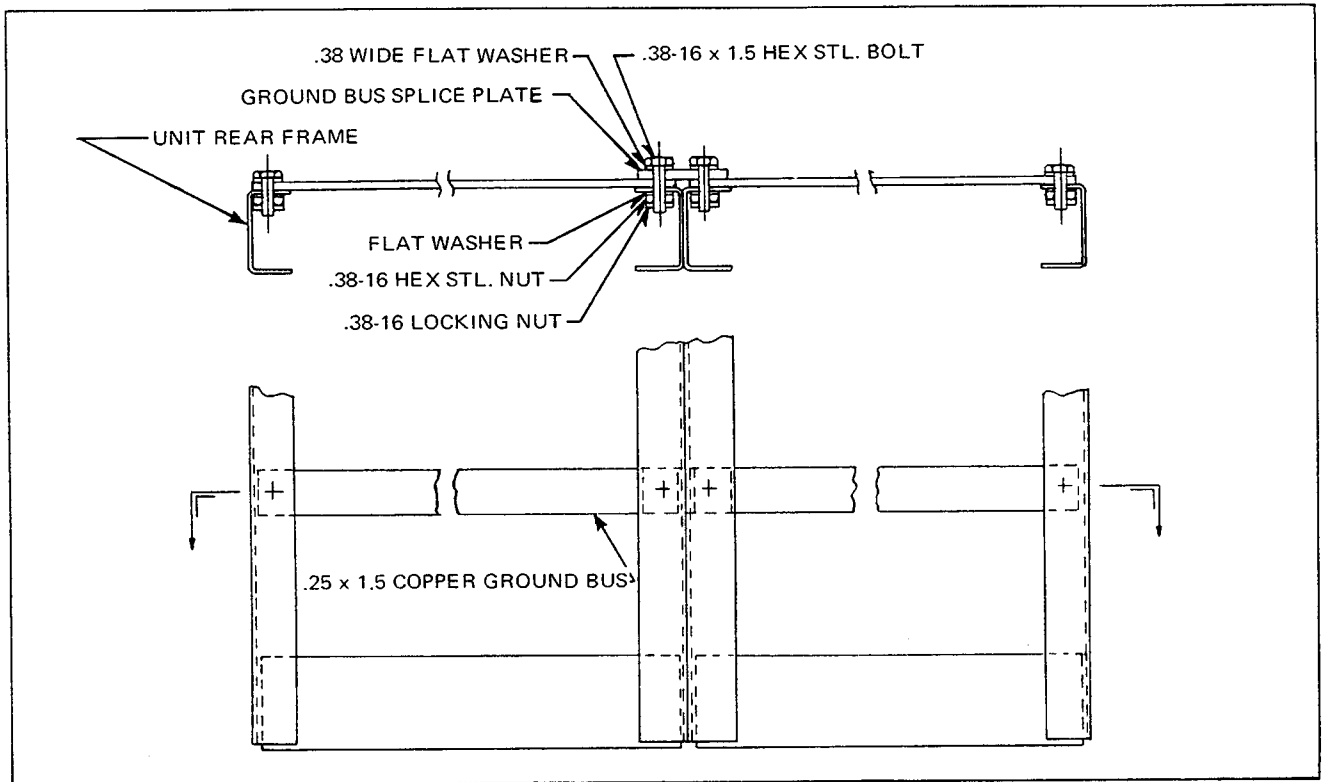


Fig. 29 Field Assembly of Splice in Ground Bus


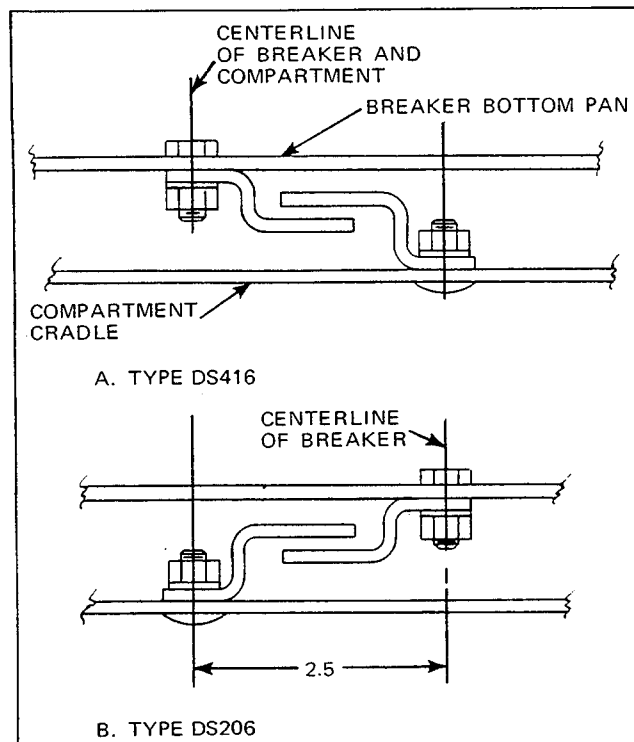


Fig. 30 Breaker Interference Interlock
(Viewed From Front)



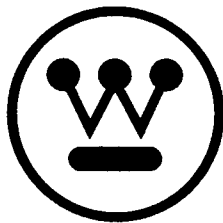

INDICATING LAMPS

37-350

Recommendations for Stock

Service Voltage	RECTANGULAR MINALITE				LARGE ROUND MINALITE	ROUND MINALITE
	For 24 V. - 0.75 Watt Bulb		For 48 V. - 1.5 Watt Bulb			
	For Panels Up to 3/16"	For Panels 1/4" to 2"	For Panels Up to 3/16"	For Panels 1/4" to 2"		
<u>RECEPTACLES</u> Furnished in Carton Quantities of 4						
25	1589 180	1589 180			549 460	822 328
50	1589 181	1589 193	1589 180	1589 180	549 461	1640 615
70	1589 182	1589 194	1584 570	1615 757	822 288	1640 613
115	1589 183	1589 195	1584 571	1615 758	1640 609	822 323
125	1589 184	1589 196	1584 572	1615 759	549 462	822 322
208	1589 185	1589 197	1615 754	1615 760	1114 967	1640 614
230	1589 186	1589 198	1615 755	1615 761	1640 610	822 321
250	1589 187	1589 199	1615 756	1615 762	549 463	822 320
380	1589 188	1589 188	1615 720	1615 720		
480	1589 189	1589 189	1615 721	1615 721		
25%					549 464	
50%	1589 190	1589 190			549 465	
125%	1589 191	1589 191	1615 722	1615 722	549 466	
250%	1589 192	1589 192	1615 723	1615 723	549 467	
% Bright - Dim Operation						
<u>BULBS</u> Furnished in Carton Quantities of 10						
18					549 474	
24	1124 156	1124 156				1640 619
48			1615 719	1615 719		
55						822 314
<u>LENS</u> Furnished in Carton Quantities of 10						
Color						
Red	1615 688	1615 688	1615 688	1615 688	549 468	822 265
Green	1615 689	1615 689	1615 689	1615 689	549 469	822 266
Clear	1615 690	1615 690	1615 690	1615 690	549 470	822 270
Blue	1615 691	1615 691	1615 691	1615 691	549 471	822 268
Amber	1615 692	1615 692	1615 692	1615 692	549 472	822 269
Opal	1615 693	1615 693	1615 693	1615 693	549 473	822 267

Lamp Extractor S#1802 172
Recommended in Minimum Carton Quantities.