& 1B-5504


LOW VOLTAGE SWITCHGEAR




INSTRUCTIONS

TYPE KC CIRCUIT BREAKERS

(MODELS F AND G)

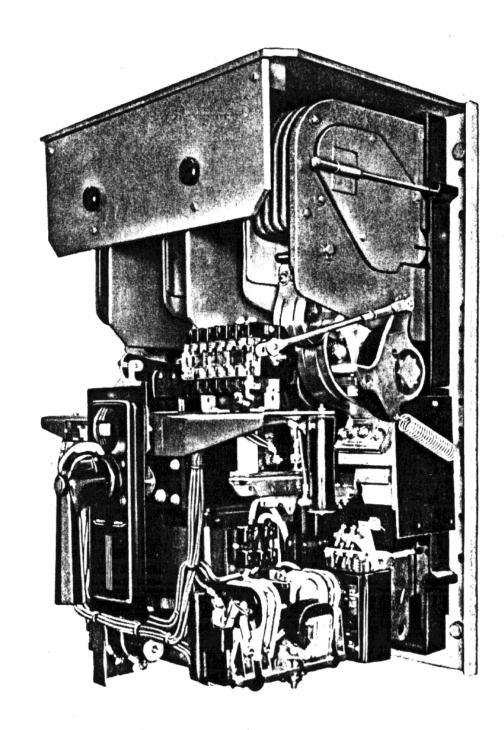

I-T-E CIRCUIT BREAKER COMPANY . PHILADELPHIA 30, PENNSYLVANIA

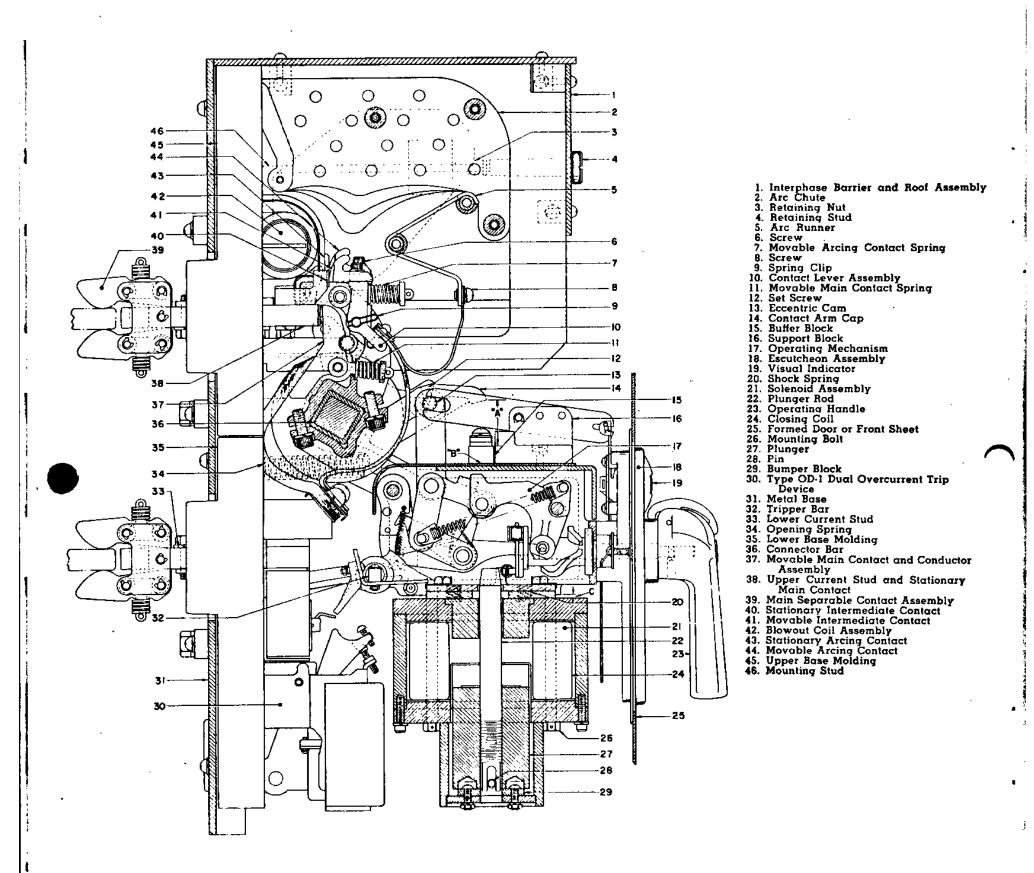

Dwg. S-14310

Fig. 1—Type KC Electrically Operated Circuit Breaker



INSTRUCTIONS FOR TYPE KC CIRCUIT BREAKERS

(MODELS F AND G)

INTRODUCTION

These instructions are a supplement to instruction bulletin IB-5404, which is included with this bulletin. The combination of the two form complete instructions for the Type KC circuit breakers having serial numbers with the prefixes F and G (Models F and G).

The Models F and G and Models C, D, and E are similar, except as described in the following sections. For example, the Type L auxiliary switch described in IB-5404 is replaced by the Type L2 auxiliary switch described in section AUXILIARY SWITCHES and shown on the wiring diagrams, Figs. 2 and 3, of this supplement.

DESCRIPTION

A three-pole electrically operated circuit breaker, with the Type L2 auxiliary switch and Dimenso finish, is shown on the front cover.

A side section view of an electrically operated circuit breaker is shown in Fig. 1.

Typical diagrams of connections for rectified a-c

and d-c control applications are shown in Figs. 2 and 3, respectively.

AUXILIARY SWITCHES

The Type L2 auxiliary switch is a front-connected switch with double-break contacts. The six-contact switch, furnished as standard on electrically operated circuit breakers, is mounted on the right-hand side of the mechanism shelf. If more than six contacts are required, an additional two, four, or six-contact switch can be mounted on the left-hand side of the mechanism shelf.


The auxiliary switch is used primarily to protect the coil of the shunt trip device by opening the trip coil circuit. The auxiliary switch may also be used to control indicating lamps and interlocking or alarm circuits. For more specific information on the Type L2 auxiliary switch, refer to IB-5504.


On applications requiring alarm contacts, a Type ML latched-contact switch is mounted on the rear of the circuit breaker escutcheon plate. For more specific information on the Type ML latched-contact switch, refer to IB-5500.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the I-T-E Circuit Breaker Company.

4



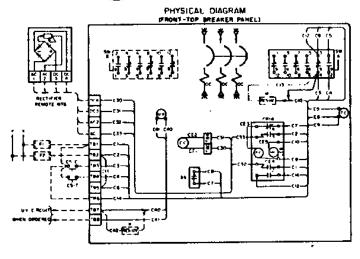

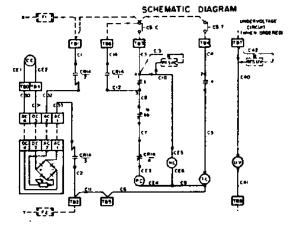

LEGEND


- a Contact Closed when Circuit Breaker Is Closed.
 Contact Closed when Circuit Breaker Is Open. Contact Closed When Closing Solenoid
 Is in Non-operative Position. CC — Closing Coil. CE — Coil End. CR14 — Closing Control Relay (Trip Free).
- CR14/1 | Contacts Close When Pickup Coil Is CR14/2 | Energized. R14/3 | Energized.
 R14/4 — Contact Open Only When Pickup Coil Is
 De-energized and Holding Coil Is
 Energized.
 CS — Control Switch.
 CS-C — Control Switch Close Contact—
 Maintained or Momentary.
 CS-T — Control Switch Trip Contact.
 HC — Holding Coil of Closing Control Relay.
 OC — Overcurrent Trip Coil (Omit for
 Non-automatic Breakers).
 PC — Pickup Coil of Closing Control Relay.
 TB — Terminal Block.
 TC — Shunt Trip Coil.
 UV — Undervoltage Trip Coil.


NOTES

- Use #16-7 Strand Wire on All Circuits, Except #12-7 Strand on Closing Solenoid.
 Pole Positions Reading Left to Right:
 One-pole Breakers Use #2 Pole Only.
 Two-pole Breakers Use #1 & #3 Poles
 Three-pole Breakers Use #1, #2, & #3 Poles.
 Four-pole Breakers Use #1, #2, #3 Poles.
 Shown & #4 Pole in Addition.
 Main Separable Contacts on Individually Enclosed Pullout Breakers and Switchgear.
 Adjustable Resistor-adjustment for Aging Rectifier.

Dwg. 701374

Fig. 2—Typical Diagram of Connections for Type KC Circuit Breakers Using A-C Control Voltage

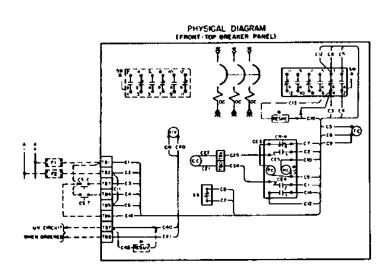

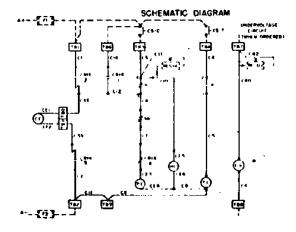

LEGEND

- Contact Closed when Circuit Breaker Is
- Closed.

 Contact Closed when Circuit Breaker Is
- Open.

 Contact Closed When Closing Solenoid
 Is in Non-operative Position.
- Closing Coil.
 Coil End.
- Closing Control Relay (Trip Free).
- CR14 Closing Control Relay (Trip Free).

 CR14/1 | Contacts Close When Pickup Coil Is
 CR14/2 | Energized.
- Contact Open Only When Pickup Coil Is
 De-energized and Holding Coil Is CR14/4 -
- - TC Shunt Trip Coil. UV Undervoltage Trip Coil.

NOTES

- 1. Use #167 Strand Wire on All Circuits, Except #127 Strand on Closing Solenoid.

 2. Pole Positions Reading Left to Right:
 One-pole Breakers Use #2 Pole Only.
 Two pole Breakers Use #1 & #3 Poles.
 Three-pole Breakers Use #1, #2, & #3 Poles.
 Four pole Breakers Use #1, #2, #3 Poles.
 Shown & #4 Pole in Addition.

 3. Main Separable Contacts on Individually Enclosed Pullout Breakers and Switchgear.

 4. Adjustable Resistor-adjustment for Aging Rectifier.

Dwg. 701375

Fig. 3—Typical Diagram of Connections for Type KC Circuit Breakers Using D-C Control Voltage