Digitrip Retrofit Kit Installation for the ITE-LX-1600 Series Breakers

Update: October 2000



SAFETY PRECAUTIONS



WARNING

POWER CIRCUIT BREAKERS ARE EQUIPPED WITH HIGH SPEED, HIGH ENERGY OPERATING MECHANISMS. THE BREAKERS AND THEIR ENCLOSURES ARE DESIGNED WITH SEVERAL BUILT-IN INTERLOCKS AND SAFETY FEATURES INTENDED TO PROVIDE SAFE AND PROPER OPERATING SEQUENCES. TO PROVIDE MAXIMUM PROTECTION FOR PERSONNEL ASSOCIATED WITH THE INSTALLATION. **OPERATION, AND MAINTENANCE OF THESE** BREAKERS, THE FOLLOWING PRACTICES MUST BE FOLLOWED. FAILURE TO FOLLOW THESE PRACTICES MAY RESULT IN DEATH, PERSONAL INJURY, OR PROPERTY DAMAGE.

- Only qualified persons, as defined in the National Electric Code, who are familiar with the installation and maintenance of power circuit breakers and their associated switchgear assemblies should perform any work associated with these breakers.
- Completely read and understand all instructions before attempting any installation, operation, maintenance, or modification of these breakers.
- Always turn off and lock out the power source feeding the breaker prior to attempting any installation, maintenance, or modification of the breaker. Do not use the circuit breaker as the sole means for isolating a high voltage circuit. Follow all lockout and tagging rules of the National Electric Code and all other applicable codes, regulations, and work rules.
- Do not work on a closed breaker or a breaker with the closing springs charged. Trip (open) the breaker and be sure the stored energy springs are discharged before performing any work. The breaker may trip open or the charging springs may discharge, causing crushing or cutting injuries.
- For drawout breakers, trip (open), and then remove the breaker to a well-lit work area before beginning work.
- Do not perform any maintenance: including breaker charging, closing, tripping, or any other function which could cause significant movement of the breaker while it is on the extension rails. Doing so may cause the breaker to slip from the rails and fall, potentially causing severe personal injury to those in the vicinity.
- Do not leave the breaker in an intermediate position in the switchgear cell. Always leave it in the connected, disconnected or (optional) test position. Failure to do so could lead to improper positioning of the breaker and flashover, causing death,



serious personal injury, and / or property damage.

 Do not defeat any safety interlock. Such interlocks are intended to protect personnel and equipment from damage due to flashover and exposed contacts. Defeating an interlock could lead to death, severe personal injury, and / or property damage.

Cutler-Hammer Digitrip Retrofit Kits are available in a number of configurations that provide a wide range of features. The Digitrip System starts with the 510 Basic Kit which offers true RMS sensing, overcurrent protection, and self-testing features. Advanced Digitrip Retrofit Kits feature zone interlocking, digital alphanumeric displays, remote alarm signals, IMPACC communications, energy monitoring capabilities, power factor, and harmonic content measurements.

The following table provides a quick reference of the components supplied with each level of Retrofit Kit. Before beginning the Retrofit process, take a minute to review the information contained in the table. It is important that the Retrofitter understand which level of Retrofit Kit

Components	510 Basic	510 with Zone Interlock	610	810	910
Trip Unit					
Rating Plug					
Auxiliary					
Current					
Transformer					
(CT) Module					
Auxiliary CT					
Harness					
Sensors					
Sensor					
Harness					
Direct Trip					
Actuator (DTA)					
Mounting Brackets and					
Hardware					
External	Plug	1 Connector	2 Connector	4 Connector	4 Connector
Harness	Flug	Harness	Harness	Harness	Harness
Cell Harness		Tiarriess	Tiarriess	Tiarriess	Tiarriess
Breaker					
Mounted					
Control Power					
Transformer					
(CPT)					
Potential					
Transformer					
(PT) Module					
Auxiliary Switch					



is to be installed and which components are included with the Kit.

The instructions contained in this manual cover the installation of all levels of Retrofit Kit. If the Kit you are installing does not contain a certain component, skip the instructions for that component and proceed to the next.

Throughout the Retrofit process, refer to the Torque Tables at the back of this manual for specific torque values.

If you have any questions concerning the Retrofit Kit and / or the Retrofit process, contact Cutler-Hammer at 1-800-937-5487.

Step 1: General Breaker Preparation

Before attempting to remove the Breaker from the Cell, or perform any Retrofit operation, be sure to read and understand the Safety Precautions section of this manual. In addition, be sure to read and understand the *Instructions for the Application of Digitrip RMS Retrofit Kits on Power Circuit Breakers* (Retrofit Application Data - Publication AD-33-855-1), supplied with the Digitrip Retrofit Kit.



WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. SEVERE PERSONAL INJURY OR DEATH CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING.

A. Trip the Breaker and remove it from the Cell. Move the Breaker to a clean, well-lit work bench.

NOTE: It is the responsibility of the original components are in good condition. Visually inspect all Breaker components for signs of damage or wear. If any signs of damage or

wear are detected for components Retrofitter to insure that the Breaker and all *not included* in the Retrofit kit, secure the necessary replacement parts *before* beginning the Retrofit process.

The force necessary to trip the Breaker must not exceed 3 lbs.

To begin the Retrofit process, refer to the components list at the rear of this manual. Lay out the components and hardware according to the steps outlined. The components and hardware will be used to complete each step of the Retrofit process.

Step 2: Removing the Original Components

Following the ITE LX-1600 Instruction Manual, originally supplied with the Breaker, perform the following procedures.


- A. Elevate and support the front of the Breaker to allow adequate clearance to access the original Electromechanical Trip Units and mounting hardware.
- B. Remove and scrap the three Electromechanical Trip Units and mounting hardware from the bottom front of the Breaker. Lower the front of the Breaker back down to the work surface.

Step 3: Drilling the Mounting Holes in the Breaker Frame

A. Place the Aux. CT Module Mounting Platform onto the bottom Breaker Frame. Position the Aux. CT Module Mounting Platform so the back edge of the Platform is 3.50" from the Breaker Back Plate.



Drilling Plan A

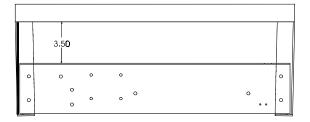

- B. Using the four (4) pre-drilled holes in the Aux. CT Module Mounting Platform as a guide, mark the location of the holes on the bottom of the Breaker Frame
- C. Remove the Aux. CT Module Mounting Platform from the Breaker, then drill four (4) .265" diameter holes in the bottom Breaker Frame. These holes will be used later in the Retrofit process to secure the Aux. CT Module Mounting Platform to the bottom Breaker Frame.

Step 4: Installing the DTA Assembly



A. Apply Loc-Tite[®] 242 to the threads, then mount the DTA Assembly to the Aux. CT

Module Mounting Platform as shown, using the (3) $.250-20 \times .625$ " bolts, (6) flat washers, (3) lock washers, and (3) nuts supplied. Note that the bolts, with flat washers installed, must be inserted from the bottom of the Aux. CT Module Mounting Platform.

Step 5: Mounting the Trip Unit to the Aux. CT Module



- A. Align the Trip Unit with the holes in the top of the Aux. CT Module. Secure the Trip Unit to the Aux. CT Module using the (2) .190-32 x 4.00" screws, (2) lock washers, (2) flat washers, and (2) brass spacers supplied.
- B. Align the left and right Trip Unit Support Clips with the slots in the sides of the Trip Unit. Secure the Trip Unit Support Clips to the Aux. CT Module using the (4) .190-32 x .375" screws, (4) lock washers, and (4) flat washers supplied.
- C. Remove the Trip Unit Cover and install the Rating Plug. Replace the cover.



Step 6: Installing the Trip Unit / Aux. CT Module Assembly



- A. Align the Trip Unit / Aux. CT Module
 Assembly with the pre-drilled holes in the
 Aux. CT Module Mounting Platform, as
 shown. Secure the Trip Unit / Aux. CT
 Module Assembly to the Aux. CT Module
 Mounting Platform using the (2) .250-20 x
 .625" bolts, (2) flat washers, (2) lock washers,
 and (2) nuts supplied. Note that the mounting
 bolts must be inserted from the bottom of the
 Mounting Platform.
- B. For Kits Supplied With a PT Module Only:
 Align the PT Module with the pre-drilled holes in the Glass Poly Insulation Barrier, as shown.
 Secure the PT Module to the Insulation Barrier using the (2) .138-32 x .500" screws, (4) flat washers, (2) lock washers, and (2) nuts supplied.



C. Align the Glass Poly Insulation Barrier with the holes in the back of the Aux. CT Module. Secure the Glass Poly Insulation Barrier to the Aux. CT Module, as shown, using the (2) .190-32 x .500" screws, (2) lock washers, and (2) flat washers supplied.



- D. Connect the Aux. CT Harness to the Aux. CT Module plug. Plug the other end of the Aux. CT Harness into its receptacle on the right side of the Trip Unit.
- E. Connect the Sensor Harness to the proper terminals on the Aux. CT Module. Refer to the Retrofit Application Data, supplied with the Retrofit Kit, for detailed wiring specifications.
- F. Connect the Sensor Harness ground wire (with ring terminal) to the Aux. CT Module, as shown, using the (1) .190-16 × .500" screw, (1) lock washer, and (1) flat washer supplied. Route the Sensor Harness between the Trip Unit / Aux. CT Module Assembly and the Glass Poly Insulation Barrier. Final Sensor Harness connections will be made later in the Retrofit process.





- G. Route the DTA Wires over to the Aux. CT Module. Connect the "+" DTA Wire to the "OP" terminal and the unmarked wire to the "ON" terminal on the Aux. CT Module.
- H. Connect the External Harness to the Trip Unit. Refer to the Retrofit Application Data, supplied with the Retrofit Kit, for detailed wiring specifications.



NOTE: For RMS/R 510 Basic Kits, the External Harness is the plug pictured above. It is to be plugged into the right side of the Trip Unit.

- I. For Kits Supplied With a PT Module Only: Plug the connector from the PT Module into its receptacle on the External Harness.
- J. Secure the External Harness to the Aux. CT Module Mounting Platform, as shown, using the (2) wire clamps, (2) 138-32 x .500" thread cutting screws, (2) lock washers, and (2) flat washers supplied.



For Kits Supplied With An Auxiliary Switch Only.


Step 7: Installing the Auxiliary Switch



- A. Cut 2.75" off the end of the Microswitch Arm.
- B. Mount the Microswitch to the Auxiliary Switch Mounting Bracket, as shown, using the (2) .138-32 x 1.00" screws, (4) flat washers, (2) lock washers, and (2) nuts supplied.



C. Route the two (2) wires with ring terminals from the External Harness between the Trip Unit and Glass Poly Insulation Barrier to the Auxiliary Switch Assembly. Connect one (1) wire to the normally open terminal and the other wire to the common terminal.

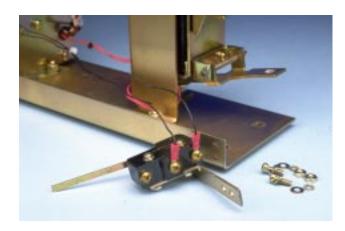

D. Mount the Auxiliary Switch Assembly to the Aux. CT Module Mounting Platform, as shown, using the (2) .164-32 x .500" screws, (4) flat washers, (2) lock washers, and (2) nuts supplied.



For Kits Supplied with a Breaker Mounted CPT Only.

Step 8: Mounting the Breaker Mounted CPT



A. Align the holes in the Breaker Mounted CPT with the predrilled holes in the Aux. CT Module Mounting Platform, as shown.

Secure the Breaker Mounted CPT to the Aux. CT Module Mounting Platform using the (4) .190-32 x .500" screws, (8) flat washers, (4) lock washers, and (4) nuts supplied. Note that the mounting screws must be inserted from the bottom of the Mounting Platform and that the X1 and X2 terminals must face the front of the Mounting Platform.



B. Remove the External Harness Plug installed in the Trip Unit. Insert the black plug of the CPT Harness into the same receptacle in the Trip Unit. Reinsert the External Harness Plug just removed into the female receptacle on the CPT Harness.



Cutler-Hammer

- C. Route the CPT Harness between the Trip Unit and Insulation Barrier to the Breaker Mounted CPT. Strip .250" of insulation and attach a .138" ring terminal to each wire of the CPT Harness. Connect the CPT Harness wires to the X1 and X2 terminals of the CPT.
- D. Position the fuses on the High Voltage (HV) Wires in an accessible location. Route the HV Wires between the Trip Unit and Insulation Barrier to the Breaker Mounted CPT, then cut the Load Side of each HV Wire to an appropriate length. Strip .250" from the Load Side HV Wires and attach a .138" ring terminal to each. Attach the HV Wires to the CPT terminals to achieve the required voltage (see the following table). The HV Wires will be connected to the Breaker Stabs later in the Retrofit Process.

480 Volt Circuit	H1 & H4
240 Volt Circuit	H1 & H3
208 Volt Circuit	H1 & H2



Step 9: Installing the Aux. CT Module Mounting Platform Assembly



A. For Kits Supplied With a PT Module Only:
Set the Aux. CT Module Mounting Platform
Assembly in front of the Breaker. Route the
PT Wires to a position suitable for connection
to the inside Breaker Phase Frames. The PT
Wires are marked for connection to Phases 1,
2, and 3 with corresponding numbers.

NOTE: Before cutting the PT Wires verify the Phase Convention used on this Breaker Application.

Move the PT Wire markers to a position where they will still be attached to the wires after cutting. Cut the wires to length, strip each wire .250", and install a .190" ring terminal on each wire. Secure each PT Wire to the appropriate Phase Frame, as shown, using the existing threaded holes and the (3) .164-32 x .375" screws, (3) lock washers, and (3) flat washers supplied.





B. While keeping all wires clear, slide the Aux. CT Module Mounting Platform Assembly into the bottom of the Breaker. Align the holes in the Aux. CT Module Mounting Platform Assembly with the holes drilled in the Breaker Frame in Step 3-C. Secure the Aux. CT Module Mounting Platform Assembly to the Breaker Frame, as shown, using the (4) .250-20 x .750" bolts, (8) flat washers, (4) lock washers, and (4) nuts supplied. Note that the bolts must be inserted from the bottom of the Breaker. Therefore, the front of the Breaker must be raised to allow the bolts and flat washers to be installed.



Step 10: Connecting the Reset and Trip
Assemblies



- A. Remove and scrap the cotter pins securing the original Pivot Pins on the left side of the Breaker Trip Mechanism. Remove and save the Pivot Pins.
- B. Remove the lock nut and brass spacer from the adjustment screw on the bottom of the Trip Assembly.
- C. Insert the Trip Assembly adjustment screw into the hole in the Trip Arm on the DTA as shown. Install the brass spacer and lock nut.






- D. Align the holes in the Trip Assembly Glass Poly Bar with the holes in the Breaker Trip Mechanism from which the Pivot Pins were removed in Step 10-A.
- E. Secure the Trip Assembly Glass Poly Bar to the Breaker Trip Mechanism using the (4) flat washers and (2) cotter pins supplied. Note that a flat washer must be installed on both sides of the Trip Assembly Glass Poly Bar.



- F. Remove and save the two (2) original bolts from the left end of the Connecting Link Bar. Note that the third bolt is not removed.
- G. Remove the lock nut and large flat washer from the end of the Reset Assembly Shaft.
- H. Insert the Reset Shaft into the hole in the Reset Lever on the DTA, as shown. Reinstall the large flat washer and lock nut so that three (3) to four (4) threads are showing on the bottom of the Reset Shaft. Final adjustment will be made later in the Retrofit Process.

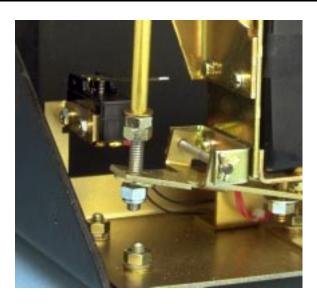

 Align the Reset Assembly Pivot Bracket with the holes in the Connecting Link Bar. Secure the Pivot Bracket to the Connecting Link Bar, as shown, using the original hardware.




Step 11: Adjusting the Reset and Trip Assemblies




NOTE: Final adjustments to the Reset and Trip Assemblies are performed with the Breaker in the OPEN position.

A. Measure the cage height (compressed spring length) of the spring on the Reset Shaft. The cage height should be .625". If the cage height is not correct, loosen the lock nut on the top of the Reset Shaft. Turn the adjusting nut until the required cage height is achieved. Tighten the lock nut.

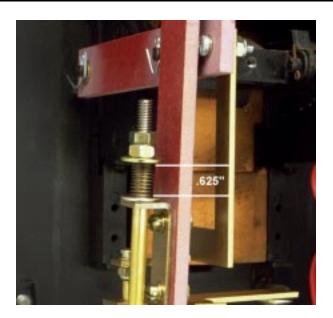


B. Measure the gap between the flat surface of the flange nut on the top of the DTA Shaft and the bottom surface of the Trip Arm. The gap should be .09 to .12". If the gap is not within this range, back off the flange nut and apply Loc-Tite[®] 242 to the threads of the DTA Shaft. Adjust the flange nut until the gap is within the acceptable range.

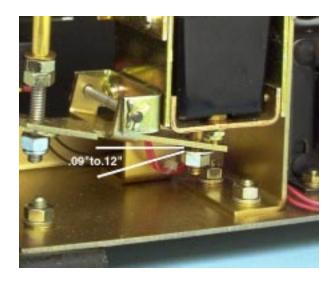



For Kits Supplied with a Breaker Mounted CPT Only.

Step 12: Connecting the HV Wires to the Breaker Stabs

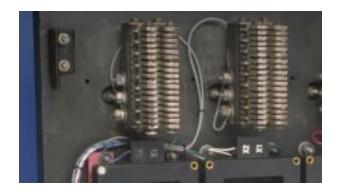

- A. Route the Line Side HV Wires to the right rear of the Breaker, then through the existing hole on the Breaker Back Plate, as shown.
- B. Route the HV Wires along the rear of the Breaker to the top Finger Clusters.

NOTE: The power convention of the ITE LX 1600 Series Breakers is normally *Top* to *Bottom*, meaning the Top Breaker Phase Frames are on the *Line Side* of the Breaker and the Bottom Breaker Stabs are on the *Load Side*.

The HV Wires from the CPT MUST BE ATTACHED to the *Line Side* of the Breaker. If it is determined that the power flow for the Breaker application is opposite the normal convention, the HV Wires must be attached to the Bottom Breaker Stabs.

NOTE: The Line Side HV Wires are longer than necessary and are cut during the following steps. Before cutting the wires, be sure that sufficient length is left so that the connections can be made to the correct Breaker Stabs.

C. Remove one (1) bolt securing the Finger Cluster to the Breaker Stab from either the

- Phase 1 and Phase 2, or Phase 2 and Phase 3 Finger Clusters.
- D. Cut the HV Wires to the appropriate length for attachment to the appropriate Breaker Stabs. Strip .250" from each HV Wire and attach a .250" ring terminal. Using the hardware removed in Step 12-C, connect the HV Wires to the appropriate Breaker Stabs.

Step 13: Installing the Sensors



A. Route the Sensor Harness to the right rear of the Breaker, then through the existing hole on the Breaker Back Plate, as shown.




B. Secure the "Z" Mounting Brackets to the Sensor Mounting Angle, as shown, using the (2) .375-16 x 1.00" bolts, (4) flat washers, (2) lock washers, and (2) nuts supplied.



- C. Mount the Sensors to the Sensor Mounting Angle, as shown, using the (6) .250-20 × 1.75" screws, (12) flat washers, (6) lock washers, and (6) nuts supplied.
- D. Install the (2) .190-32 nylon screws, (4) flat washers, (2) lock washers, and (2) nuts in the upper left and right corners of the Sensor Assembly. Do not tighten the nuts at this time.



E. Mount the (2) Glass Poly Sensor Mounting Plates, as shown, to the Breaker Frame, using the original hardware.

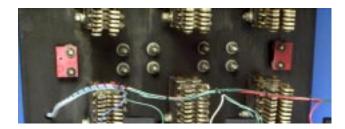

F. With the Sensor Assembly resting on the work surface, close to the Breaker, connect the ring terminals of the Sensor Harness to the Sensors. Refer to Section 12 of the Retrofit Application Data, supplied with the Retrofit Kit, for detailed wiring specifications.



G. Remove the top bolts securing the Secondary Contact Rack near the bottom of the Breaker. Mount the Sensor Assembly to the Breaker Frame, as shown, using the hardware.



H. Turn the two (2) nylon screws, located in the upper corners of the Sensor Assembly, until they have started in the threaded holes in the Glass Poly Sensor Mounting Plates.
Continue turning the screws until the Sensor Assembly is parallel to the Breaker Back Plate. Do not over-tighten the screws. Once the Sensor Assembly is parallel to the Breaker Back Plate, tighten the nuts previously installed on the nylon screws against the Sensors to lock the screws in place.



Step 14: Testing the Breaker

- A. Measure the force necessary to trip the Breaker at the point where the DTA Shaft contacts the Trip Finger. The force necessary to trip the Breaker MUST NOT EXCEED 3 lbs.
- B. The Retrofit must be tested using primary injection. Refer to Section 8 of the Instructions for the Application of Digitrip RMS Retrofit Kits on Power Circuit Breakers (Publication AD-33-855-1, June 1997), supplied with the Retrofit Kit, for detailed testing procedures and specifications. For test information specific to the Trip Unit, refer to the IL publication supplied with the Retrofit Kit (see the Pick List for the IL number).
- C. While Section 8 of the *Instructions for the Application of Digitrip RMS Retrofit Kits on Power Circuit Breakers* provides the information necessary for testing the Breaker, please keep the following notes in mind when reviewing other sections of the publication.

CAUTION: When all testing is complete, the Trip Unit must be reset. Failure to do so may cause the Battery in the Rating Plug to run down.

NOTES:

- 1. Publication AD-33-855 was created specifically for the "hundred" series (500, 600, 700, etc.) Retrofit Kits. Therefore certain sections and figures do not apply to the "ten" series (510, 610, 810, etc.) Retrofit Kits. Specifically, these are Sections 13 and 14, as well as Figures 3-2, 3-3, and 3-4.
- 2. For All Kits Other Than 510 Basic: If testing the Breaker with Short Delay or Ground Fault functions, be sure to either plug in the Cell Harness Assembly or use the Zone Interlock Shorting Plug. Failure

- to do so may result in shorter than expected trip times.
- 3. For 810 and 910 Kits Only: Without any power applied to the system (neither the 120 volt power supply nor the Aux. Power Module connected), plug the External Harness into the Cell Harness and check the impedance between COM 1 and COM 2. The impedance should be between one (1) and three (3) ohms. If the impedance is not within this range, trace the wiring and examine each connection to assure its integrity.

Confirm that the IMPACC communication wiring is correct by following the procedures detailed in Section 7.4 of the Instructions for the Application of Digitrip RMS Retrofit Kits on Power Circuit Breakers. Note that for 810 and 910 Kits, the impedance between COM 1 and COM 2 should be between one (1) and three (3) ohms.

When testing is complete, disconnect the External Harness from the Cell Harness.

For Kits Supplied With a Cell Harness Only.

Step 15: Mounting the Cell Harness

- A. The Cell Harness is to be mounted in the Breaker Cell. The connector end is to be mounted on the right front side of the Cell, in a location suitable for connection with the External Harness. The Terminal Blocks can be mounted anywhere space is available in the Cell as long as connection to the External Harness can be made.
- B. Route the Cell Harness wiring to keep it away from any moveable parts within the Cell Housing.

Step 16: Installing the Retrofitted Breaker in the Cell



WARNING

Do not leave the Breaker in an intermediate position in the switchgear cell. Always leave it in the CONNECTED, DISCONNECTED, or (Optional) TEST position. Failure to do so could lead to improper positioning of the Breaker and flashover, causing death, serious personal injury, and / or property damage.

NOTE: It is the responsibility of the Retrofitter to insure proper Breaker / Cell fit. When racking the Breaker into the Connected position, the Retrofitter MUST FOLLOW BOTH the manufacturer's instructions and the customer's safety standards and procedures for racking a Breaker into the Connected position.

A. With the Breaker in the Open position and the springs discharged, slowly rack the Breaker into the Connected position, making sure there is no interference or binding. The Breaker should rack smoothly and without mechanical interference between any Breaker and Cell parts. The Retrofitter will feel some resistance when the primary fingers connect onto the stabs of the Cell. This is normal.

However, if any unusual resistance is detected that could be abnormal interference between Breaker and Cell parts, stop immediately and move the Breaker out of the Connected position. Examine what is causing the interference and correct the situation.




Digitrip Retrofit Kit Installation Components for the ITE LX-1600 Series Breakers

Step	Description	Style No.	Qty.	Comment
Step 3	Aux. CT Module Mounting Platform	From Step 6	1	
Step 4	DTA Assembly	4A35773G33	1	
	DTA Mounting Hardware	4A35773G12	1	
	.250-20 x .625" Lng. Hex Bolt		3	
	.250 Flat Washer Stl.		6	
	.250 Lock Washer Stl.		3	
	.250-20 Nut Hex Stl.		3	
	Loc-Tite [®] 242		1	
Step 5	Trip Unit		1	See Pick List
•	Rating Plug		1	See Pick List
	Aux. CT Module	6502C786	1	
	Trip Unit Mounting Parts	4A35773G06	1	
	Trip Unit Support Clip L.H.		1	
	Trip Unit Support Clip R.H.		1	
	.190-32 x .375 Lng. Screw Flat		4	
	.190 Flat Washer Stl.		6	
	.190 Lock Washer Stl.		6	
	.190-32 × 4.00 Lng. Screw Fil.		2	
	Brass Spacer		2	
Step 6	Aux. CT Module Assembly Parts	4A35773G05	1	
•	Aux. CT Module Mounting Platform		1	
	Glass Poly Insulation Barrier		1	
	.250-20 x .625 Lng. Hex Bolt		2	
	.250-20 × .750 Lng. Hex Bolt		4	
	.250 Flat Washer Stl.		12	
	.250 Lock Washer Stl.		6	
	.250-20 Nut Hex Stl.		6	
	.190-32 × .500 Lng. Screw Flat		2	
	.190 Flat Washer Stl.		2	
	.190 Lock Washer Stl.	050000004	2	
	PT Module	6502C82G01	1	
	.138-32 x .500 Lng. Screw Fil.		2	
	.138 Flat Washer Stl138 Lock Washer Stl.		4	
	.138 Lock Washer Sti.		2	
	Ring Terminals (.190, .250, .312, .375, .	500)	2	Each Size
	Aux. CT Harness	6502C84G01	1	Laur OIZE
	Sensor Harness	From Step 13	-	
	3311001 110111000	Trom Stop 10		



KL 33-LXC-2

	External Harness	6502C83G	1	
	External Harness Mounting Parts	4A35773G08	1	
	.190-16 × .500 Lng. Screw T.C.		1	
	.190 Flat Washer Stl.		1	
	.190 Lock Washer Stl.		1	
	.138-32 × .500 Lng. Screw T.C.		2	
	.138 Flat Washer Stl.		2	
	.138 Lock Washer Stl.		2	
	Wire Clamps		2	
Step 7	Aux. Switch Kit	4A35773G02	1	
Step 1	Microswitch	4/33/13/30/2	1	
	Mounting Bracket		1	
	.164-32 × .500 Long Screw Fil.		2	
	.164-32 x .375 Long Screw Fil.		3	
	.164 Flat Washer Stl.		7	
	.164 Lock Washer Stl.		5	
	.164-32 Nut Hex Stl.		2	
	.138-32 × 1.00 Long Screw Fil.		2	
	.138 Flat Washer Stl.		4	
	.138 Lock Washer Stl.		2	
	.138-32 Nut Hex Stl.		2	
Stop 0	Breaker Mounted CPT Kit	8259A91605	1	
Step 8	Dieakei Woulled Of T Kit	0239A91003	ı	
Step o	Ring Terminals (.138, .190, .250, .312,		2	Each Size
Step 6	Ring Terminals (.138, .190, .250, .312, HV Wire	.375, .500)		Each Size
отер о	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts		2 2 1	Each Size
отер о	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 x .500 Screw Fil.	.375, .500)	2	Each Size
элер о	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl.	.375, .500)	2 2 1	Each Size
Зієр о	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl.	.375, .500)	2 2 1 4	Each Size
Зієр о	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl.	.375, .500)	2 1 4 8	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl.	.375, .500)	2 1 4 8 4 4	Each Size
Step 8	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 x .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting	.375, .500) 4A35773G20	2 2 1 4 8 4 4	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt	.375, .500) 4A35773G20 From Step 6	2 1 4 8 4 4 1 4	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl.	AA35773G20 From Step 6 From Step 6	2 1 4 8 4 4 1 4 8	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 x .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 x .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl.	AA35773G20 From Step 6 From Step 6 From Step 6 From Step 6	2 1 4 8 4 4 1 4 8 4	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 x .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 x .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl.	AA35773G20 From Step 6 From Step 6	2 2 1 4 8 4 4 1 4 8 8 4 4 4	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil.	AA35773G20 From Step 6 From Step 6 From Step 6 From Step 6	2 2 1 4 8 4 4 4 1 4 8 4 4 4 3	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 x .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 x .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl.	AA35773G20 From Step 6 From Step 6 From Step 6 From Step 6	2 2 1 4 8 4 4 1 4 8 8 4 4 4	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil164 Flat Washer Stl.	AA35773G20 From Step 6 From Step 6 From Step 6 From Step 6	2 1 4 8 4 4 1 4 8 4 4 3 3	Each Size
Step 9	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil164 Flat Washer Stl.	AA35773G20 From Step 6 From Step 6 From Step 6 From Step 6	2 1 4 8 4 4 1 4 8 4 4 3 3	Each Size
	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil164 Flat Washer Stl164 Lock Washer Stl.	From Step 6	2 1 4 8 4 4 1 4 8 4 4 3 3 3	Each Size
Step 9	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil164 Flat Washer Stl164 Lock Washer Stl164 Lock Washer Stl.	From Step 6	2 1 4 8 4 4 1 4 8 4 4 3 3 3 3	Each Size
Step 9	Ring Terminals (.138, .190, .250, .312, HV Wire Breaker Mounted CPT Mounting Parts .190-32 × .500 Screw Fil190 Flat Washer Stl190 Lock Washer Stl190-32 Nut Hex Stl. Aux. CT Module Platform Mounting .250-20 × .750 Lng. Hex Bolt .250 Flat Washer Stl250 Lock Washer Stl250-20 Nut Hex Stl164-32 × .375 Lng. Screw Fil164 Flat Washer Stl164 Lock Washer Stl.	AA35773G20 From Step 6	2 1 4 8 4 4 1 1 4 8 4 4 4 3 3 3 3	Each Size

 

Step 12	.250 Ring Terminal	From Step 8	2	
Stop 12	Concor		2	See Pick List
Step 13	Sensor Mounting Ports	4A355773G07	ى 1	See Pick List
	Sensor Mounting Parts Sensor Harness	4A333773G07	1	
			1	
	Sensor Mounting Angle		1	
	Sensor Mounting "Z" Bracket		2	
	Sensor Mounting Plate		2	
	.375-16 × 1.00 Lng. Hex Bolt		2	
	.375 Flat Washer Stl.		4	
	.375 Lock Washer Stl.		2	
	.375-160 Nut Hex Stl.		2	
	.250-20 x 1.75 Lng. Hex Bolt		6	
	.250 Flat Washer Stl.		12	
	.250 Lock Washer Stl.		6	
	.250-20 Nut Hex Stl.		6	
	.190-32 x 2.00 Screw Nylon Pan		2	
	.190 Flat Washer Stl.		4	
	.190 Lock Washer Stl.		2	
	.190-32 Nut Hex Stl.		2	
0: 15	0.1111	05000570		
Step 15	Cell Harness	6503C57G	1	


NOTE: Due to the Wide Vintage of Breakers and Multiple Functions of the Retrofit Components, Some Excess Hardware May be Left When the Retrofit is Complete.

Torque Values for General Mounting

Decimal	Standard	Torque	Torque
Size (in)	Size	(in-lbs)	(ft-lbs)
.112	4-40	10	0.8
.138	6-32	18	1.5
.164	8-32	36	3.0
.190	10-32	46	3.8
.250	1/4-20	100	8.3
.312	5/16-18	206	17.2
.375	3/8-16	356	29.7
.438	7/16-14	572	47.7
.500	1/2-13	856	71.3

Torque Values for Copper BUS Connectors

Decimal	Standard	Torque	Torque
Size (in)	Size	(in-lbs)	(ft-lbs)
.250	1/4-20	60	5
.312	5/16-18	144	12
.375	3/8-06	240	20
.500	1/2-13	600	50

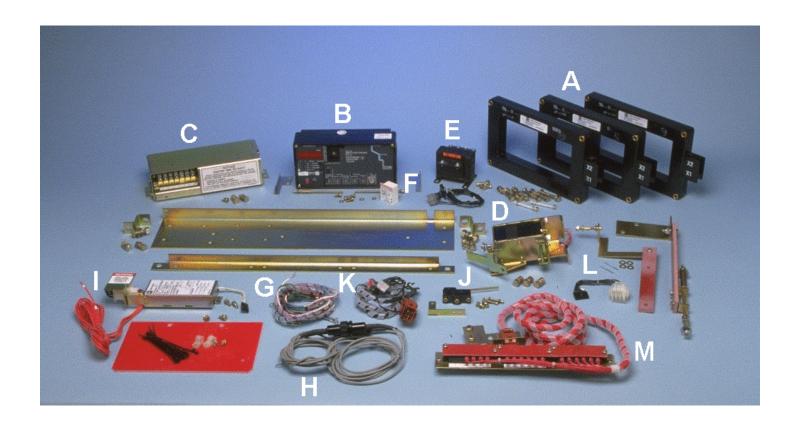


- A. Sensors
- B. Trip Unit
- C. Auxiliary CT Module
- D. DTA Assembly
- E. Breaker Mounted CPT
- F. Rating Plug
- G. Sensor Harness

 - H. HV Wires
- I. PT Module
- J. Auxiliary Switch
- K. External Harness
- L. Auxiliary CT Harness
- M. Cell Terminal Block Assembly







We wish to thank you for purchasing the Digitrip Retrofit System. Digitrip Retrofit Kits are designed and manufactured in America with pride. All the components are engineered to fit the existing Circuit Breaker with little or no modifications to the existing Breaker. However due to the wide variety and vintage of Breakers in use today, an occasional problem may arise. Please contact us with any questions, comments or concerns.

Phone: **1-800-WES-KITS** Fax: (412) 937-6441

(412) 937-6727

The instructions for installation, testing, maintenance, or repair herein are provided for the use of the product in general commercial applications and may not be appropriate for use in nuclear applications. Additional instructions may be available upon specific request to replace, amend, or supplement these instructions to qualify them for use with the product in safety-related applications in a nuclear facility.

The information, recommendations, descriptions, and safety notations in this document are based on Cutler-Hammer's experience and judgment with respect to Retrofitting of Power Breakers. This information should not be considered to be all inclusive or covering all contingencies. If further information is required, Cutler-Hammer should be consulted.

NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OR WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, ARE MADE REGARDING THE INFORMATION, RECOMMENDATIONS AND DESCRIPTIONS CONTAINED HEREIN. In no event will Cutler-Hammer be responsible to the user in contract, in tort (including negligence), strict liability or otherwise, for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage to or loss of use of equipment, plant or power system, cost of capital, loss of profits or revenues, cost of replacement power, additional expenses in the use of existing power facilities, or claims against the user by its customers resulting from the use of the information, recommendations, and descriptions contained herein.

Cutler-Hammer
Westinghouse & Cutler-Hammer Products
Five Parkway Center
Pittsburgh, PA 15220

Effective October, 2000

