
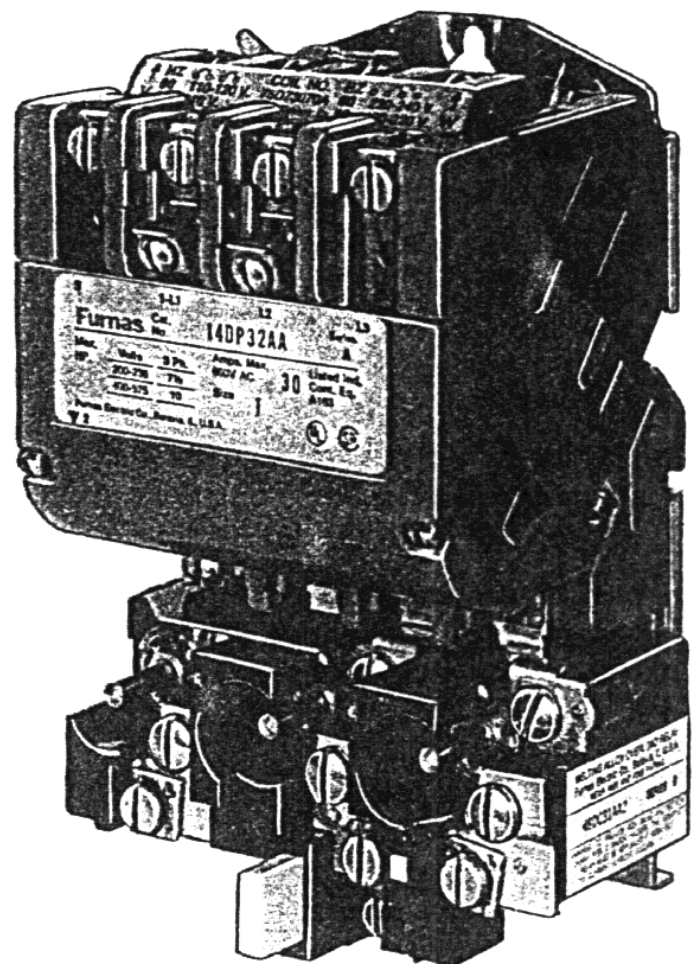


December, 1983

Starters & Contactors
00, 0, 1, 1P & 1¾

Class 14 & 40
14BP, 14CP, 14DP, 14EP,
40BP, 40CP, 40DP, 40EP

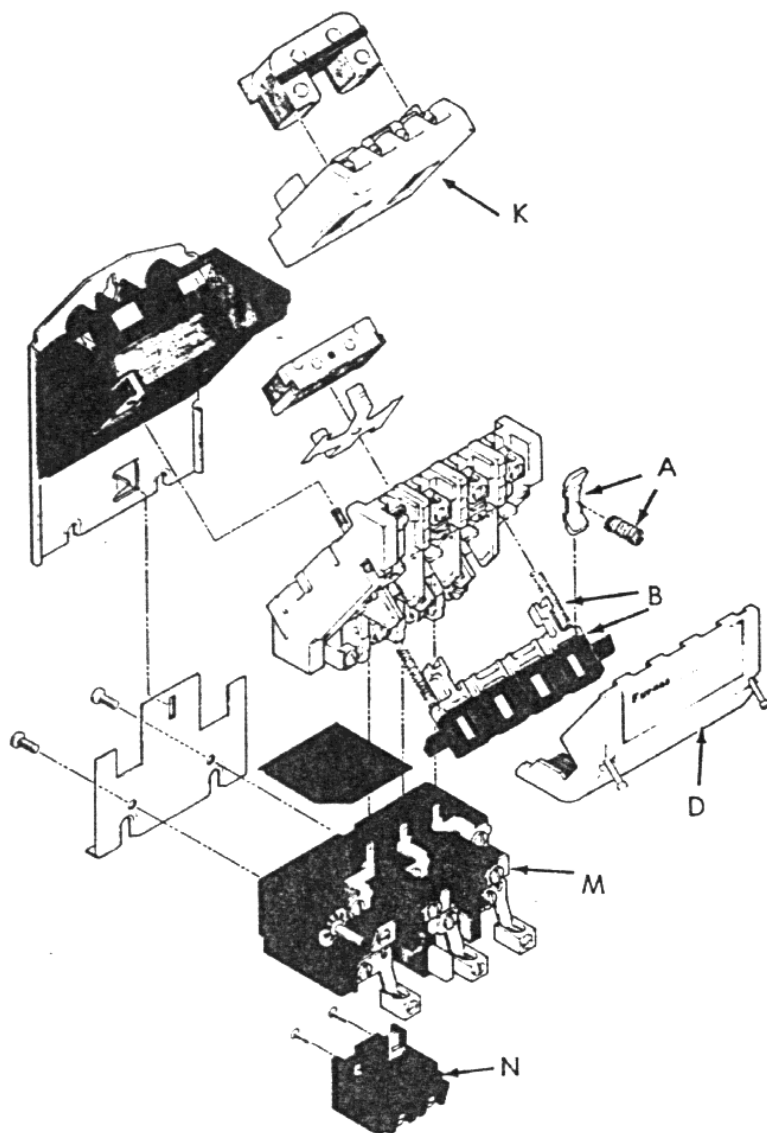

Item	Part Description	Part Number	Item	Part Description	Part Number
A	Contacts & Spring, One Complete Pole Power Pole	Size 00 75BF14 0 75CF14 1 75DF14 1P & 1¾ 75EF14	M	Overload Relays (includes baseplate)	
	Interlock Pole (includes spring retainer)	All Sizes 75AF14		Melting Alloy (std)	Size 00-1 1 Pole 48DC11AA3 3 Pole 48DC31AA3
B	Cross Arm (less contacts) With Cross Arm Springs	75P1000		Bimetal	Size 00-1 1 Pole 48DC17AA3 3 Pole 48DC37AA3
D	Contact Board Cover	D29079001			Size 1¾ 1 Pole 48EC17AA3 3 Pole 48EC37AA3
K	Coil			Amb Comp Bimetal	Size 00-1 1 Pole 48DC18AA3 3 Pole 48DC38AA3
	60 Hertz 50 Hertz				Size 1¾ 1 Pole 48EC18AA3 3 Pole 48EC38AA3
	120v 110v	75D73070F	N	Melting Alloy Overload Kit — NO Contact	48ACNO
	110-120v/220-240v 110v/190-220v	75D73070A			
	220-240v/440-480v 190-220v/380-440v	75D73070C			
	550-600v 550v	75D73070E			
	For other voltages specify the number stamped on the coil.				

NOTE: When ordering replacement parts, give catalog number of control and part name and number.

Furnas Electric Company 1000 McKee Street, Batavia, Illinois 60510