


JANUARY, 1954

WESTINGHOUSE INDUSTRIAL CONTROL

TYPES AT-4, AT-5, AT-6, AT-7, AT-8, AT-17 DOUBLE POLE TIMETAFACTORS

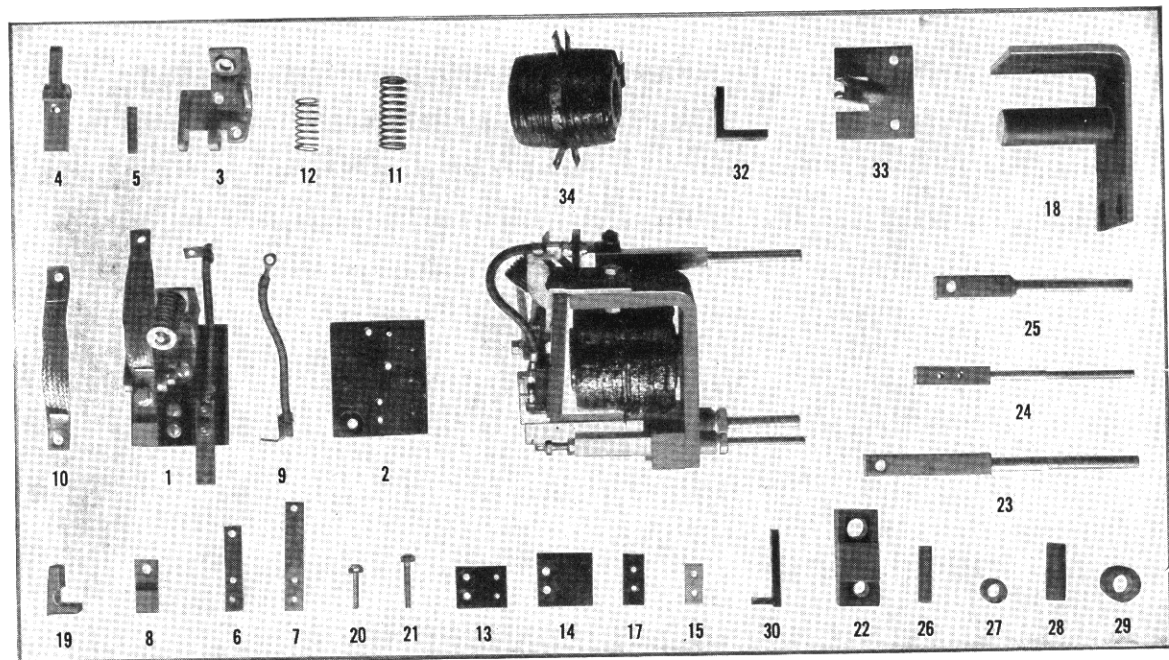

REF. NO.	DESCRIPTION OF PART	AT-4	AT-5	AT-6	AT-7	AT-8	AT-17	NO. REQD.
		STYLE NUMBER OF PART						
	Timetactor.....	830 306-A	830 307-A	830 308-A	830 309-A	830 310-A	856 113	..
1	Armature Complete.....	830 342	830 373	830 401	830 504	830 509	1397 994	1
2	Bare Armature.....	830 346	830 346	830 346	830 346	830 346	830 346	1
3	Armature Bracket.....	830 345	830 345	830 345	830 345	830 345	830 345	1
4	Armature Lever.....	829 687	829 687	829 687	829 687	829 687	829 687	2
5	Armature Lever Pin.....	830 297	830 297	830 297	830 297	830 297	830 297	2
6	Auxiliary Moving Contact—Short.....	793 013	793 013	793 013	793 013	793 013	793 013	1
7	Auxiliary Moving Contact—Long.....	793 014	793 014	793 014	793 014	793 014	793 014	1
8	Main Moving Contact.....	816 937	816 937	816 937	816 937	816 937	816 937	2
9	Auxiliary Moving Contact Shunt.....	830 344	830 344	830 344	830 344	830 344	830 344	1
10	Main Moving Contact Shunt.....	808 972	808 972	808 972	808 972	808 972	808 972	2
11	Armature Spring.....	816 888	816 888	816 888	816 888	816 888	816 888	1
12	Contact Spring.....	830 343	830 343	830 343	830 343	830 343	830 343	2
13	Auxiliary Moving Contact Base.....	830 349	830 349	830 349	830 349	830 349	869 123	1
14	Auxiliary Moving Contact Base Shield.....	830 350	830 350	830 350	830 350	830 350	869 124	1
15	Auxiliary Moving Contact Spacer.....	809 417	809 417	809 417	809 417	...	869 125	1
17	Auxiliary Moving Contact Insulation Channel—Short.....	830 351	830 351	830 351	830 351	830 351	830 351	1
17	Auxiliary Moving Contact Insulation Channel—Long.....	830 347	830 347	830 347	830 347	830 347	830 347	1
18	Frame With Core.....	793 015	793 015	793 015	793 015	793 015	793 015	2
19	Main Stationary Contact.....	755 077(2)	755 077(1)	755 077(1)	817 517(2)	817 517(1)	817 517(1)	()
20	Auxiliary Stationary Contact—1" Long.....	...	...	817 517(1)	...	...	833 128	()
21	Auxiliary Stationary Contact—1¼" Long.....	...	...	...	...	...	833 128	1
*	Auxiliary Stationary Contact—1½" Long.....	...	...	...	...	...	869 120	1
22	Stationary Contact Base.....	830 348	830 348	830 348	830 348	830 348	830 358	2
23	Main Stationary Contact Stud.....	830 358	830 358	830 358	830 358	830 358	830 358	1
24	Auxiliary Stationary Contact Stud.....	830 359	830 359	830 359	830 359	830 359	830 359	1
25	Main Moving Contact Shunt Stud.....	830 360	830 360	830 360	830 360	830 360	830 360	1
26	Micarta Tube—Long—Auxiliary Station.....	830 354	830 354	830 354	830 354	830 354	830 354	1
27	Micarta Tube—Short—Contact Stud.....	830 355	830 355	830 355	830 355	830 355	830 355	1
28	Micarta Tube—Long—Main Stationary.....	830 356	830 356	830 356	830 356	830 356	830 356	2
29	Micarta Tube—Short—Contact Stud.....	830 357	830 357	830 357	830 357	830 357	830 357	2
30	Auxiliary Stationary Contact Bracket—Marked.....	830 352	830 352	830 352	830 352	...	869 121	1
31	Auxiliary Stationary Contact Bracket—Brass—Short.....	830 362	830 362	830 362	830 362	...	...	1
*31-A	Auxiliary Stationary Contact Bracket—Brass—Long.....	830 361	830 361	830 361	830 361	...	...	1
32	Auxiliary Stationary Contact Bracket—Brass—Long.....	830 361	830 361	830 361	830 353	830 353	869 122	1
32	Auxiliary Moving Contact Shunt Bracket.....	830 353	830 353	830 353	830 353	830 353	869 122	1
33	Armature Support.....	597 541	597 541	597 541	597 541	597 541	597 541	1
††34	Operating Coil.....	††	††	††	††	††	††	1

Ø Parts indented are included in the part under which they are indented.
* Not illustrated.
†† When ordering specify identification number stamped on coil.
() Figures in parenthesis indicate number required.

Westinghouse Electric Corporation

Buffalo 5, N. Y.

Mailed to: E41-6B,C,E,H; D61-6B,C,D,S; C-460

Printed in U.S.A.