



non-reversing Life-Linestarter class 11-200

renewal
parts data
11-200A3

page 1

size 3 • type N
three and four pole




Life-Linestarter style numbers


starter class number	no. of poles	equipment built-in	style number of Linestarter or operating coil											
			110 volt 25 cycle	110 volt 50 cycle	110 volt 60 cycle	220v-25c 380v-50c 400v-50c 440v-60c 480v-60c	220 volt 50 cycle	208v-60c 220v-60c	440 volt 25 cycle	400v-50c 440v-50c	550 volt 25 cycle	550 volt 50 cycle	550 volt 60 cycle	600 volt 60 cycle
open starter														
11-200N.3	3		1596 823	1596 817	1596 812	1596 814	1596 818	1596 813	1596 821	1596 819	1596 822	1596 820	1596 815	1596 816
11-200N.3	3		1746 165	1746 159	1746 154	1746 156	1746 160	1746 155	1746 163	1746 161	1746 164	1746 162	1746 157	1746 158
11-000N.3	4		1598 113	1598 107	1598 102	1598 104	1598 108	1598 103	1598 111	1598 109	1598 112	1598 110	1598 105	1598 106
standard sheet steel (NEMA I) enclosure														
11-200NS3	3		1596 725	1596 719	1596 714	1596 716	1596 720	1596 715	1596 723	1596 721	1596 724	1596 722	1596 717	1596 718
11-200NS3	3		1746 179	1746 173	1746 168	1746 170	1746 174	1746 169	1746 177	1746 175	1746 178	1746 176	1746 171	1746 172
11-000NS3	4		1598 085	1598 079	1598 074	1598 076	1598 080	1598 075	1598 083	1598 081	1598 084	1598 082	1598 077	1598 078
11-200NS31	3	pushbutton	1596 907	1596 901	1596 896	1596 898	1596 902	1596 897	1596 905	1596 903	1596 906	1596 904	1596 899	1596 900
11-200NS31	3	pushbutton	1746 193	1746 187	1746 182	1746 184	1746 188	1746 183	1746 191	1746 189	1746 192	1746 190	1746 185	1746 186
11-000NS31	4	pushbutton	1599 411	1599 405	1599 400	1599 402	1599 406	1599 401	1599 409	1599 407	1599 410	1599 408	1599 403	1599 404
11-200NS32	3	selector switch	1599 475	1599 469	1599 464	1599 466	1599 470	1599 465	1599 473	1599 471	1599 474	1599 472	1599 467	1599 468
11-200NS32	3	selector switch	1746 207	1746 201	1746 196	1746 198	1746 202	1746 197	1746 205	1746 203	1746 206	1746 204	1746 199	1746 200
dust tight sheet steel (NEMA V) enclosure														
11-200NT3	3		1599 545	1599 539	1599 534	1599 536	1599 540	1599 535	1599 543	1599 541	1599 544	1599 542	1599 537	1599 538
11-200NT3	3		1746 221	1746 215	1746 210	1746 212	1746 216	1746 211	1746 219	1746 217	1746 220	1746 218	1746 213	1746 214
water tight (NEMA IV) enclosure														
11-200NW3	3		1599 587	1599 581	1599 576	1599 578	1599 582	1599 577	1599 585	1599 583	1599 586	1599 584	1599 579	1599 580
explosion proof (NEMA VII class I group D) enclosure														
11-200NU3	3		1619 541	1619 535	1619 530	1619 532	1619 536	1619 531	1619 539	1619 537	1619 540	1619 538	1619 533	1619 534
11-200NU31	3	pushbutton	1619 555	1619 549	1619 544	1619 546	1619 550	1619 545	1619 553	1619 551	1619 554	1619 552	1619 547	1619 548
explosion proof (NEMA IX class II group E,F,G) enclosure														
11-200NY3	3		1619 625	1619 619	1619 614	1619 616	1619 620	1619 615	1619 623	1619 621	1619 624	1619 622	1619 617	1619 618
operating coil														
			1490 646	1490 652	1490 645	1490 647	1490 653	1490 646	1490 650	1490 655	1490 651	1490 656	1490 648	1490 649

December, 1956


supersedes rpd 11-200A3 dated July, 1955
mailed to: E/588; D61-6A,C,S; C/302

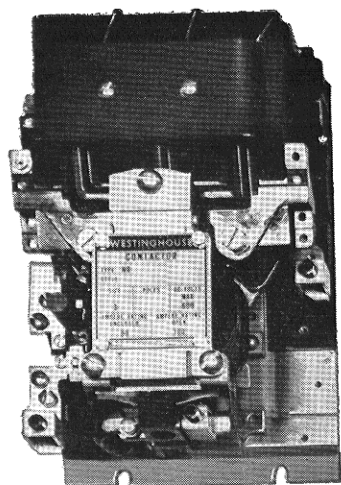

1

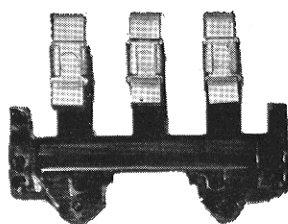

2

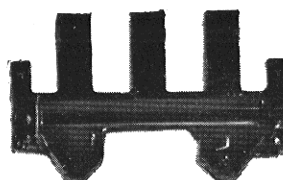

3




4




5



6

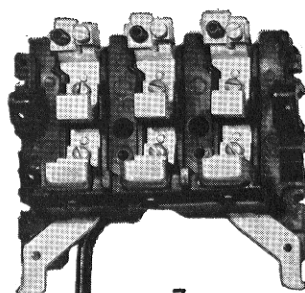

7

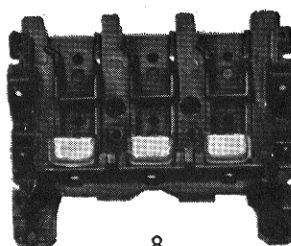


8



9



11

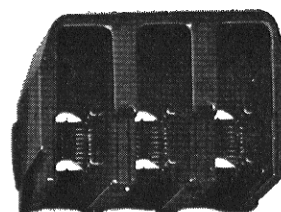

13




10




12



14

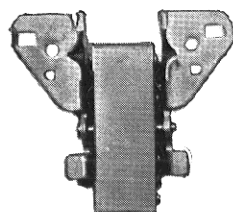


15

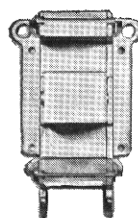

16




17

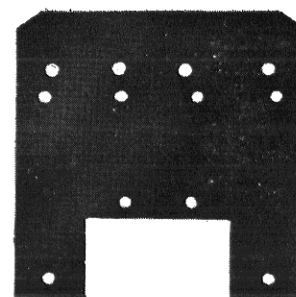

18




19

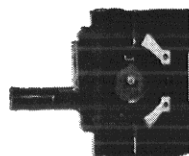

20



22

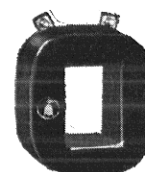

21

reference number	description of part	style number of part		number used
		three pole	four pole	
Δ	Life-Linestarter complete	see pg 1	see pg 1	1
1	contactor mechanical parts	1490 471 ■	1490 497 ■	1
2	cross bar complete	1490 465	1490 492	1
3	cross bar	1490 403	1490 481	1
4	moving contact	1490 414	1490 414	1 per pole
5	contact spring	1490 419	1490 419	1 per pole
6	moving contact support	1490 372	1490 372	1 per pole
7	base complete	1490 429	1490 491	1
8	base with arc cups	1600 431	1600 434	1
9	stationary contact	1490 415	1490 415	2 per pole
10	line terminal with connectors	1490 416	1490 416	1 per pole
11	load terminal block (center)	1490 433		1
12	terminal	1490 407		1
12	load terminal (inner)		1490 405	2
13	arc box	1490 468	1600 430	1
14	kickout spring	1490 418	1490 418	1
15	armature complete	1490 399	1490 482	1
16	stationary magnet	1490 390	1502 703	1
17	shading coil	1490 353	1490 353	2
18	base insulation	1490 398	1502 701	1
12	load terminal (outer)	1490 405	1490 405	2
19	type L-60 electrical interlock (inboard) Δ	1490 460	1490 460	1
Δ	type L-60 electrical interlock (outboard) Δ	1490 456	1490 456	..
20	type MW overload relay base assembly	1776 902	1776 902	2
Δ	pushbutton complete (when used)	1600 671	1600 671	1
Δ	pushbutton unit (when used)	1400 797	1400 797	1
Δ	selector switch complete (when used)	1600 672	1600 672	1
Δ	selector switch (when used)	1400 796	1400 796	1
21	operating coil	see pg 1	see pg 1	1
22	relay heater		□	2
	contact kit—3 pole	1625 563		1
	contact kit—2 pole		1625 561	2

parts indented are included in the part under which they are indented

■ not supplied without coil; specify style number of coil desired

□ when ordering heater specify code marking stamped on heater

Δ one additional inboard and two outboard interlocks may be installed, either normally open or normally closed. See I.L. 10708

Δ not illustrated

recommended stock of renewal parts

Contacts, springs, heaters and other parts are subject to wear under normal operating conditions or damage due to abnormal conditions. We recommend that a quantity of these parts be stocked to minimize service interruptions due to breakdowns. If continuous operation is of primary consideration or conditions are abnormal a comparatively large stock is essential.

kit of normal wearing parts

Normal wearing parts for the two pole and three pole Life-Linestarters have been packaged in a single carton contact kit. A kit contains one spring, one moving contact and two stationary contacts for each pole. It is more economical to purchase these parts in this convenient, easily identified kit form. Order contact kit style number 1625 563 for three pole Linestarter and two style number 1625 561 kits for a four pole.

ordering information

- Name the part and give its style number.
- Give the complete nameplate reading.
- State method of shipment desired.
- Send all orders or correspondence to nearest sales office of the company.
- Combine orders to total at least five dollars as this is minimum charge. Minimum charge does not apply to contact and spring kits.



