

TABLE OF CONTENTS

Description	Page
1. INTRODUCTION	2
Receiving	2
Handling	2
Storage	2
2. INITIAL BREAKER PREPARATION	3
3. VACUUM CIRCUIT BREAKER DESCRIPTION	4-6
Vacuum Interrupters	4
Primary Disconnects	4
Operating Mechanism	4
Control Circuitry	4
Auxiliary Switch	4
Charging Motor Limit Switch	5
Motor Relay	5
Anti-Pump Relay	5
Latch Check Switch	6
Indicators	6
Manual Charging Arm	6
4. OPERATING MECHANISM - DESCRIPTION OF OPERATION	7-8
Drive Spring Charging	7
Closing Operation	8
Opening Operation	8
Spring Discharge Interlocks	8
5. ADJUSTMENTS	9-11
Trip Open Eccentric	9
Toggle Bearing Clearance	9
Charging Motor Limit Switch	10
Adjustments Affecting The Vacuum Interrupters	10
Drive Linkage	10
Spring Overtravel	10
Primary Contact Gap	11
Return Spring Pre-Loading Setting	11
Shock Absorber	11
Contact Compression	11
6. MAINTENANCE	12-14
Vacuum Interrupters	12
Insulating Surfaces	13
Mechanism	13
Electrical	13
Overhaul	13
Lubrication & Chart	14
7. RENEWAL PARTS	15
Minimum Requirements	15
Ordering Instructions	15
8. CONTROL SCHEMATIC DIAGRAMS	16-20



