

Westinghouse




Dc Magnetic Anti-Plugging Relay Type AYV, Small Frame

With Main and Auxiliary Contacts

Ordering Information

- Name the part and give its style number
- Give the complete nameplate reading
- Send all orders or correspondence to the nearest sales office of the Company

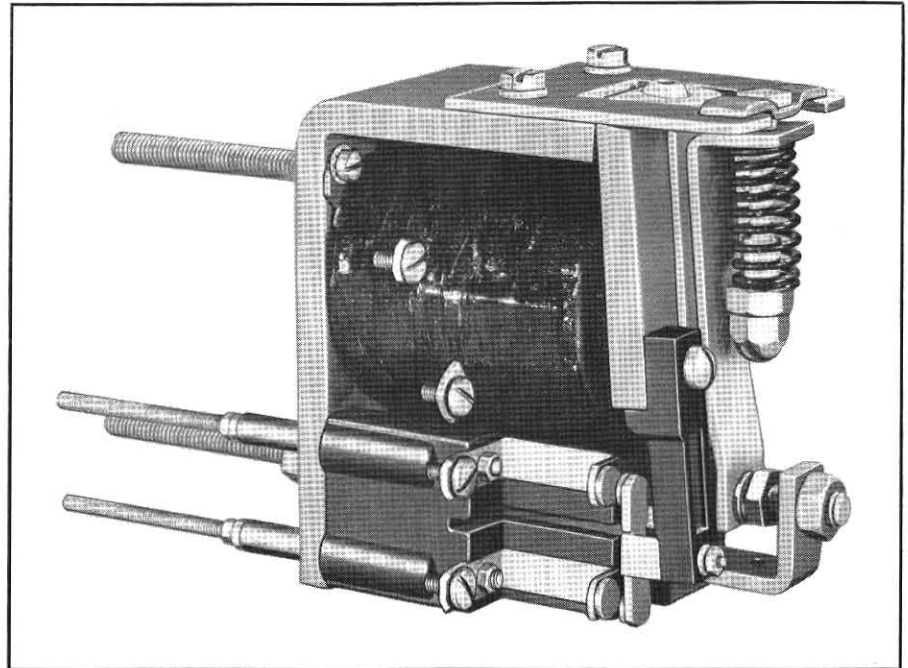


Relay-less Coil

Style Number of Variable Parts

Type Connection	Style Number	Auxiliary Contact Arm		Base with Auxiliary Contacts Reference 18	Contact Support With Stud Reference 28
		Break Reference 6	Make Reference 9		
11-S Rear	1297 395		1343 929(1)	1264 266	1258 684
11-S Front	1297 396		1343 929(1)	1292 374	1292 385
12-S Rear	1419 363	1264 288(1)	1343 929(1)	1264 270	1258 684
12-S Front	13A3512G40	1264 288(1)	1343 929(1)	1292 378	1292 385
21-S Rear	1406 667		1343 929(1)	1264 267	1258 684
21-S Front	13A3512G39		1343 929(1)	1292 375	1292 385

() Numbers in parenthesis indicate the number required.

Westinghouse

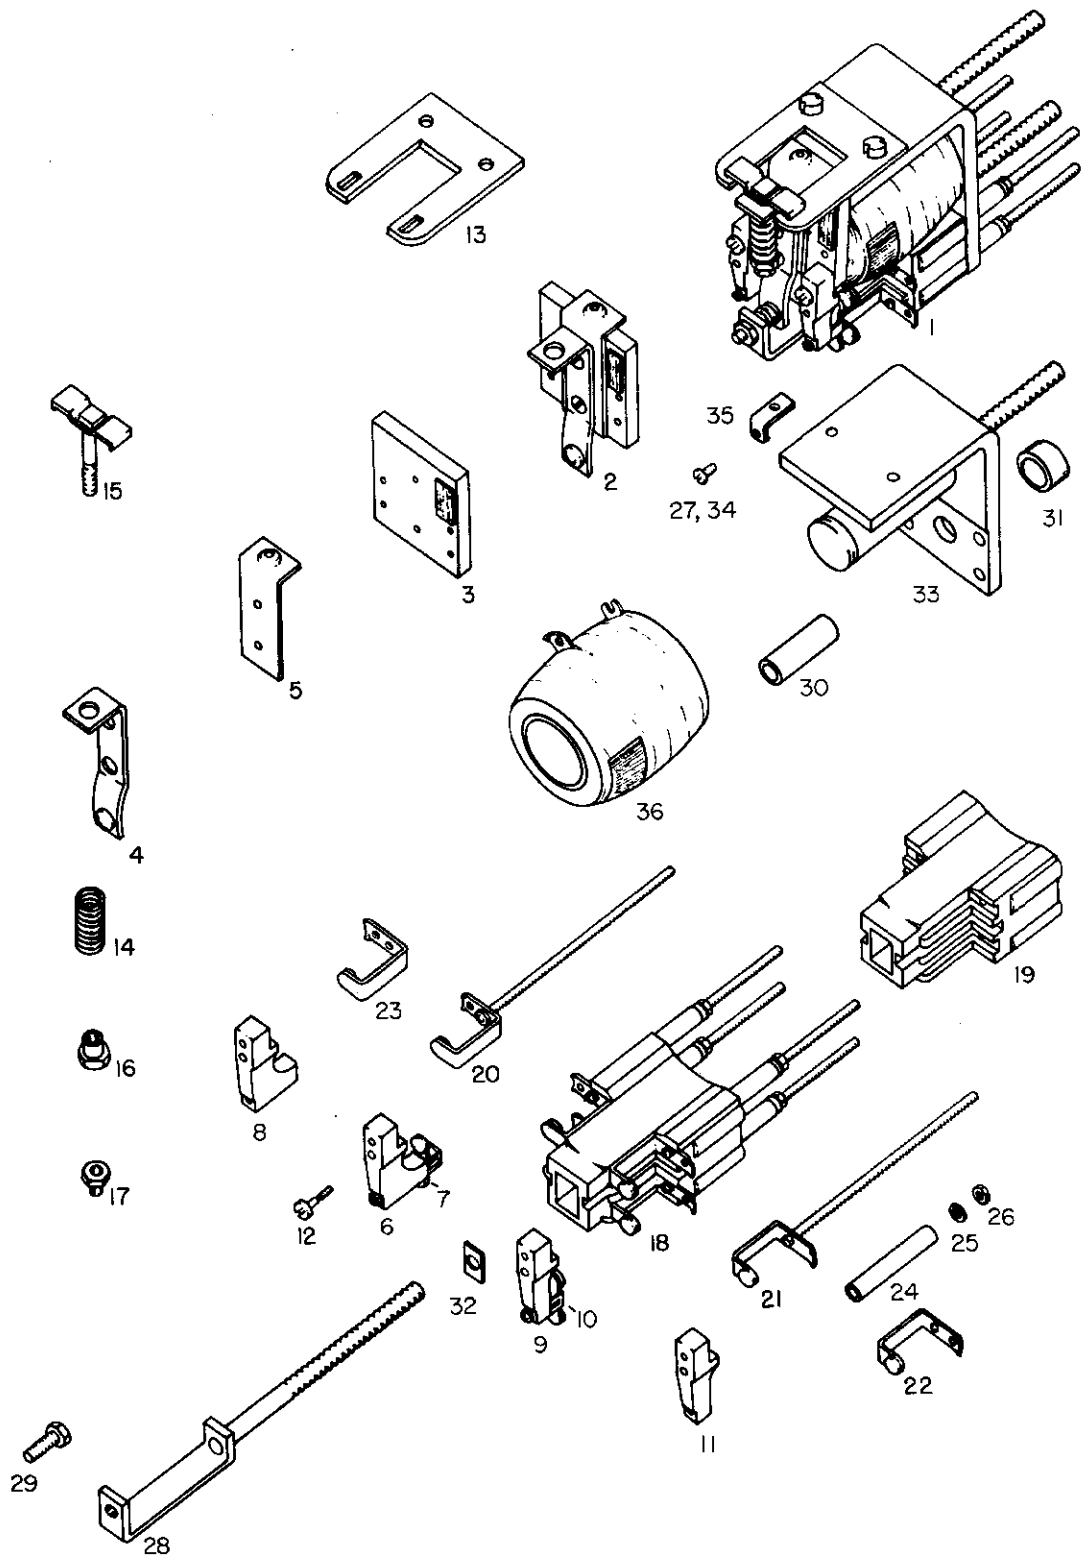

Westinghouse



Dc Magnetic Anti-Plugging Relay Type AYV, Small Frame

With Main and Auxiliary Contacts

Reference Number	Description of Part	No. Used	Style Number
1	Relay without coil	1	See page 1
2②	Armature complete	1	1619 958
3②	Armature only	1	1619 959
4	Main moving contact	1	1258 685
5	Armature guide	1	1258 677
6	Auxiliary contact arm complete – break	1	1264 288
7	Moving contact – break	1	1358 146
8	Contact arm – break	1	1343 926
9	Auxiliary contact arm complete – make	1	1343 929
10	Moving contact – make	1	1358 145
11	Contact arm – make	1	1343 928
12	Screw for contact arm	③	1258 965
13	Bearing plate	1	1258 668
14	Kickout spring	1	1258 960
15	Spring pin with clip	1	1264 287
16	Adjusting screw	1	1258 972
17	Cap nut with set screw	1	1343 879
18	Base with auxiliary contacts	1	See page 1
19 to 27	Parts for base		See below
28	Main stationary contact support with stud	1	See page 1
29	Main stationary contact	1	1292 387
30	Insulating tube – long	1	1258 719
31	Insulating tube – short	1	1258 721
32	Spacer	1	1264 139
33	Frame with core and stud	1	1619 960
34④	Terminal screw	2	970 317
34	Main contact screw	2	970 317
35④	Terminal for front connected relay	2	1289 477
36	Operating coil 115 volt	1	1311 832
	230 volt	1	1264 381
	550 volt	1	1320 626

② When ordering specify style number of relay.

③ One per auxiliary contact arm.

④ Used on front connected relay only.

Parts indented are included in the part under which they are indented.

Reference Number	Description of Part	Style Number of Part	Style Number of Base with Auxiliary Contacts					
			1264 266	1264 267	1264 270	1292 374	1292 375	1292 378
			Number Used					
18	Base with auxiliary contacts		1	1	1	1	1	1
19	Base	1258 666	1	1	1	1	1	1
20	Stationary contact with stud – make	1419 420	0	0	2	0	0	0
21	Stationary contact with stud – break	1419 419	2	4	2	0	0	0
22	Stationary contact – make	1258 707	0	0	0	2	4	2
23	Stationary contact – break	1258 708	0	0	0	0	0	2
24	Insulating tube	1258 715	2	4	4	0	0	0
25	Washer	1252 664	2	4	4	0	0	0
26	Nut for stud	1252 665	4	8	8	0	0	0
27	Terminal screw	970 317	0	0	0	2	2	4

**Dc Magnetic Anti-Plugging
Relay Type AYV, Small
Frame**

With Main and Auxiliary Contacts