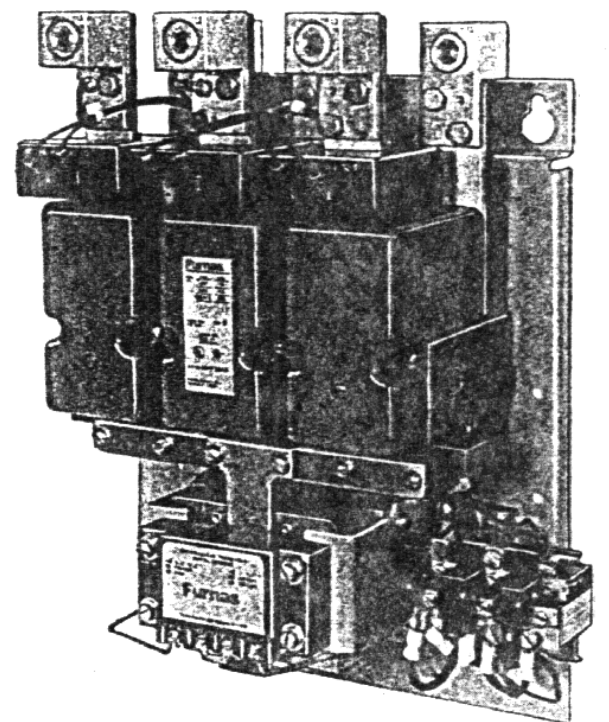
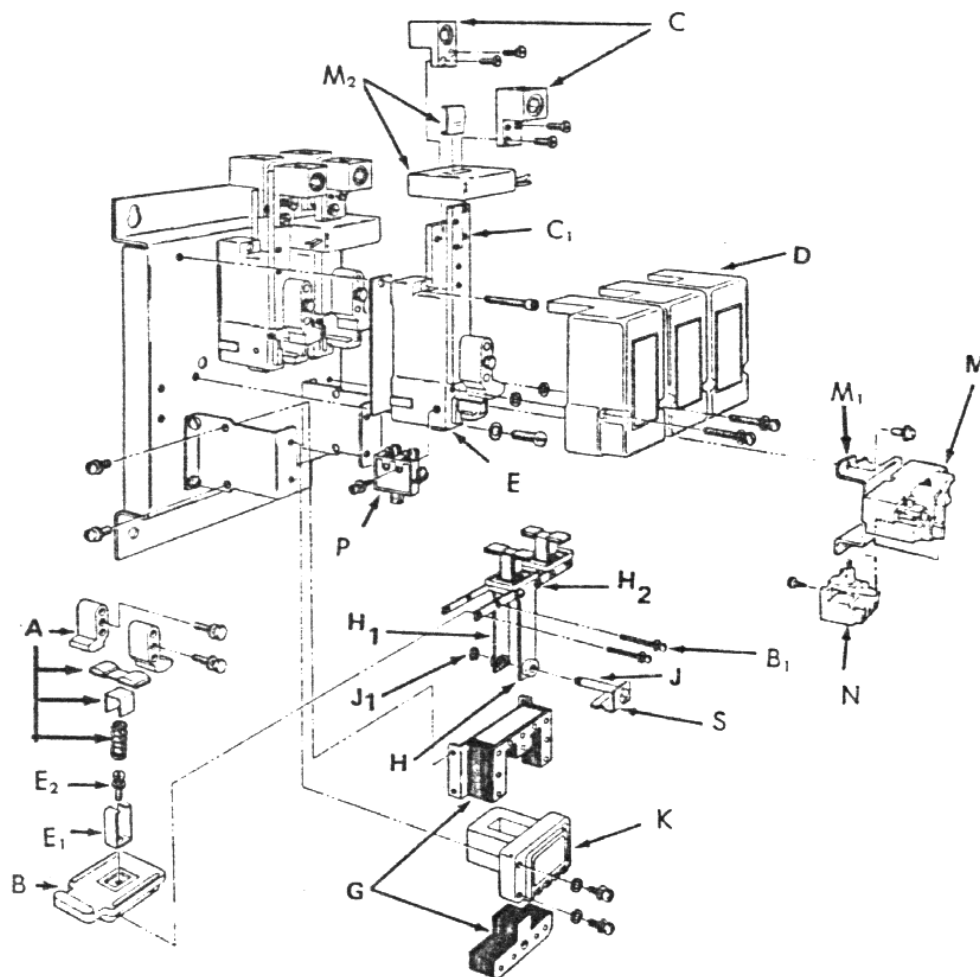


January, 1984

Starters and Contactors
4½ & 5

Class 14 & 40
14KF, 14RF, 40KB & 40RB
Series B


Item	Part Description	Part Number	Item	Part Description	Part Number
A	Contacts, Spring, and Spring Shield One Complete Pole	Size 4½ 75RB14 Size 5 75KB14	G	Magnet and Armature	D18826001
B	Cross Arm (less contacts)	D52051003	H	Front Pusher Assembly	D17066003
B1	Cross Arm Screw Size ¼-28x2 Rd Hd	S00114032	H1	Rear Pusher Assembly	D17066004
C	Lug		H2	Pusher Screw — Size ¼-28x2¼	S00114036
	Size 4½ & 5 Aluminum	Front D18748002	J	Armature Pin	D18742001
	Size 4½ & 5 Aluminum	Rear D18749002	J1	Armature Pin Retaining Ring	S00183006
	Size 4½ & 5 Copper	Front D29072002	K	Coil	
	Size 4½ & 5 Copper	Rear D29072002		60 Hertz 50 Hertz	
C1	Lug and Contact Support			110-120v/220-240v 110v/190-220v	D72069031
	Size 4½	Front D52118002		220-240v/440-480v 190-220v/380-440v	D72069032
	Size 5	Front D52118001		550-600v 550v	D72069033
	Size 4½	Rear D18756002		For other voltages specify the number stamped on the coil.	
	Size 5	Rear D18756001	M	Thermal Overload Relay	
D	Contact Board Cover with Screws			Melting Alloy (Std)	48DC31A4S9
	Size 4½ One Pole	D52087004		Bimetal	48DC37A4
	Size 5 One Pole	D52087003		Amb Comp Bimetal	48DC38A4
E	Contact Board (less hardware)		M1	Overload Support Bracket	D54892001
	Size 4½ One Pole	D20746004	M2	Current Transformer and Clip	48KBIT
	Size 5 One Pole	D20746003	N	Melting Alloy Overload Kit — NO Contact	48ACNO
E1	Contact Guide	D12101001	P	Auxiliary Interlock SPDT Left Hand Side	49L100103
E2	Contact Guide Screw Size ¼-20x½ Fil Hd Sems	S00227008	S	Retaining Clip	D18760001
				Split Lock Washer for B1, H1, H2	S00122006

NOTE: When ordering replacement parts, give catalog number of control and part description and number.

Furnas Electric Company 1000 McKee Street, Batavia, Illinois 60510