



Effective: June 1980

Supersedes I.L. 41-181.2J, dated March 1978

Type CM Phase Balance Current Relay

(I) Denotes Change Since Previous Issue



Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

1.0 APPLICATION

The type CM relay is an induction type relay designed to protect polyphase electrical machinery against phase unbalance or phase failure.

As shown in figure 6 the relay may be used with either three or two-current transformers. With three ct's the accuracy class must be at least C50; with two ct's the accuracy class must be at least C70. Otherwise ct errors during motor starting may cause undesired CM tripping.

2.0 CONSTRUCTION & OPERATION

The type CM relay consists of two main current units and their associated resistor and an indicating contactor switch (ICS), or an ac indicating contactor switch (ACS). The principal component parts of the relay and their location are shown in figures 1 and 2.

2.1. MAIN UNIT

Each main unit has a pair of electromagnets operat-

ing on a single disc. The disc is damped by a permanent magnet. Each disc carries its own set of contacts with the two sets being connected in parallel, in order that either disc may close the trip circuit. The electromagnet pair are mounted face to face on opposite sides of the disc, and so connected that the electrical torque of one electromagnet opposes that of the other, thus producing balanced operating torque on the disc when the magnitudes of the currents through each of the two electromagnets are equal. One of the electromagnets on the lower disc is connected in series with one of the electromagnets on the upper disc. Thus phase A current may balance phase B current on the upper disc, and phase B current balance C current on the lower disc. Consequently with balanced system conditions, no operating torque is produced on the two discs, but with unbalanced conditions or an open phase the balance on the disc is upset and one or two sets of contacts close.

Each electromagnet has a main coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil located on one of the outer legs of the "E" structure causes the flux through that leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap will cause disc rotation. A resistor located to the rear of each main unit is used as an aid in balancing the opposing torques by controlling the current flow through the shading coils.

For some CM relays, the front electromagnet may have adjustable plugs which are used to aid in calibration.

All possible contingencies which may arise during installation, operation or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding this particular installation, operation or maintenance of this equipment, the local ABB Power T&D Company Inc. representative should be contacted.

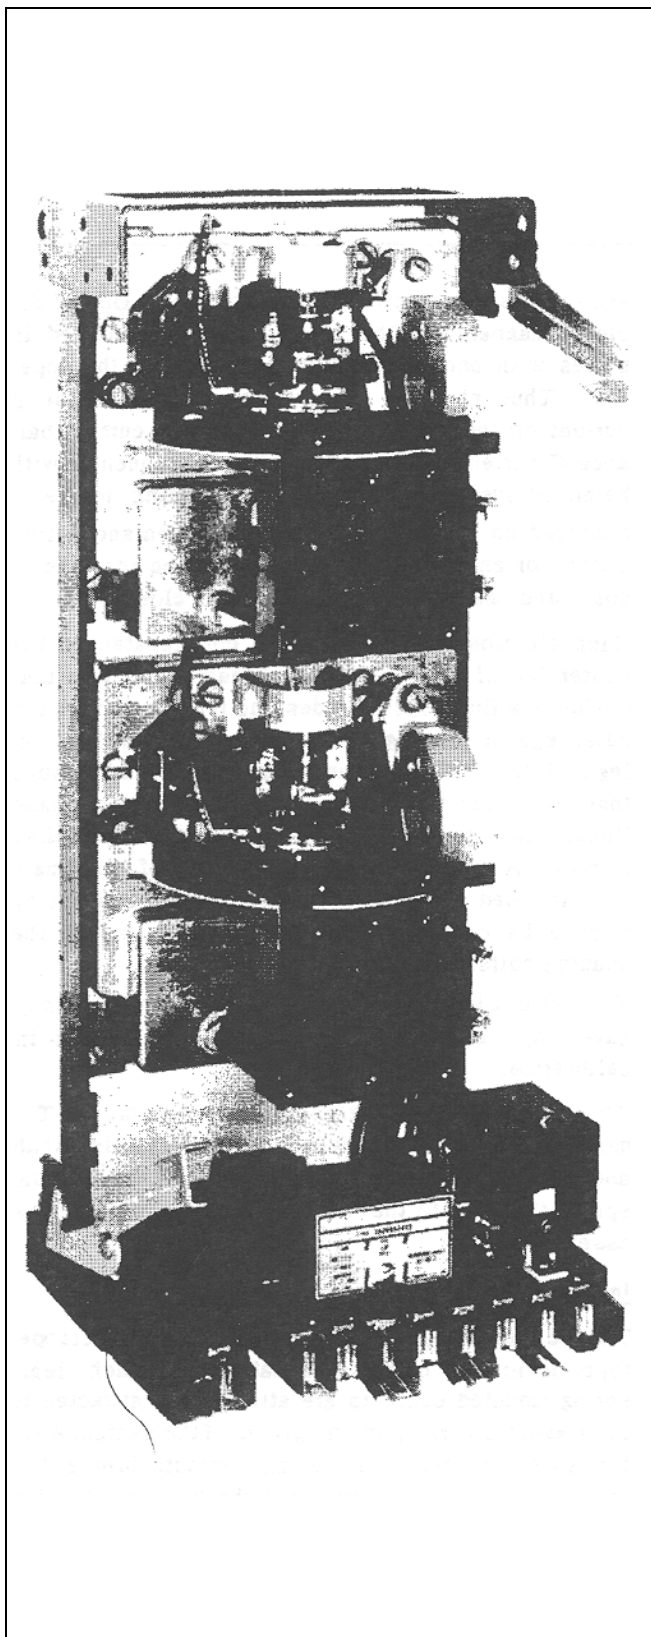


Figure 1a. Non-Tapped Type CM Relay without case
(Front View)

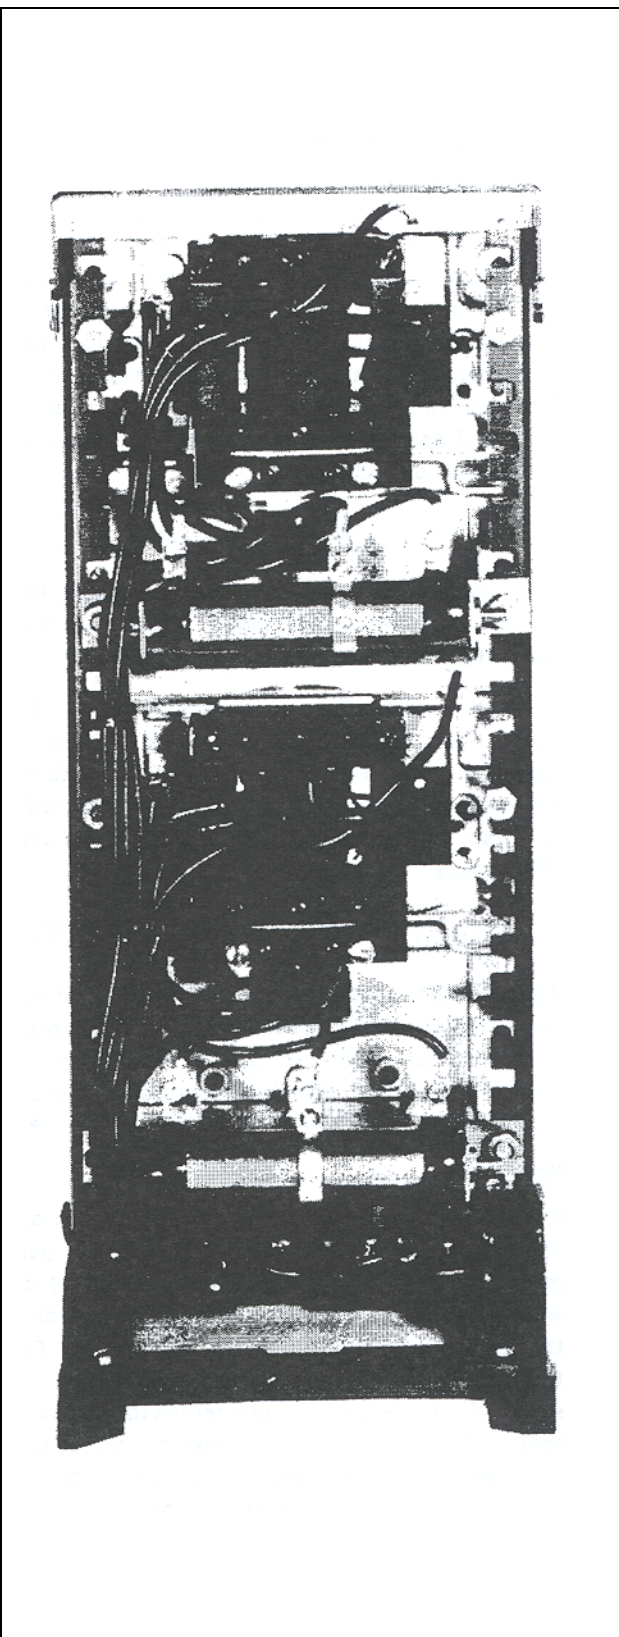


Figure 1b. Non-Tapped Type CM Relay without case
(Rear View)

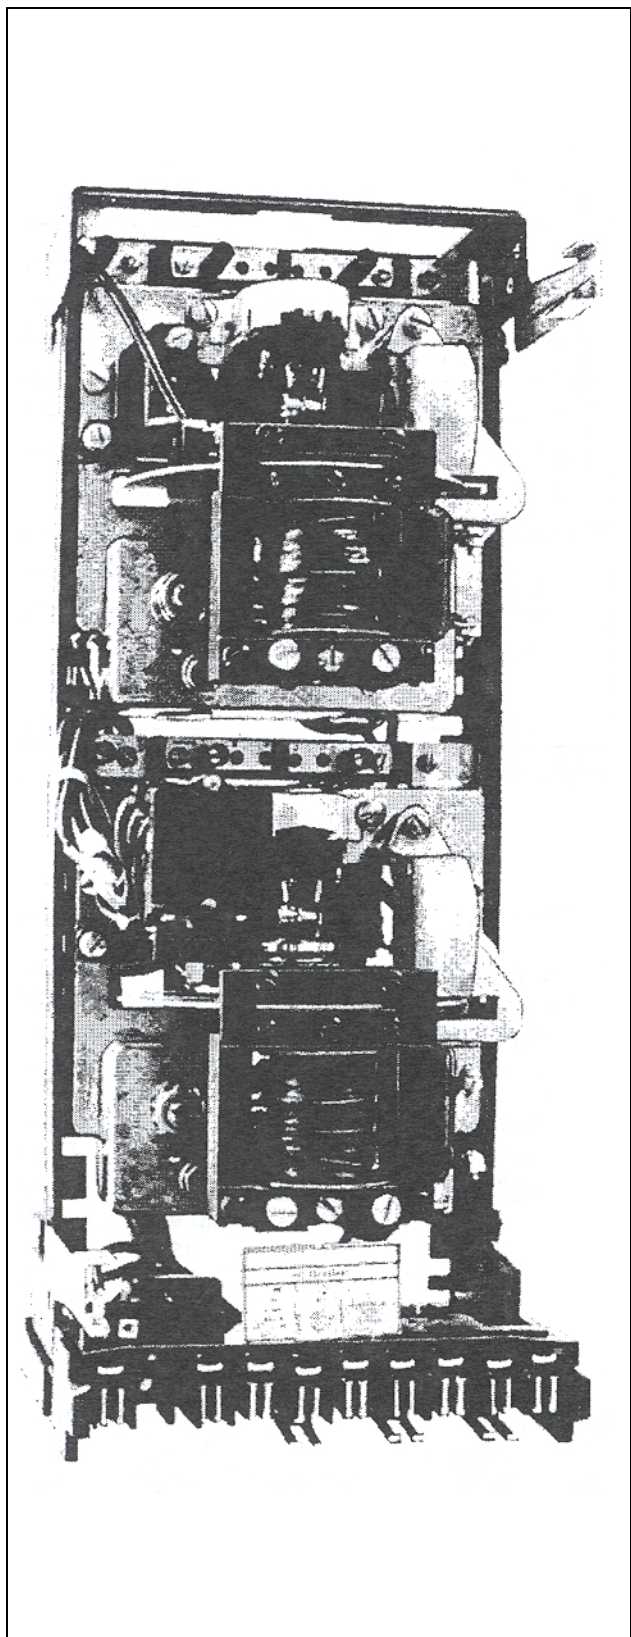


Figure 2a. Type CM Tapped Relay without case
(Front View)

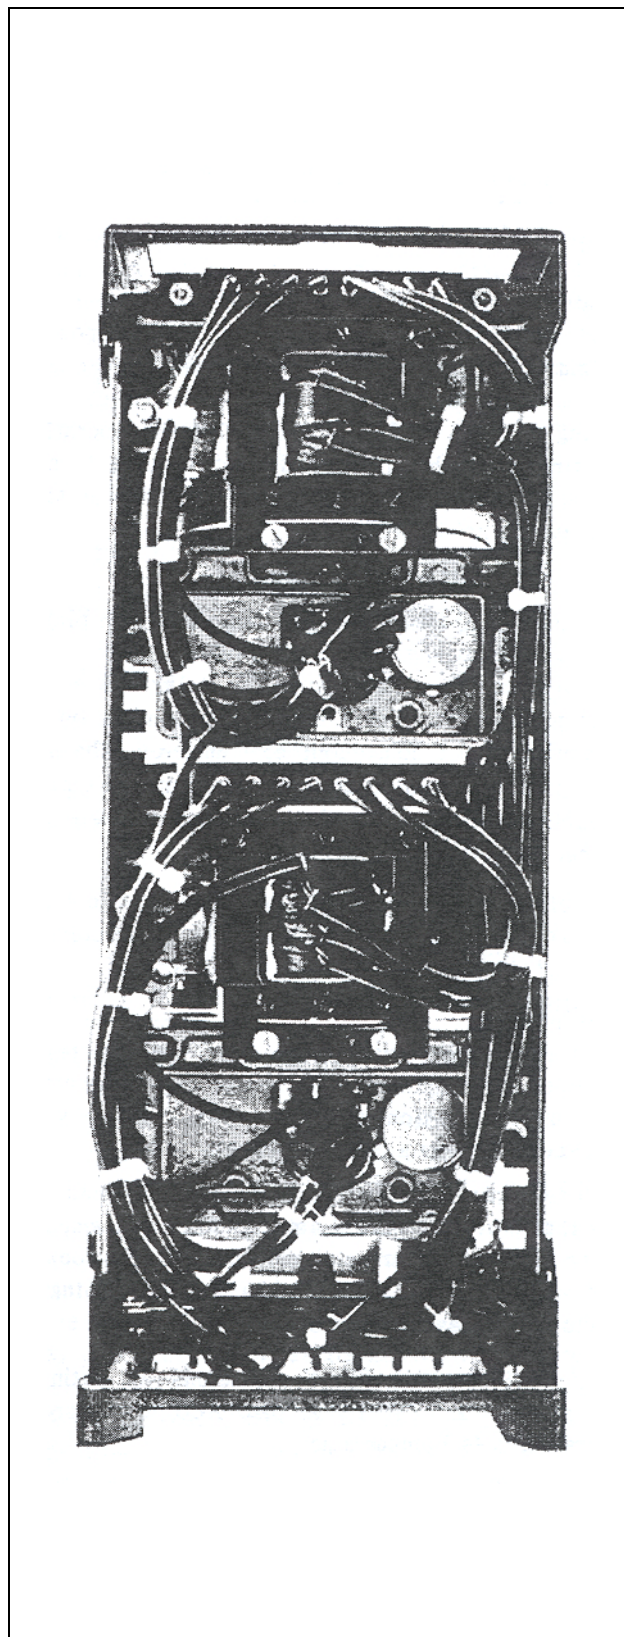


Figure 2b. Type CM Tapped Relay without case
(Rear View)

The contacts are single-pole, double throw. The moving contact is fastened directly to the disc shaft and the electrical connection is made thru a spiral spring fastened to the moving contact arm and frame assembly.

2.2. INDICATING CONTACTOR SWITCH (ICS)

The dc indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energizing of the switch. When the switch closes, the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, allowing the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

2.3. AC INDICATING CONTACTOR SWITCH (ASC)

The ac indicating contactor switch unit is a small ac operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

3.0 CHARACTERISTICS

The non-tapped type CM relay has a minimum pickup current of one ampere and a continuous thermal rating of seven amperes. The tapped CM relay has a minimum pickup of 1, 2 or 3 amperes, depending on the tap setting and a continuous of 7 amperes. The minimum pickup current is defined as the pickup current of each electromagnet with the other paired electromagnet de-energized.

The relay may be utilized for continuous load currents of from one to seven amperes. The characteristic curve of the relay is shown in figure 3.

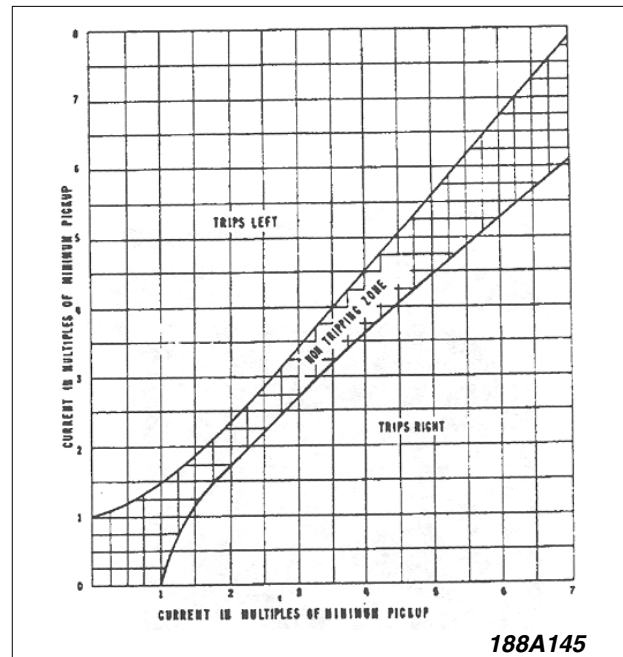


Figure 3. Typical Operating Curve of the Type CM Relay

3.1. TRIP CIRCUIT

The main contacts will safely close 30 amperes at 250 volts dc and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The indicating contactor switch (ICS) has two taps that provide a pickup setting on 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

For 0.5 ampere ACS, the 1 second coil rating is 18.0 amperes ac. For 1.0 ampere ACS, the 1 second coil rating is 44.0 amperes ac.

3.2. TRIP CIRCUIT CONSTANTS

Contactor Switch –

ICS

0.2 ampere tap - 6.5 ohms dc resistance

2.0 ampere tap - 0.15 ohms dc resistance

ACS

0.5 ampere ACS - 18 ohms ac impedance

1.0 ampere ACS - 4.5 ohms ac impedance

4.0 ENERGY REQUIREMENTS

The burden of each electromagnet is as follows:

This represents the burden on the current transformer connected to terminals 4 and 5 or 8 and 9. The burden on the current transformer connected to terminals 6 and 7 is twice the stated values.

Non-Tapped Relay			Volt Ampere	Power Factor Angle
Current Amperes	Frequency			
1	60		0.95	74
5	60		15.00	73
1	50		0.85	72
5	50		14.5	71
1	25		0.46	55
5	25		8.00	54
Tapped Relay			Volt Ampere	Power Factor Angle
Tap	Current Amperes	Frequency		
1	1	60	0.95	74
1	5	60	15.00	73
2	2	60	0.95	65
2	5	60	5.8	65
3	3	60	1.05	54
3	5	60	2.8	54

5.0 SETTINGS

5.1. MAIN UNITS

No setting is required on the non-tapped relay because it is calibrated for one ampere sensitivity and is set to operate on an unbalance as shown in the operating curve of figure 3. For the tapped relay, select the minimum tap that is compatible with the current transformer error expected during motor starting. All taps should be set identically. On the 2 and 3 ampere tap, the relay contact should make within $\pm 5\%$ of tap value with no current in the other unit on the same disc.

5.2. INDICATING CONTACTOR SWITCH (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw.

5.3. AC INDICATING CONTACTOR SWITCH (ACS)

No setting is required on the ACS unit with the core screw locked in its “all in” position. The unit should operate and drop its target at a value not greater than its rated operating current.

6.0 INSTALLATION

the relays should be mounted on switchboard panels or their equivalent in a location free from dirt, moisture, excessive vibration and heat. Mount the relay vertically by means of the rear mounting stud or studs for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. External toothed washers are provided for use in the locations shown on the outline and drilling plan to facilitate making a good electrical connection between the relay case, its mounting screws or studs, and the relay panel. Ground wires are affixed to the mounting screws or studs as required for poorly grounded or insulating panels. Other electrical connections may be made directly to the terminals by means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For more detailed information on the FT case refer to Instruction Leaflet 41-076.

7.0 ADJUSTMENTS & MAINTENANCE


The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under “SETTINGS” should be required.

7.1. ACCEPTANCE CHECK

The following check is recommended to insure that the relay is in proper working order.

7.1.1. Main Units

For all electrical checks refer to test diagram figure 4 for tapped CM, put tap screw in one amp setting.

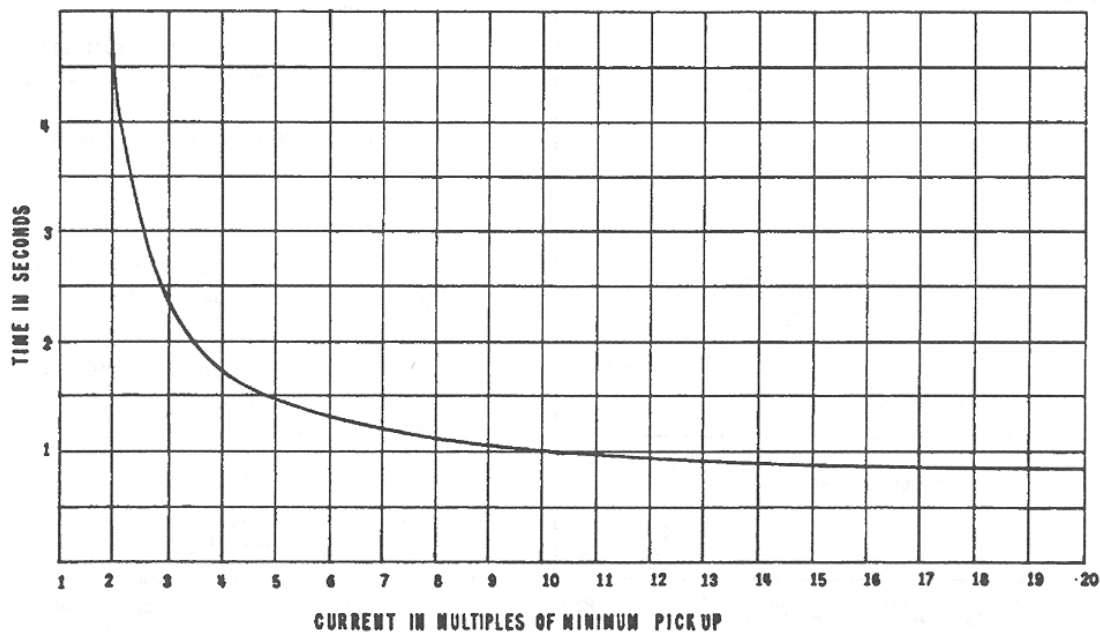

Sub 2
188A146

Figure 4. Typical Time Curve with Zero Restraint of the Type CM Relay

1. Contacts

Stationary contacts assembly should be aligned with respective marks located on scale plate, prior to checking the relay. These marks indicate approximately 1 ampere of unbalance.

2. Minimum Trip Current

NOTE: The front electromagnet energized alone will produce a disc rotation to the left while a rear electromagnet energized alone will produce a disc rotation to the right.

Minimum trip can be checked by energizing either the front or rear electromagnets alone and noting that the moving contact makes with its respective stationary contact at one ampere.

3. Balance Check

Apply one ampere through the front and rear electromagnets simultaneously. The moving contact should remain substantially midway between the stationary contacts. A similar check should be made utilizing six amperes.

4. Time Curve

Contact travel is from balanced position to either the right or left stationary contacts.

Electromagnets are to be energized alone (zero restraint). Apply ten amperes and note that contacts make at one second $\pm 10\%$. Time curve characteristic per figure 5.

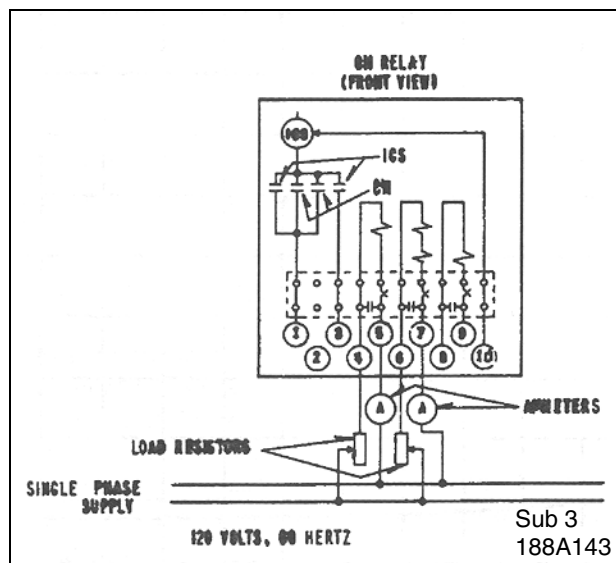


Figure 5. Diagram of test connection for the non-tapped Type CM Relay in the FT-31 Case. For tapped CM place tap screw in 1 amp. tap setting.

7.1.2.1. Indicating Contactor switch (ICS)

Close the main relay contacts and pass sufficient dc

current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the stationary contacts. The bridging moving contact should touch the stationary contacts simultaneously.

7.1.3.2. AC Indicating Contactor Switch (ACS)

Close the main relay contacts and pass sufficient ac current through the trip circuit to close the contacts of the ACS. This value of current should be not greater than the particular ACS rated operating current being used. The operation indicator target should drop freely.

The contact gap should be approximately 3/32" between the bridging contact and the adjustable stationary contacts. The bridging moving should touch both stationary contacts simultaneously.

7.2. ROUTINE MAINTENANCE

All relays should be inspected periodically and the time of operation should be checked at least once every year or at such other time intervals as may be dictated by experience to be suitable to the particular application. Phantom loads should not be used in testing induction-type relays because of the resulting distorted current wave form which produces an error in timing.

All contacts should be periodically cleaned. A contact burnisher style #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

8.0 CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check").

8.1. MAIN UNITS

For all electrical checks refer to test diagram figure 5. For tapped CM, put tap screw in one amp tap setting.

1. Balance Setting

- a) Mechanical balance - adjust spiral spring until moving contact is located substantially in the center of the scale plate.
- b) Electrical Balance
 1. Apply two amperes on front and rear electromagnets and adjust resistor at rear of specific unit being tested such that the moving contact is in balance, i.e., moving contact is aligned per part "a" above.
 2. Apply twenty amperes on front and rear electromagnets for approximately two seconds and note that the moving contact does not deviate from the balanced condition more than approximately 1/4 inch.

For CM relays with adjustable magnetic plugs, only the right-hand plug may be adjusted. At the factory, the right-hand plug is adjusted to help obtain a balanced condition of the contact at 20 amperes. The moving contact is again checked at 2 amperes. Little adjustment, if any, is expected to be necessary in the field.

2. Minimum Trip Setting

The front electromagnet energized alone should produce a disc rotation to the left while the rear electromagnet energized alone should produce a disc rotation to the right.

- a) Apply one ampere to front electromagnet and adjust left stationary contact until it just makes with the moving contact. This setting should correspond with the marking on scale plate.
- b) Apply one ampere to rear electromagnet and adjust right stationary contact until it just makes with the moving contact. This setting should correspond with marking on scale plate.

3. Operating Curve

Apply six amperes to front electromagnet and vary current flowing through rear electromagnet.

- a) The moving contact should make with the

right stationary contact between 6.5 and 7.1 amperes.

- b) The moving contact should make with the left stationary contact between 5.5 and 5.0 amperes.

4. Time Curve

NOTE: Contact travel is from balanced position to either the right or left stationary contacts.

- a) Apply 10 amperes to rear electromagnet (front electromagnet de-energized) and adjust permanent magnet for an operating time to right contact of 1.0 ± 0.10 seconds.

8.2. INDICATING CONTACTOR SWITCH (ICS)

Close the main relay contacts and pass sufficient dc current through the trip circuit to close the contacts of the ICS. This value of current should not be greater


than the particular ICS tap setting being used. The operation indicator target should drop freely.

8.3. AC INDICATING CONTACTOR SWITCH (ACS)

Close the main relay contacts and pass sufficient ac current through the trip circuit to close the contacts of the ACS. This value of current should not be greater than the particular ACS rated operating current being used. The operation indicator target should drop freely.


9.0 RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give the complete nameplate data.

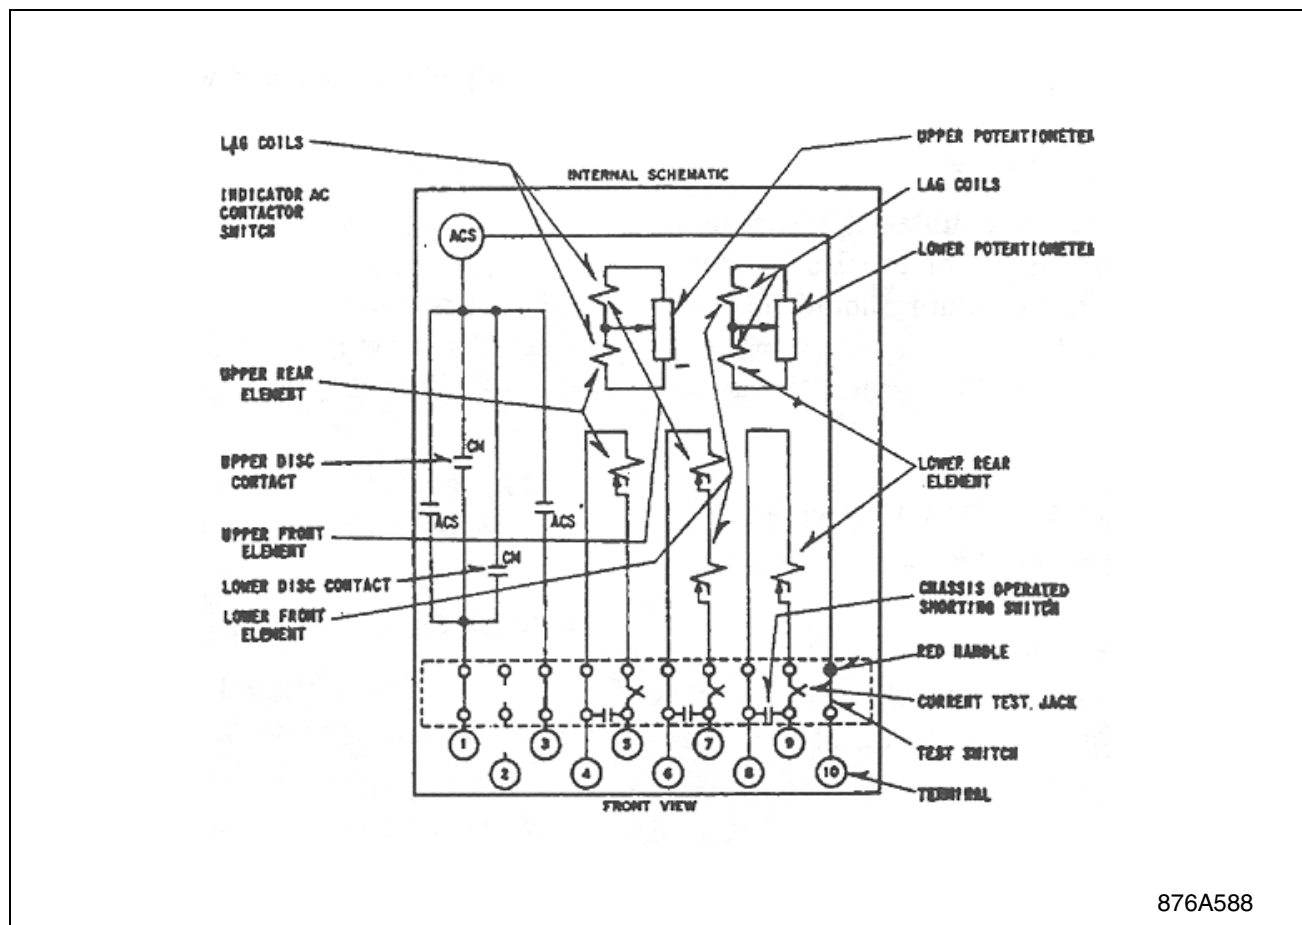


876A588

Figure 6. Relay Type CM Phase Balance Current With Taps And Acs Unit In Type FT-31 Case.

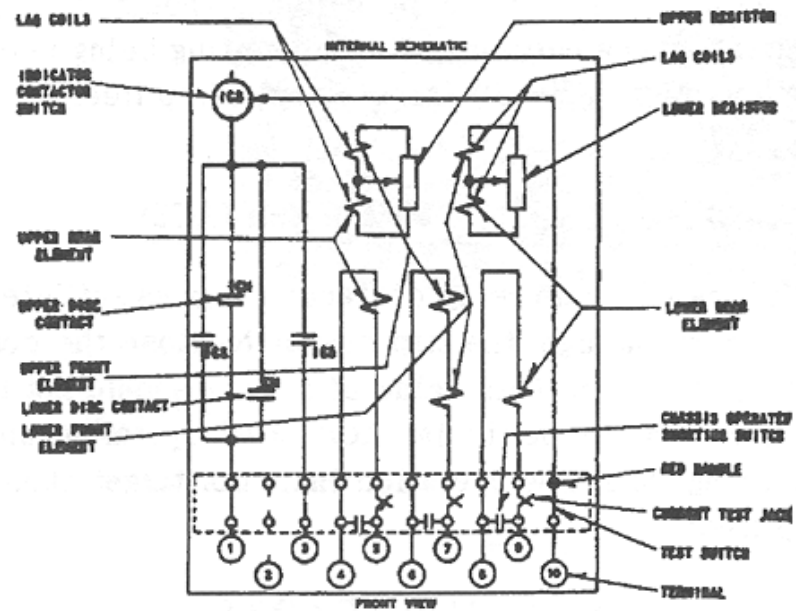

187A232

Figure 7. Internal Schematic of the Non-Tapped Type CM Relay in the Type FT-31 Case

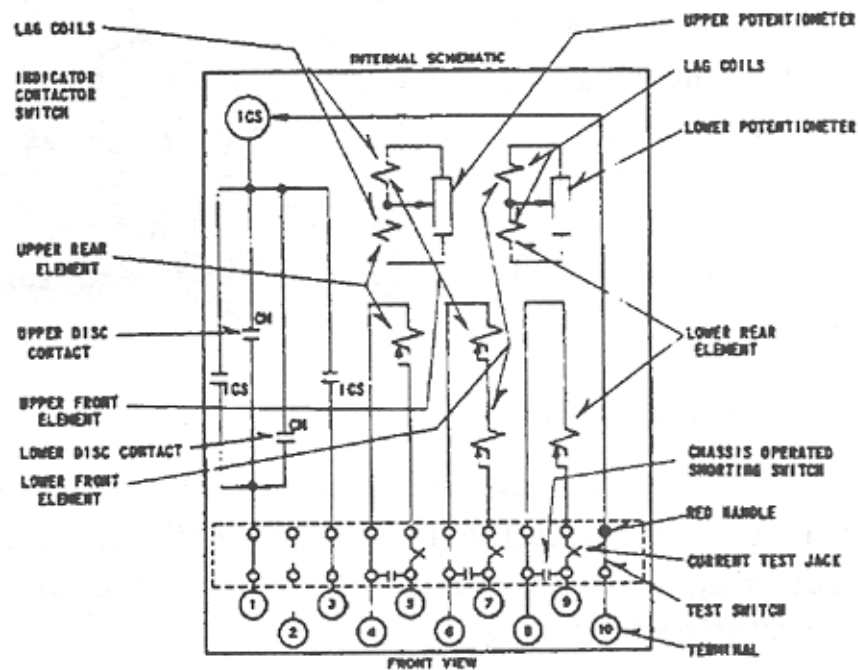

762A812

Figure 8. Internal Schematic of the Tapped Type CM Relay in the Type FT-31 Case

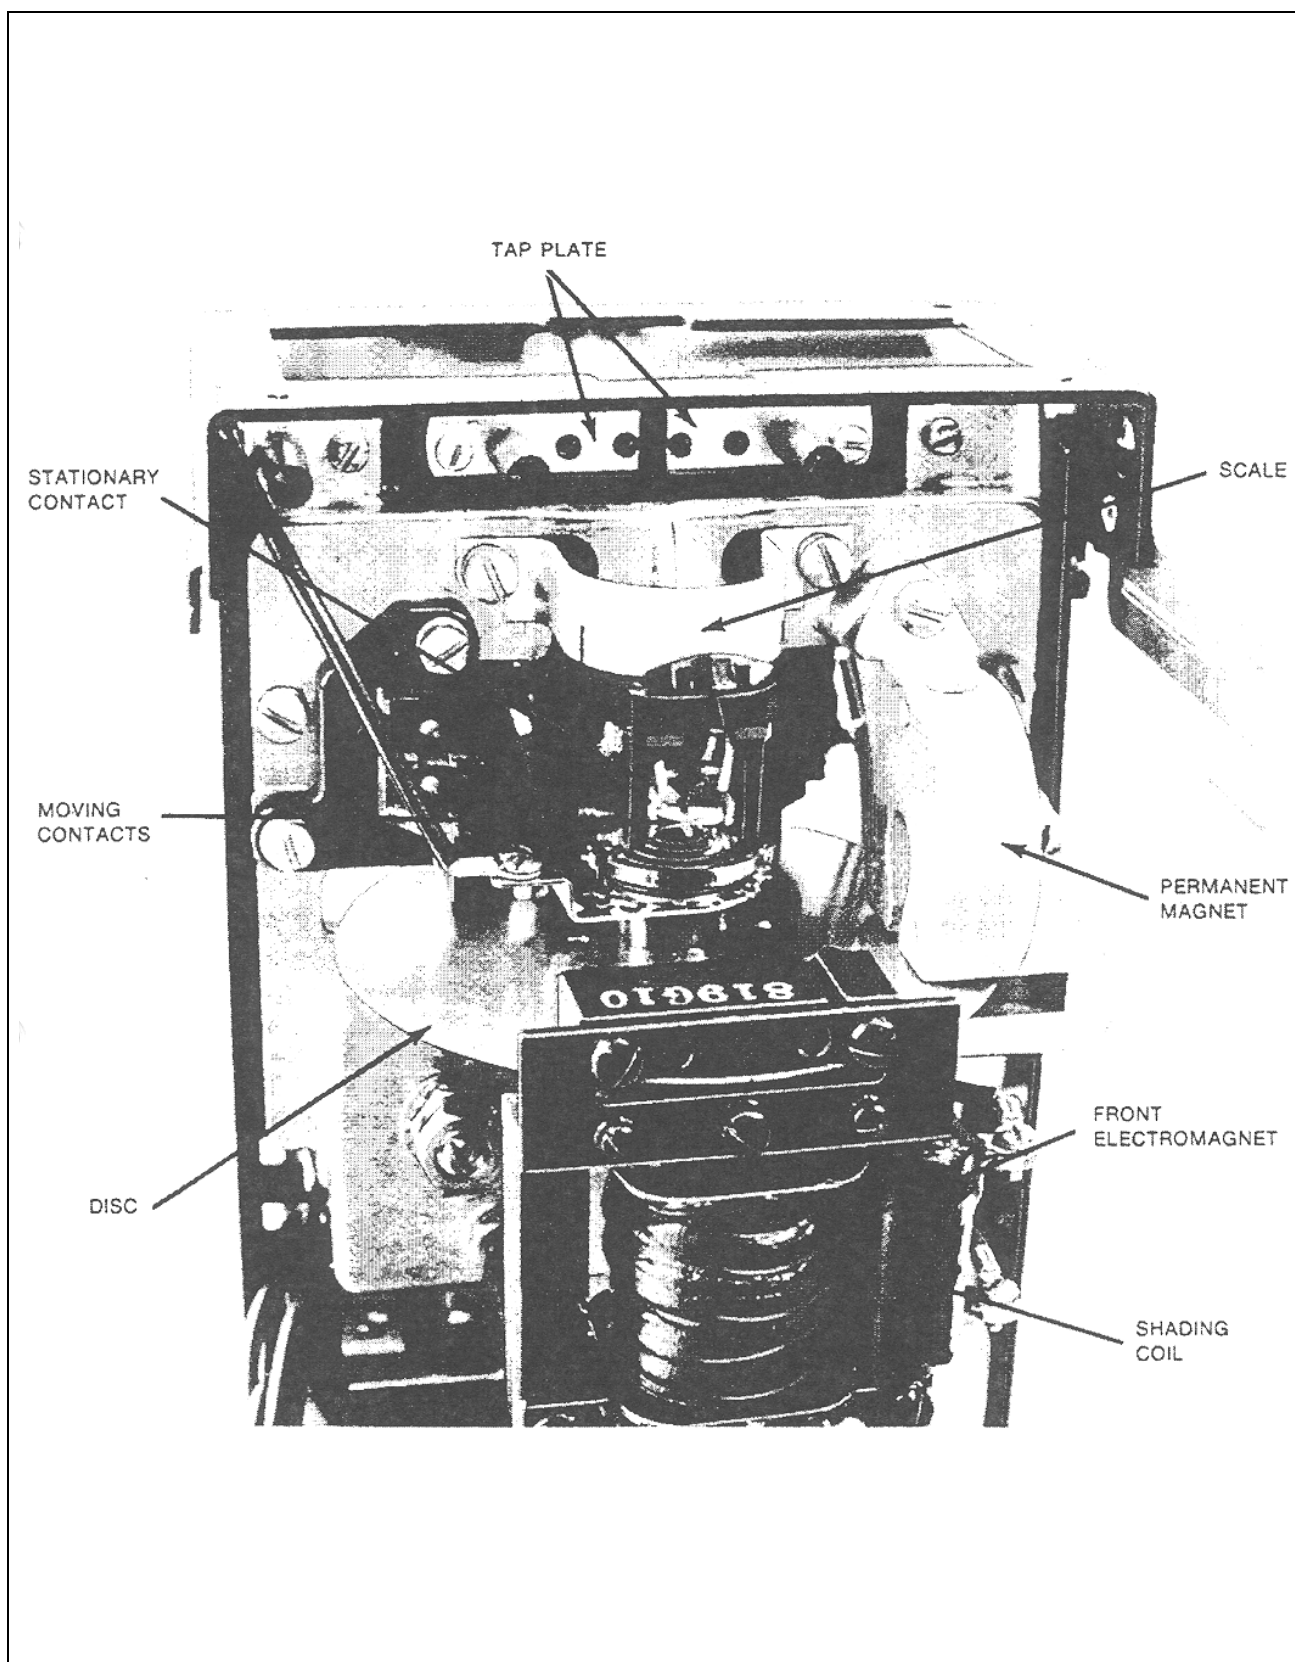


Figure 9. Element Assembly for CM Relay (Front View)


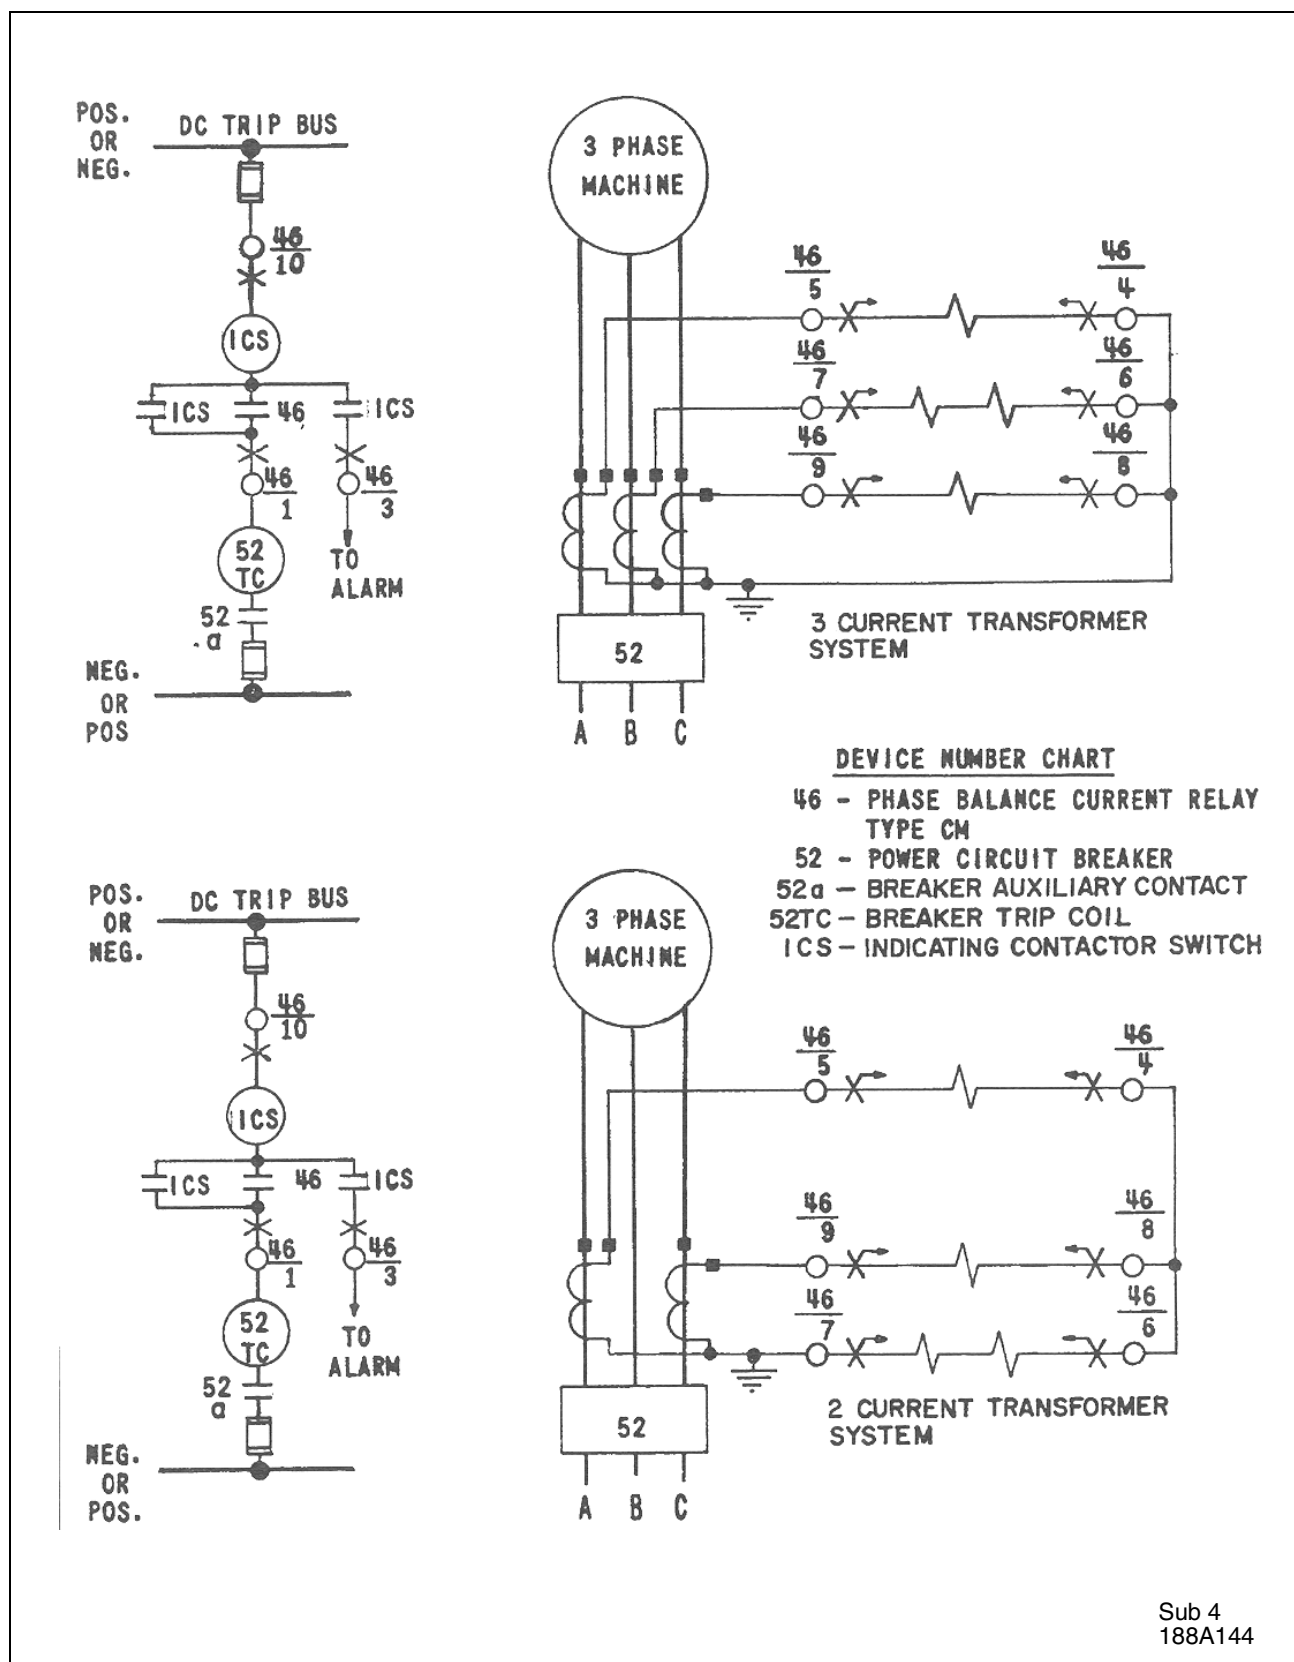


Figure 10. External Schematic Diagram of the Type CM Relay in the Type FT-31 Case

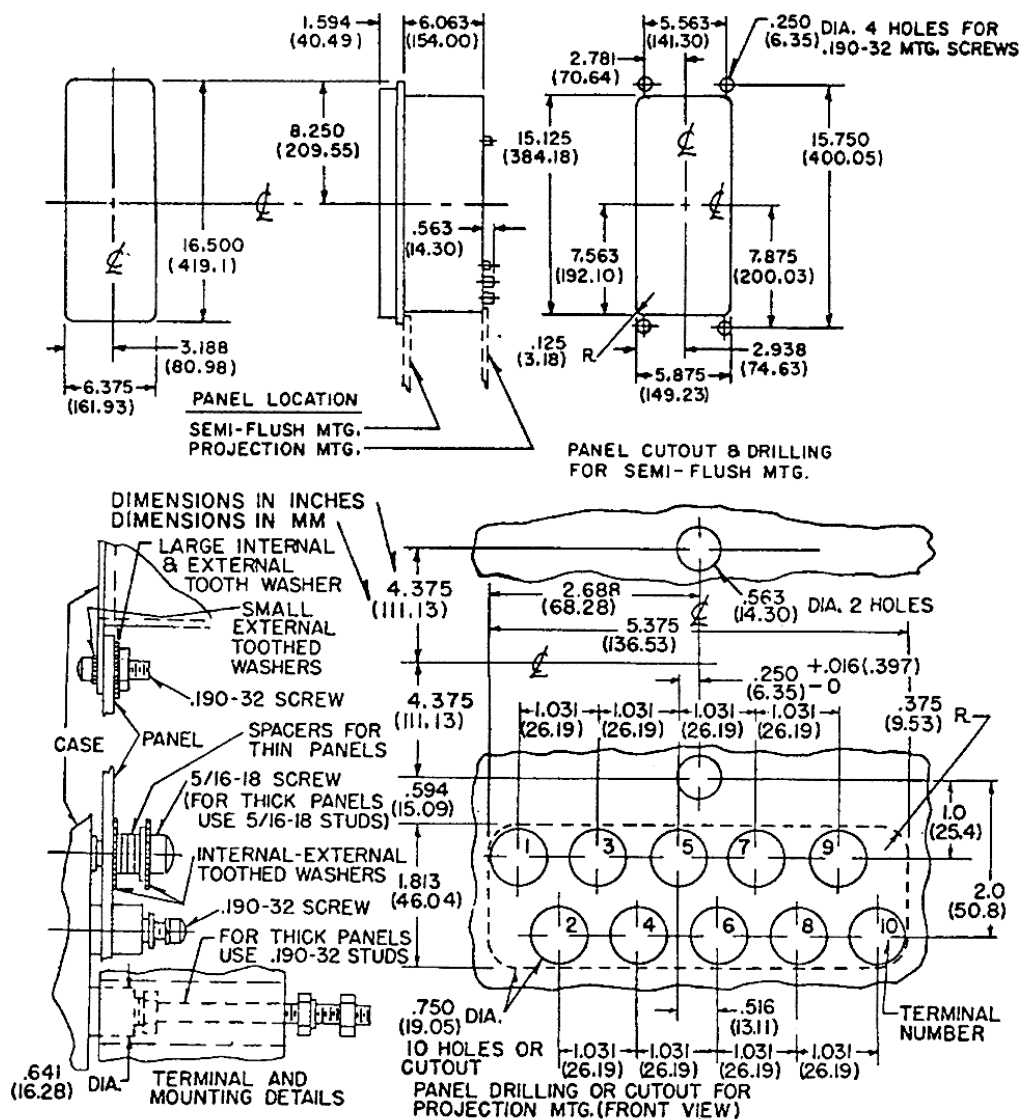

57S902

Figure 11. External Schematic Diagram of the Type CM Relay in the Type FT-31 Case



ABB Automation Inc.
4300 Coral Ridge Drive
Coral Springs Florida 33065
TEL: 954-752-6700
FAX: 954-345-5329