


Bit00 ON/OFF1
 Bit01 OFF2: Electrical stop
 Bit02 OFF3: Fast stop
 Bit03 Pulse enable
 Bit04 RFG enable
 Bit05 RFG start
 Bit06 Setpoint enable
 Bit07 Fault acknowledge
 Bit08 JOG right
 Bit09 JOG left
 Bit10 Control from PLC
 Bit11 Reverse (setpoint inversion)
 Bit12 -
 Bit13 -
 Bit14 -
 Bit15 CDS Bit 0 (Local/Remote)

Bit04 Drive data set (DDS) Bit 0
 Bit05 Drive data set (DDS) Bit 1
 Bit11 Enable droop
 Bit12 Torque control
 Bit13 External fault 1
 Bit15 Command data set (CDS) Bit 1

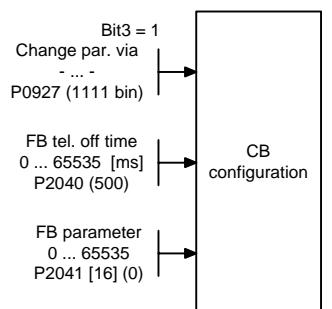

Note:

Bit 10 must be set in the first PZD word of the telegram received via Fieldbus so that the converter will accept the process data as being valid. For this reason, the control word 1 must be transferred to the converter in the first PZD word.

1	2	3	4	5	6	7	8
External Interfaces					2700_Fieldbus.vsd	Function diagram	- 2700 -
Fieldbus, Receiving					02.04.2007 V3.0	ET 200pro FC	